


PARTS LIST

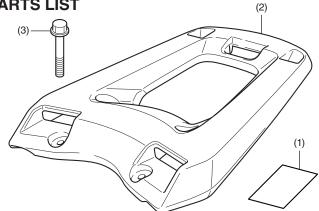

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Carrier base	1
(3)	Bolt flange 8 x 40 mm	4

TOOLS REQUIRED

Socket (12 mm)

Ratchet

Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N∙m	kgf∙m	lbf·ft
8 mm flange bolt	27	2.8	20


MAXIMUM LOADING CAPACITY

• The weight of the cargo must not exceed the following maximum loading capacity:

Maximum Loading Capacity				
Top box		3.0 kg (6.6 lb)		


INSTALLATION

1. Open the seat as shown.

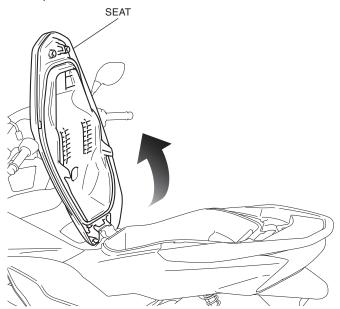



2. Remove the grab rail cover lid as shown.

('13-'18 PCX150)

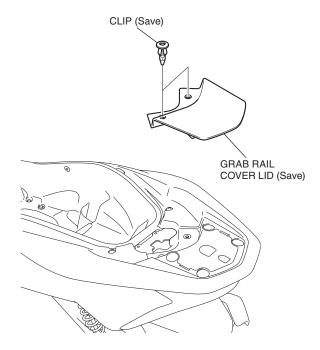


(After '18 PCX150)

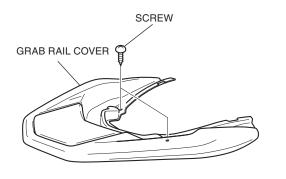


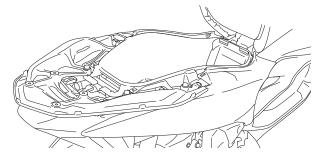

3. Install the carrier base as shown.

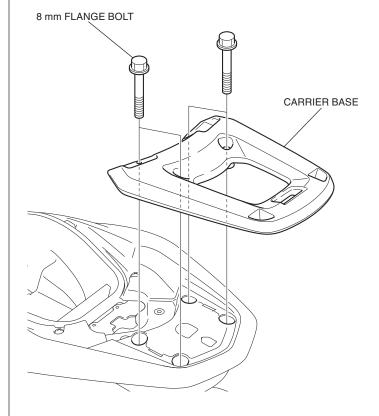

Install the carrier base as shown.

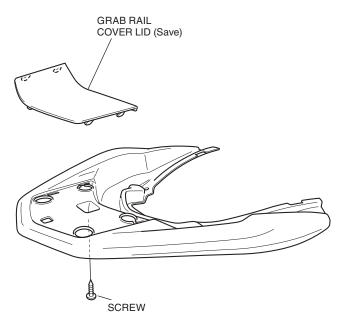

4. Refer to the Genuine Accessory User's Guide that is packaged with the rear trunk, and install the rear trunk according to the instruction.