




# INSTALLATION INSTRUCTION

Accessory	Application	Publication No.
ACCESSORY SOCKET P/N 08U70-MJP-G50	CRF1000L/LD	MII 15641
		Issue Date
		March 2016

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

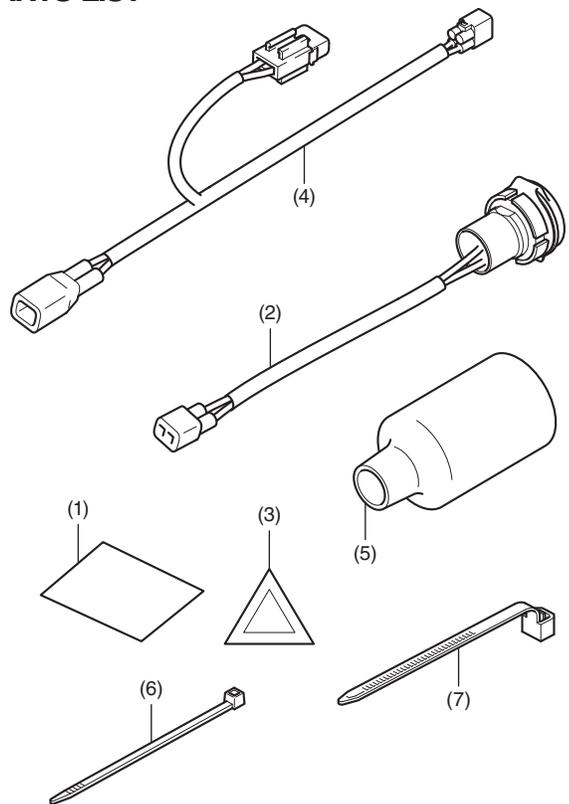

No.	Description	Qty
(1)	Installation instruction URL	1
(2)	Socket assembly	1
(3)	Caution label	1
(4)	Sub-harness	1
(5)	Connector cover	1
(6)	Wire tie (narrow)	1
(7)	Wire tie (wide)	1

## SUPPLIES REQUIRED

- Side cutters
- Electrical tape
- Isopropyl alcohol
- Shop towel

## TORQUE CHART

Refer to the Service Manual for the torque values of the removed parts.

## INSTALLATION


### ▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

### NOTE:


- Disconnect the negative (-) cable from the battery before installing this accessory.
- The clock memory will be erased when you disconnect the battery. Reset the memories after reconnecting the battery.
- Trim the excess ends off the wire ties after attaching them to the wire harnesses. Do not allow the cut part of the wire tie to interfere with another harness or brake hose.
- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.

- Remove the main seat as shown.

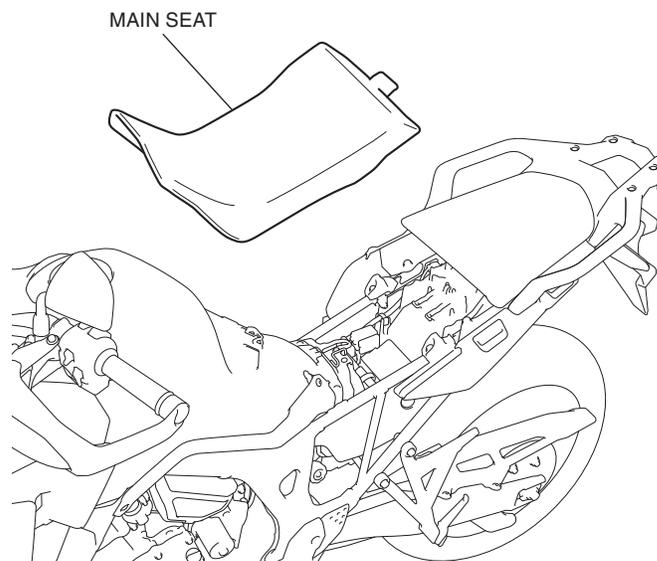


2. Remove the tool box, open the battery box and disconnect the negative (-) terminal of the battery.

<Left side>

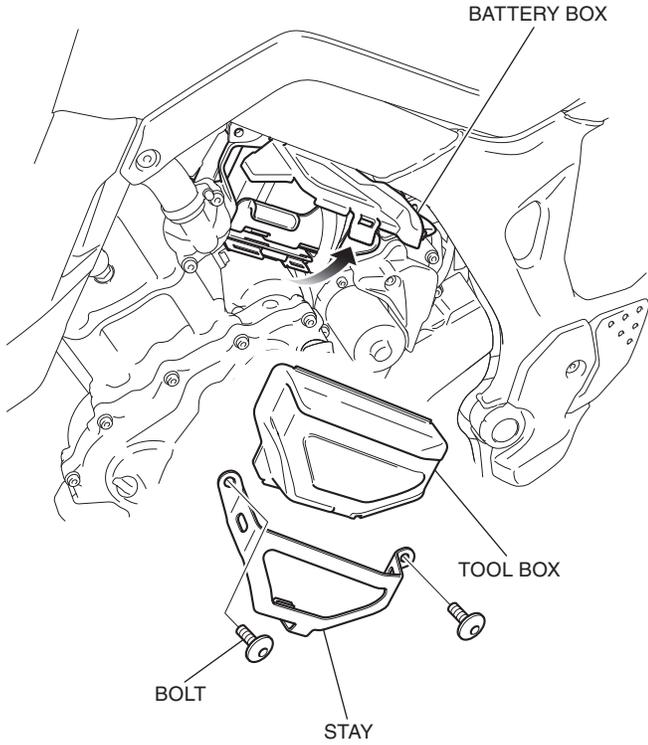


3. Remove the screws and clips as shown.

<Left side>

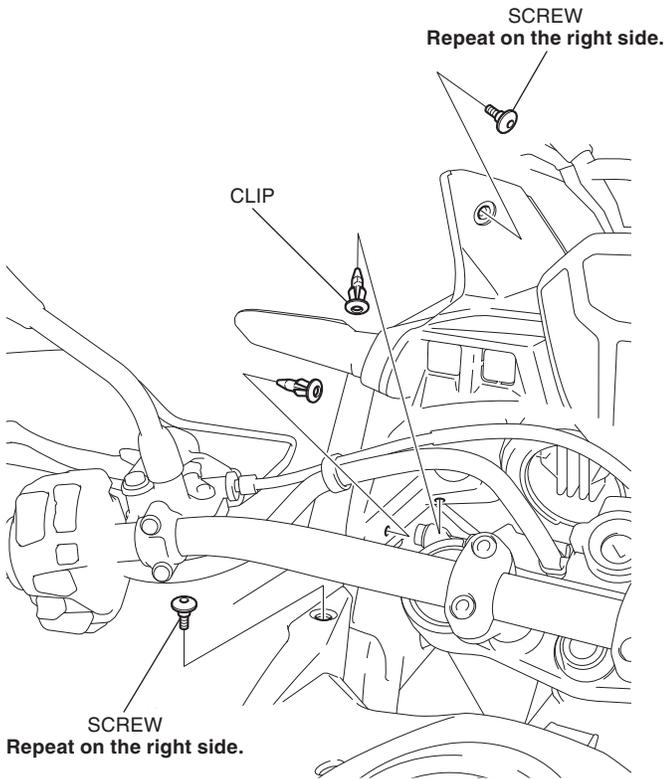


4. Remove the left fuel tank side cover as shown.


<Left side>

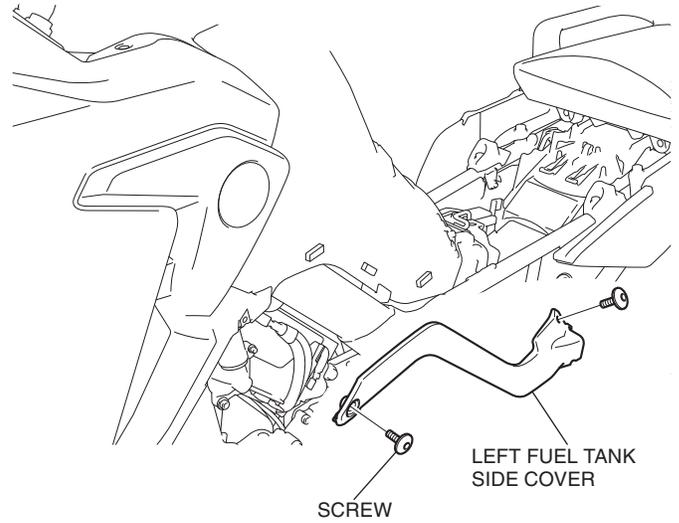

5. Remove the windscreen as shown.

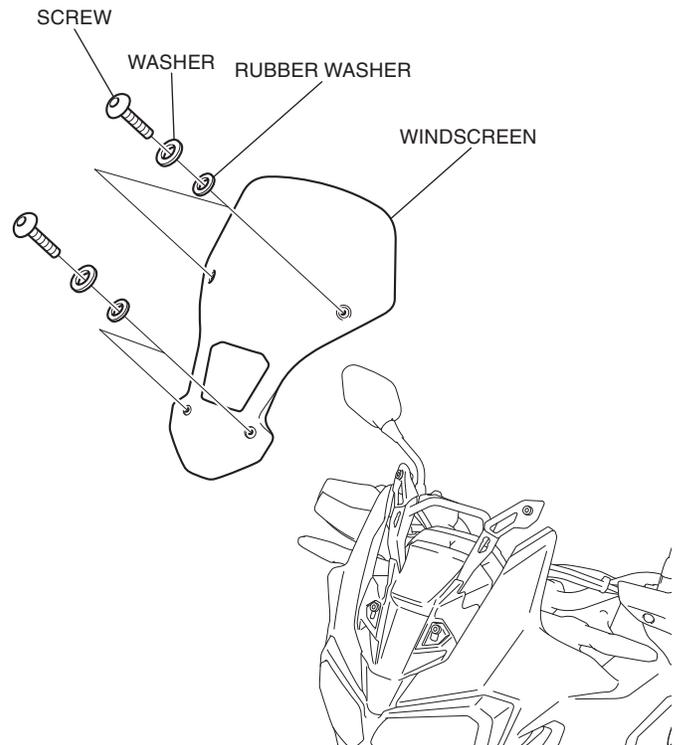


6. Remove the front spoiler as shown.

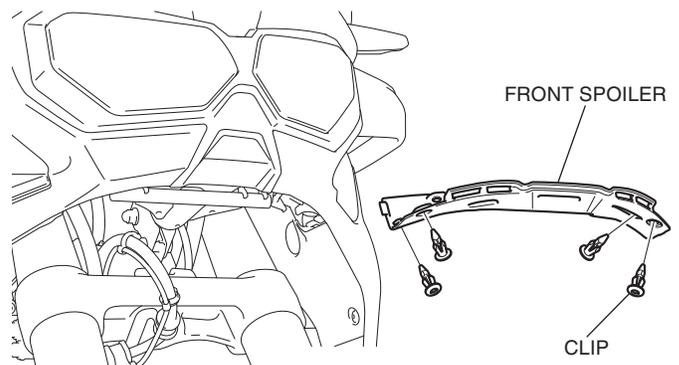


7. Remove the clips as shown.  
• Repeat on the right side.

<Left side>

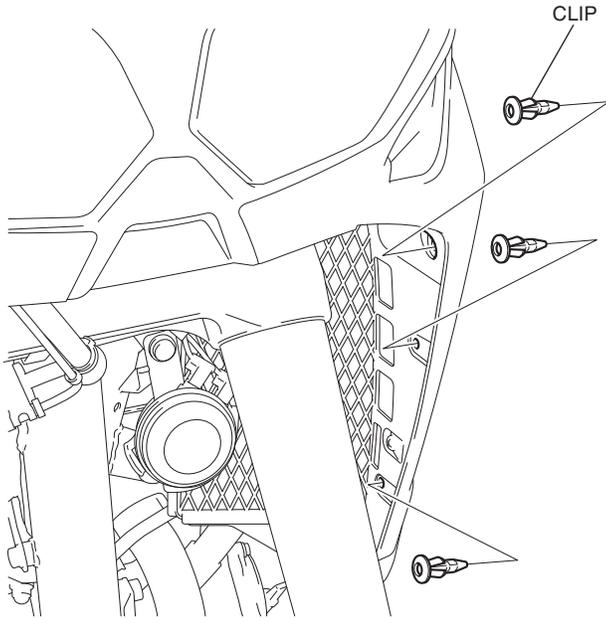


8. Remove the left middle cowl as shown.

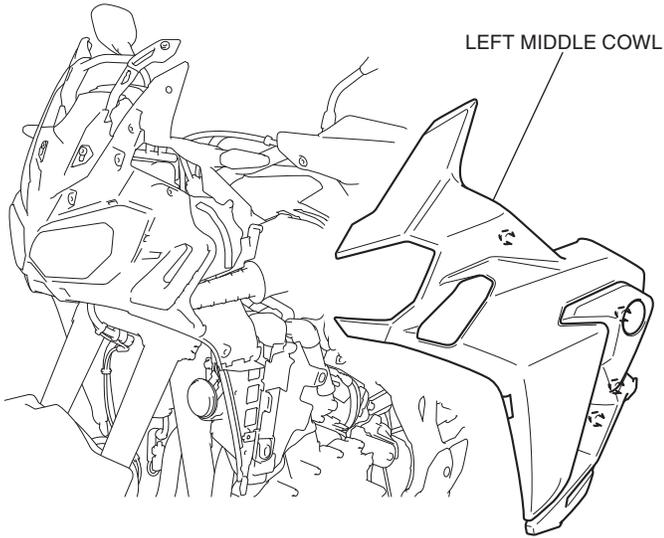


9. Remove the right fuel tank side cover and right middle cowl in the same manner.


10. Remove the clip as shown.  
• Repeat on the right side.

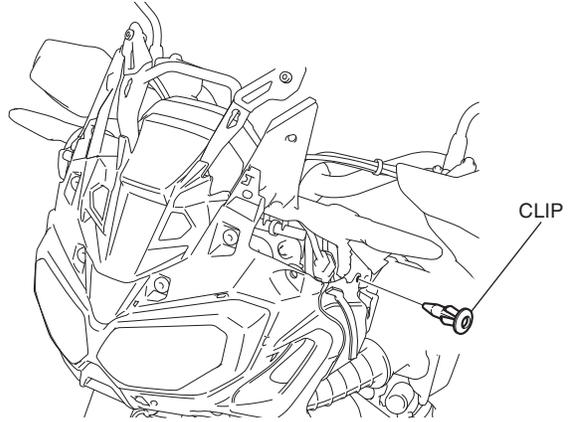


11. Remove the front cover as shown.

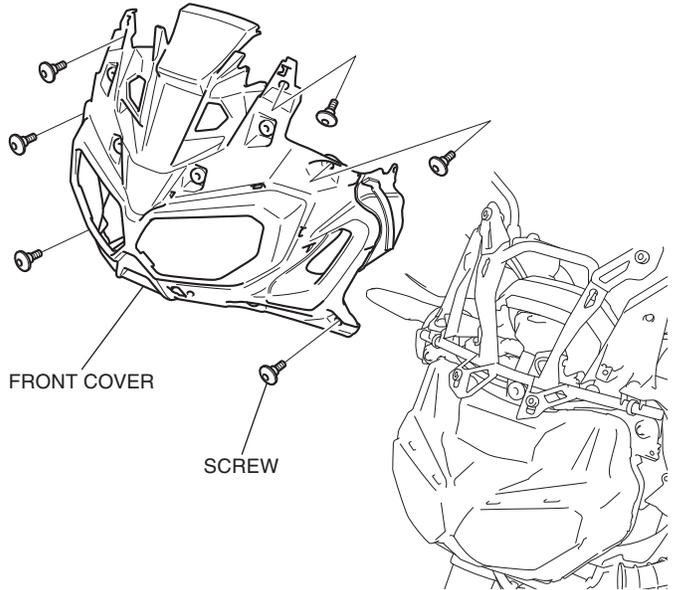


12. Remove the left inner panel cover as shown.

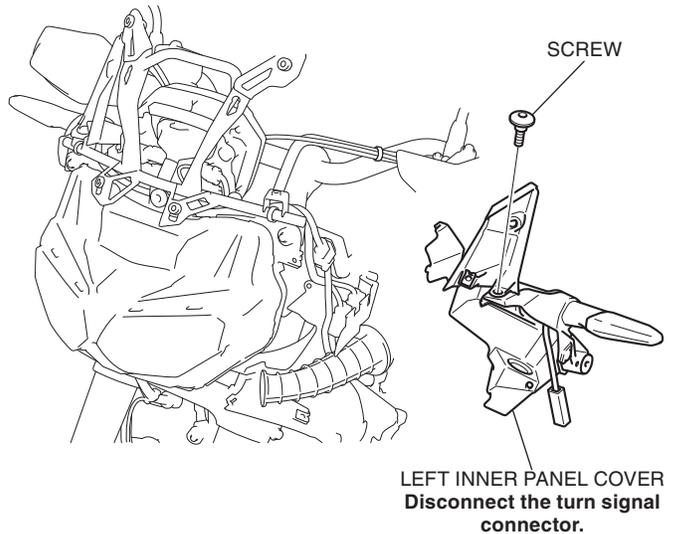


13. Remove the grommet as shown.

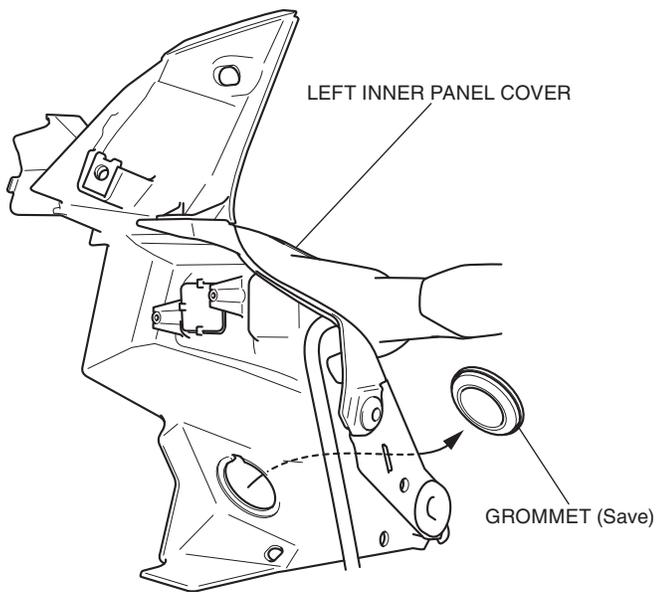


14. Remove the nut as shown.

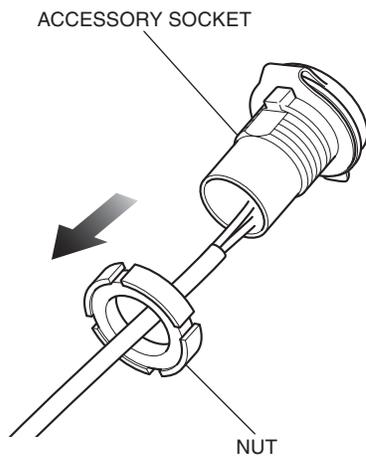


15. Install the accessory socket as shown.

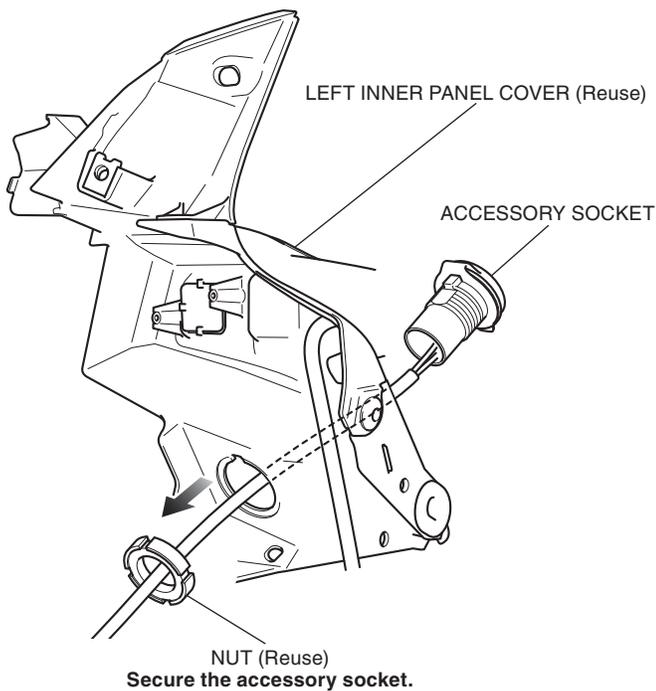


16. Route the accessory socket harness as shown, and install the left inner panel cover in the reverse order of removal.

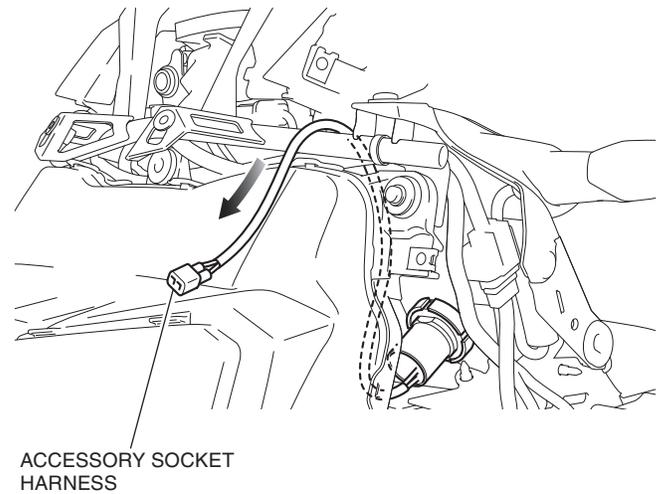


17. Wind the electrical tape around the sub-harness as shown.

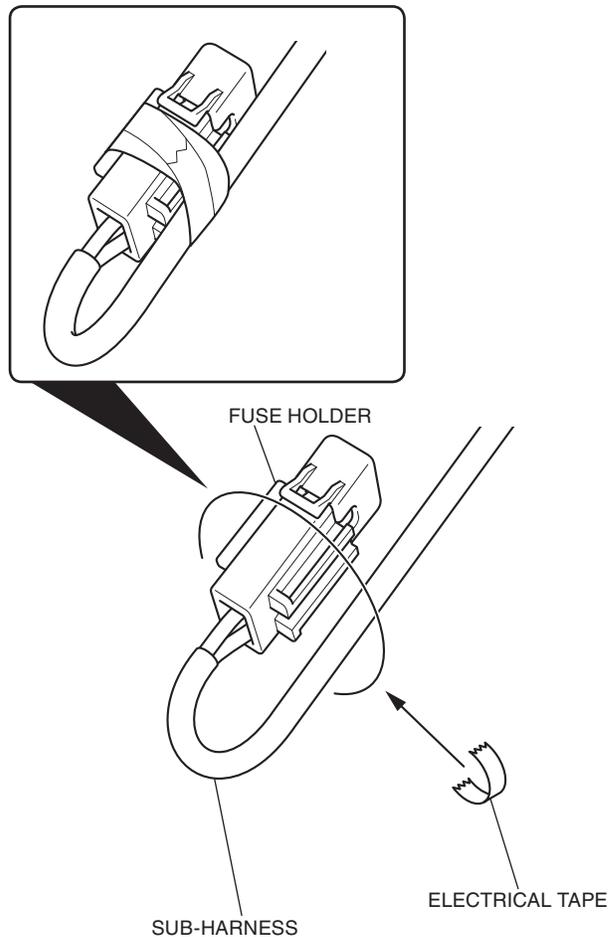

18. Pass the sub-harness through the connector cover.

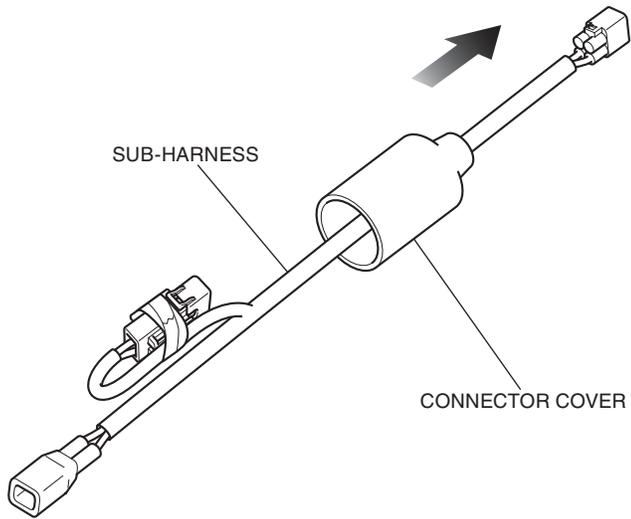


19. Remove the meter connector as shown.

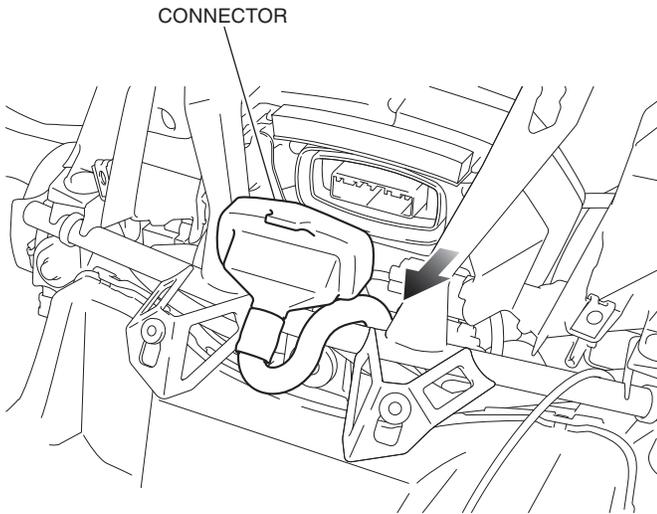


20. Remove the connector as shown.


- Remove the 2-pin waterproof connector for CRF1000L or the 4-pin waterproof connector for CRF1000LD.

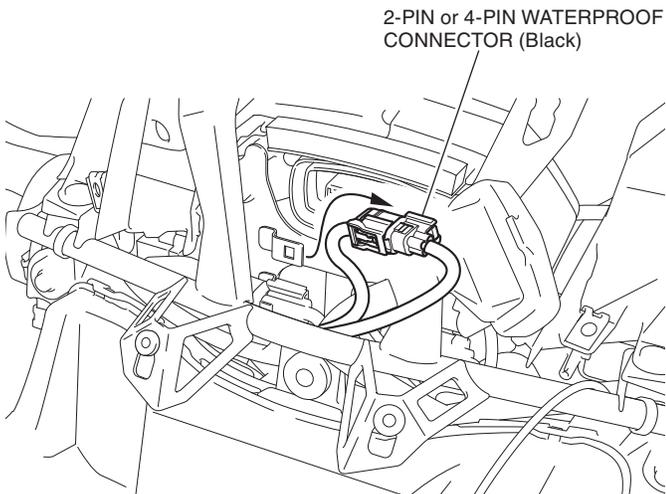


21. Remove the connector as shown.

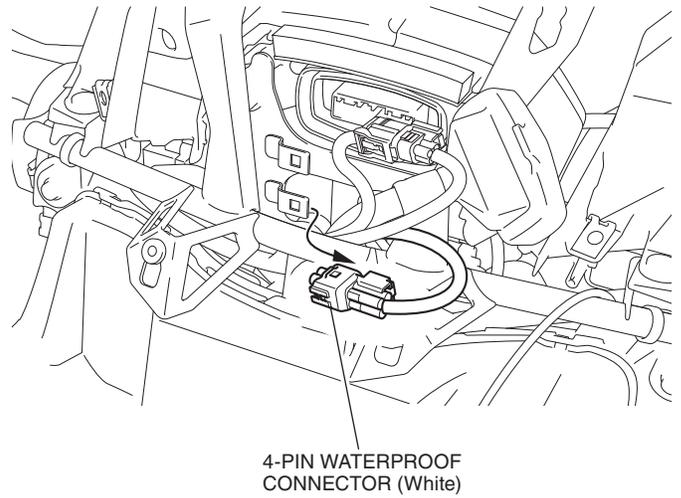


22. Remove the dummy connector as shown.

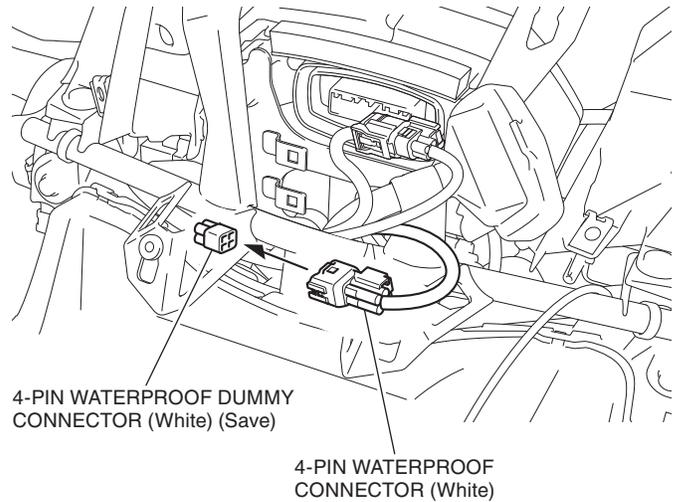


23. Route the sub-harness as shown.

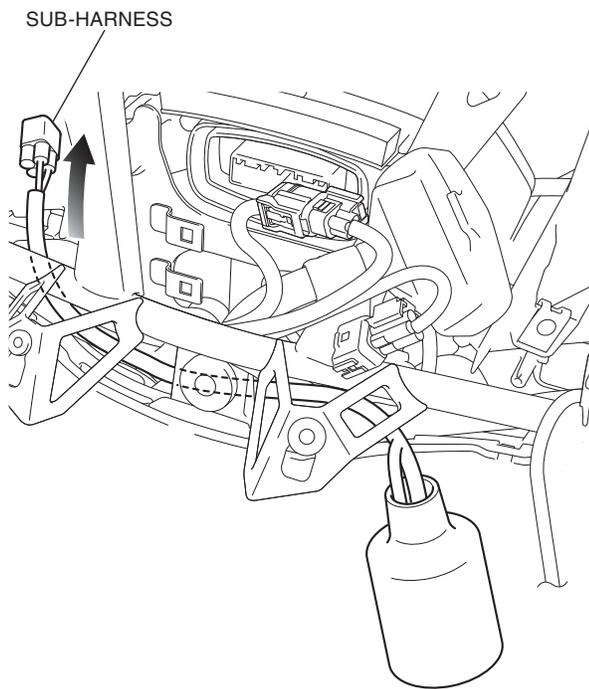

24. Route and connect the sub-harness as shown.

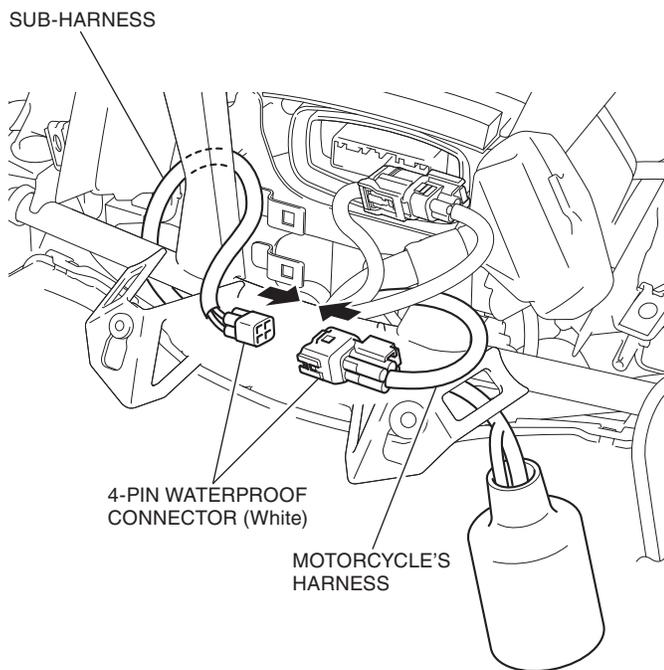


25. Secure the connector to the stay.

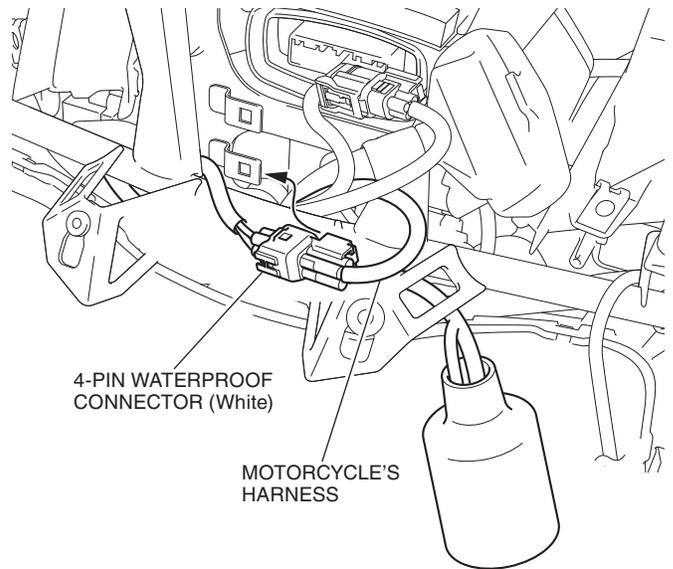


26. Install the 2-pin or 4-pin waterproof connector (Black) to the stay in reverse order of removal.


27. Connect the meter connector and route the accessory socket harness as shown.

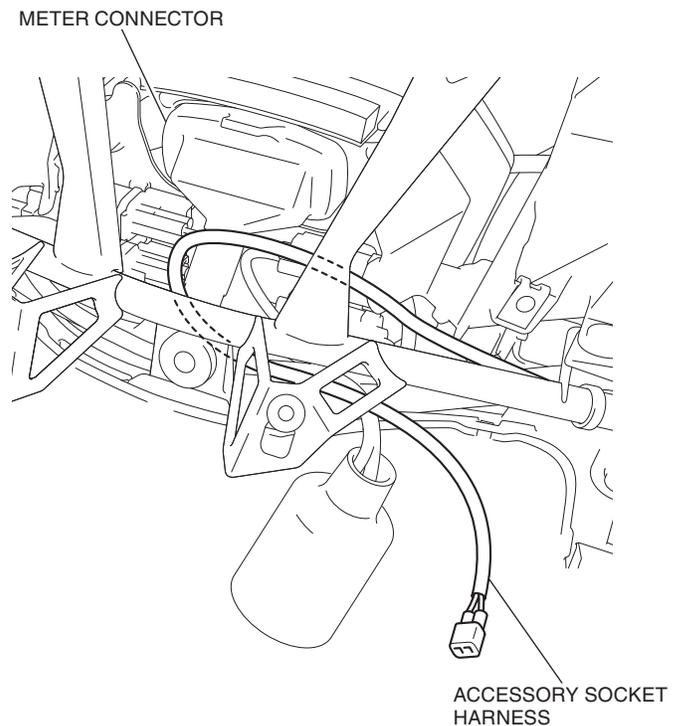


28. Route the accessory socket harness through the connector cover as shown, and connect the accessory socket harness to the sub-harness.

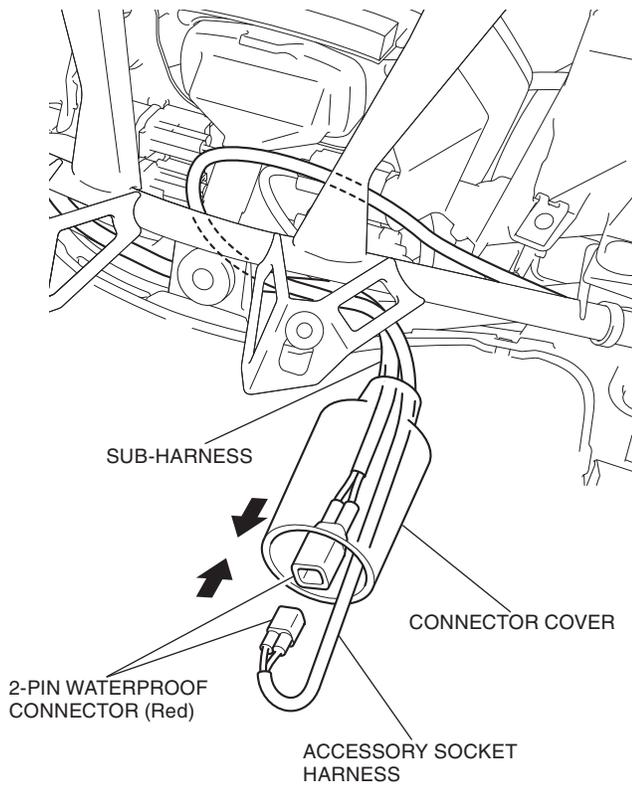

29. Secure the sub-harness and accessory socket harness using the wire tie as shown.

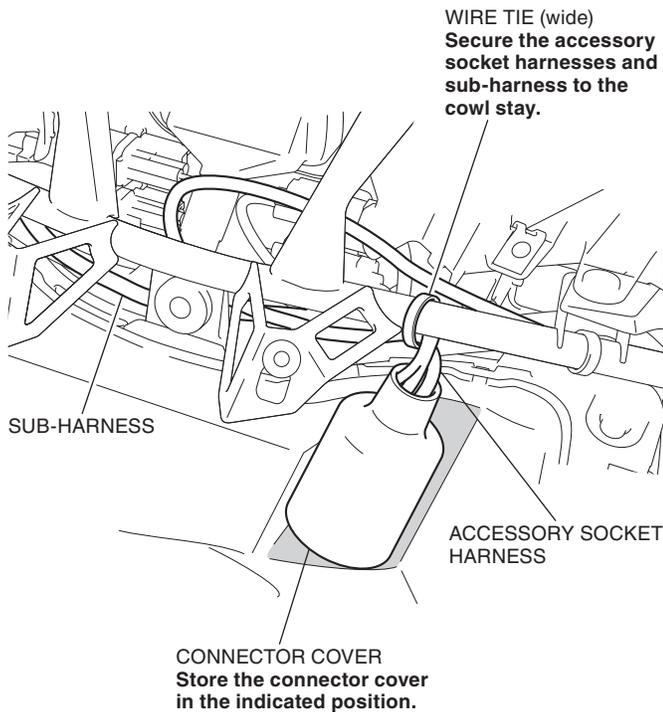

30. Bundle the excess accessory socket harness.

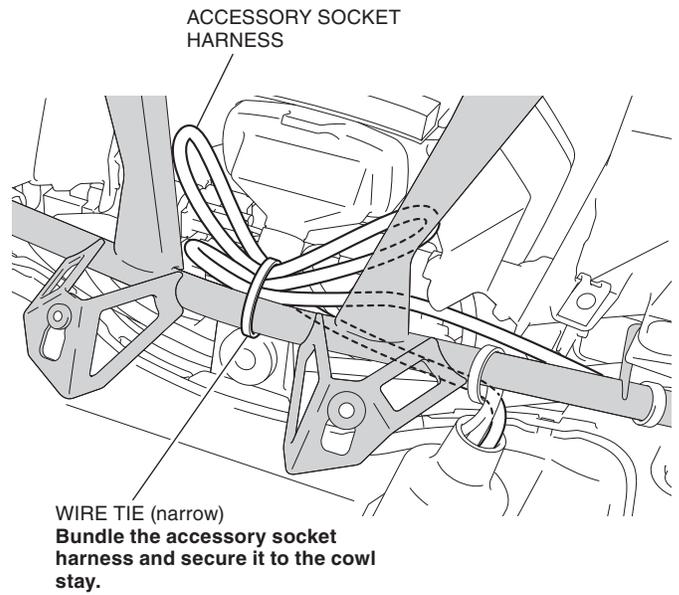


31. Install the motorcycle's parts in the reverse order of removal.

- Confirm that any wire harness is not caught or too tight.

32. Attach the caution label in the position shown.

<Left side>

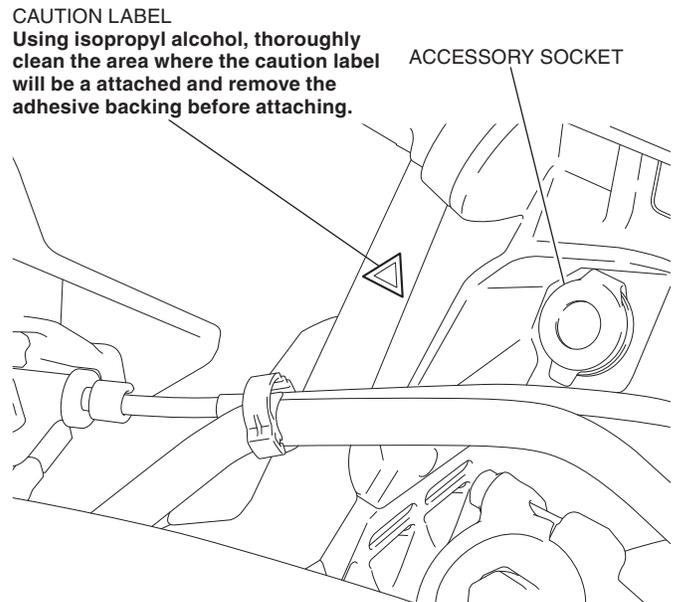

33. Check the accessory socket, headlight and other lights for proper operation.