



EVOTECH®
P E R F O R M A N C E

Honda CBR1000RR-R / SP


Crash Protection


Installation Instructions





Kit Contents PRN014774


- Ⓐ 1 x M12 x 90mm x 1.25 Caphead (Right Hand Side)
- Ⓑ 1 x M12 x 115mm x 1.25 Caphead (Left Hand Side)
- Ⓒ 1 x Right hand Bobbin Spacer (Short version)
- Ⓓ 1 x Left hand Bobbin Spacer (Long version)
- Ⓔ 2 x Washer M12 BZP
- Ⓕ 2 x Polyurathane Washer
- Ⓖ 2 x Low Profile Bobbin

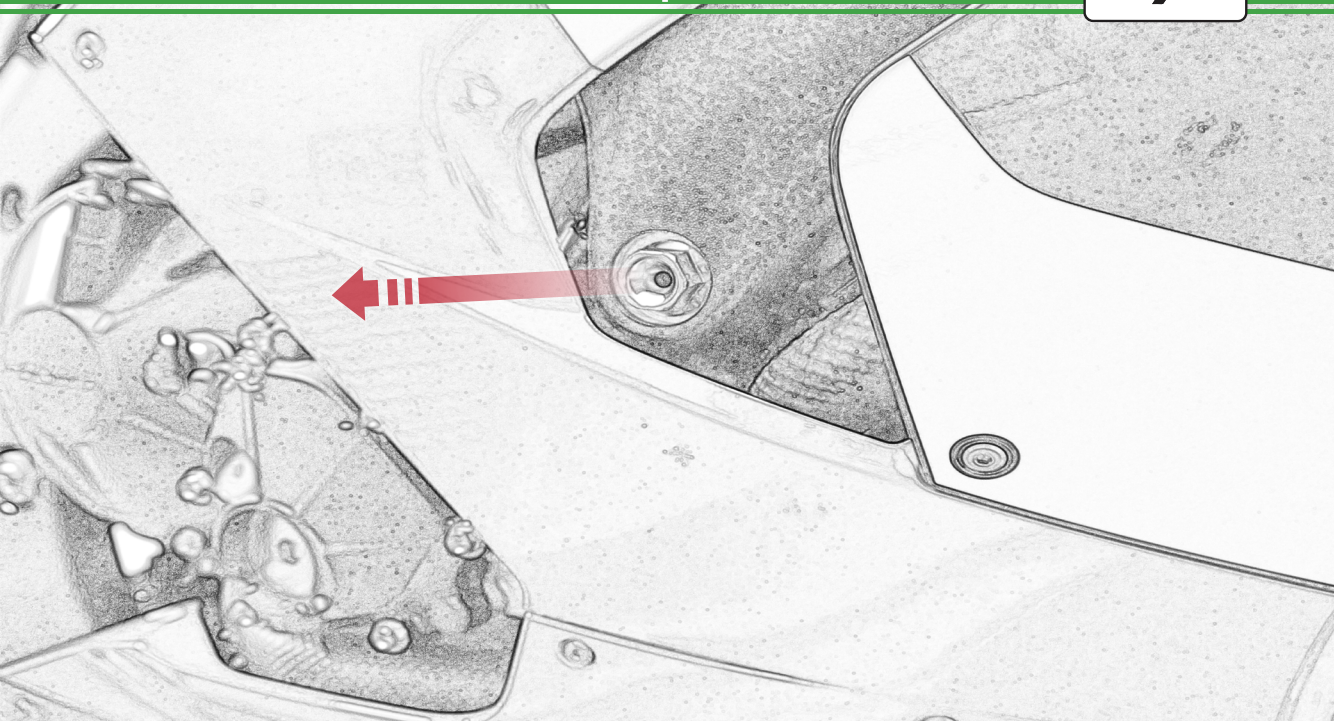


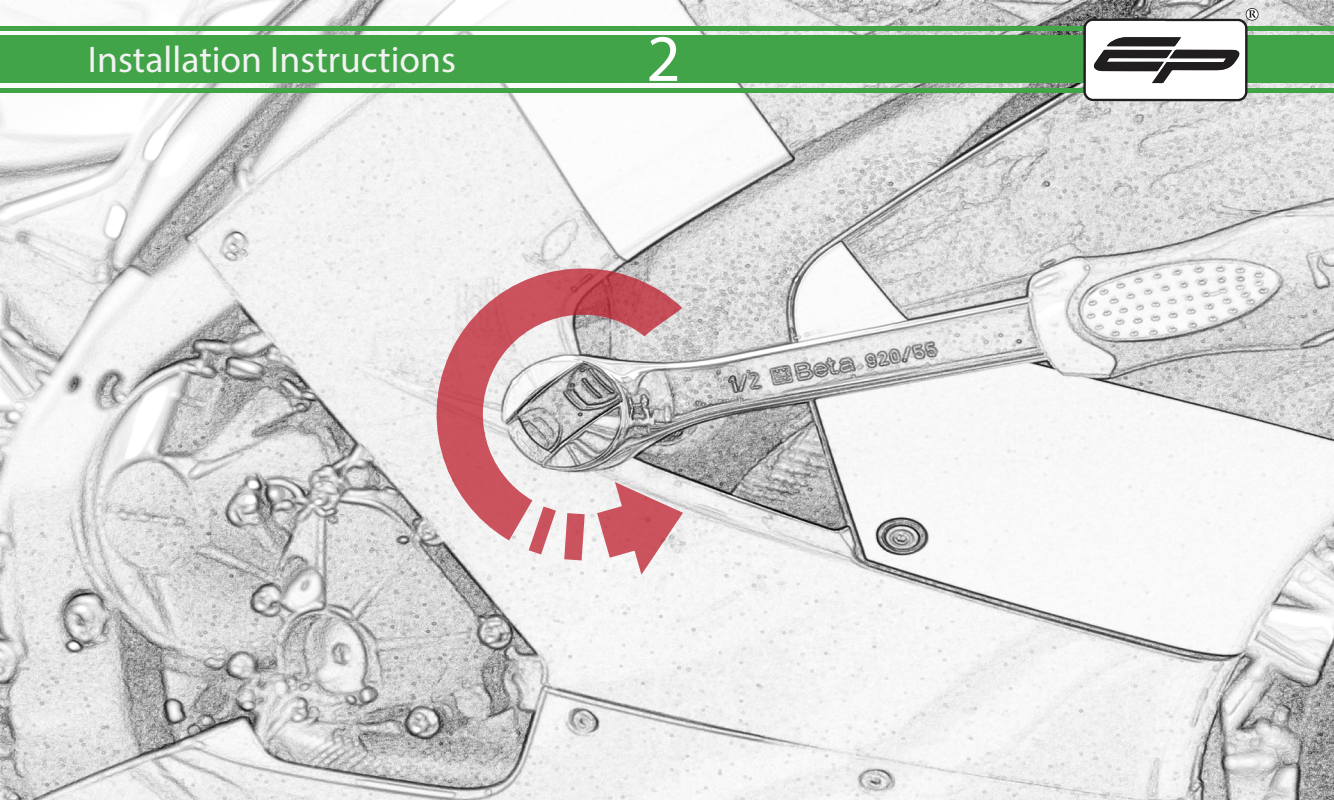


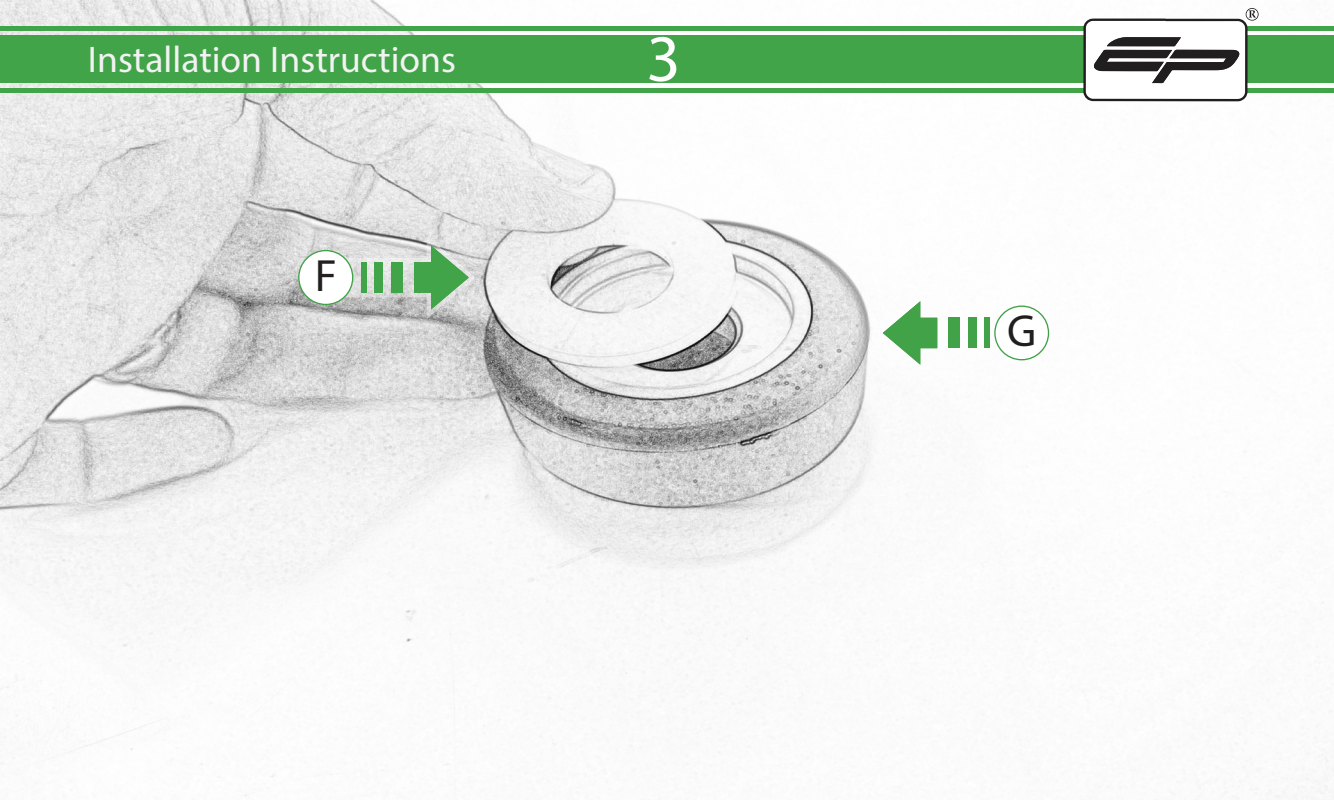

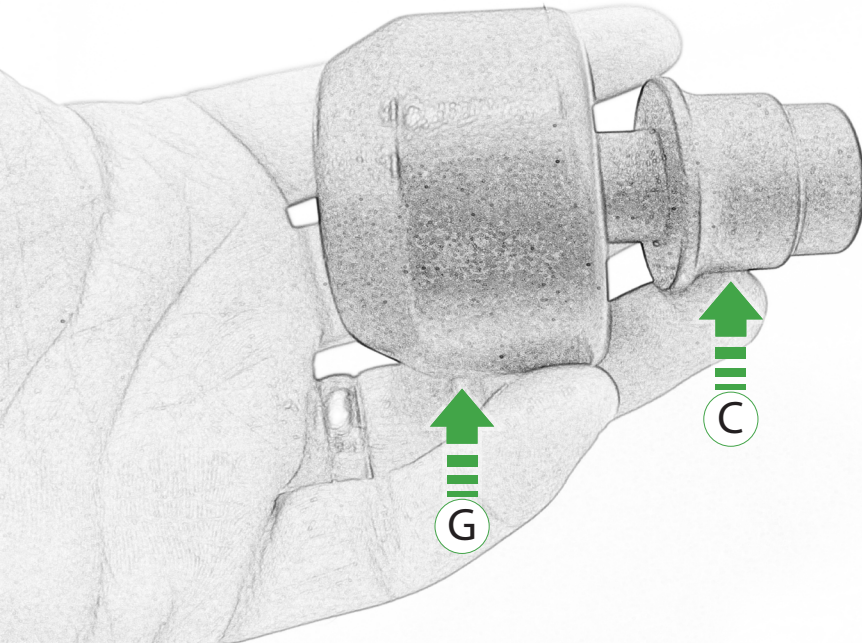

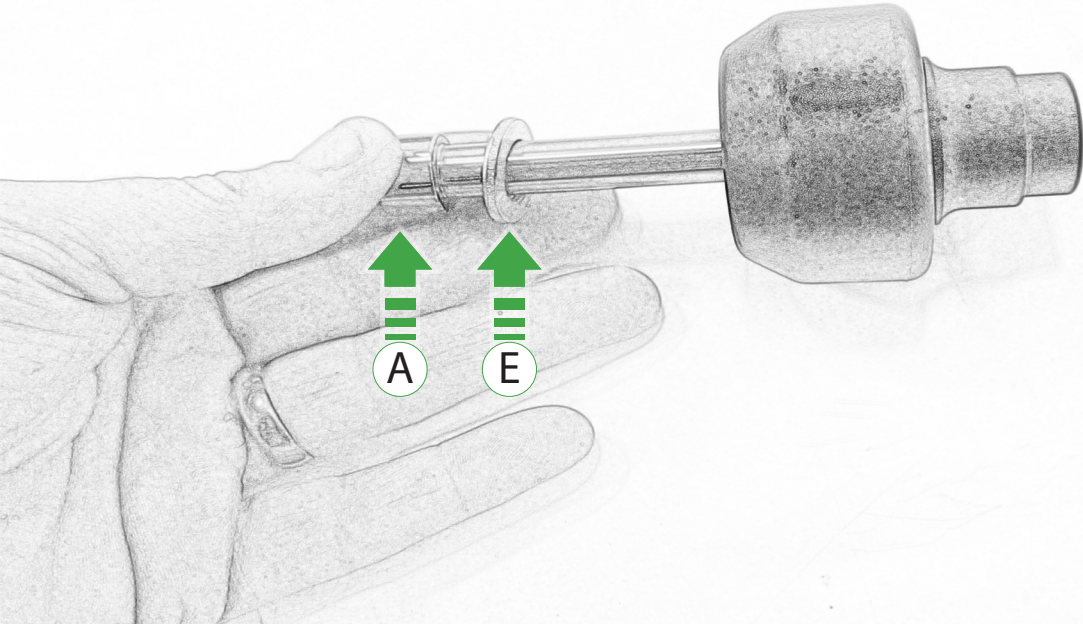

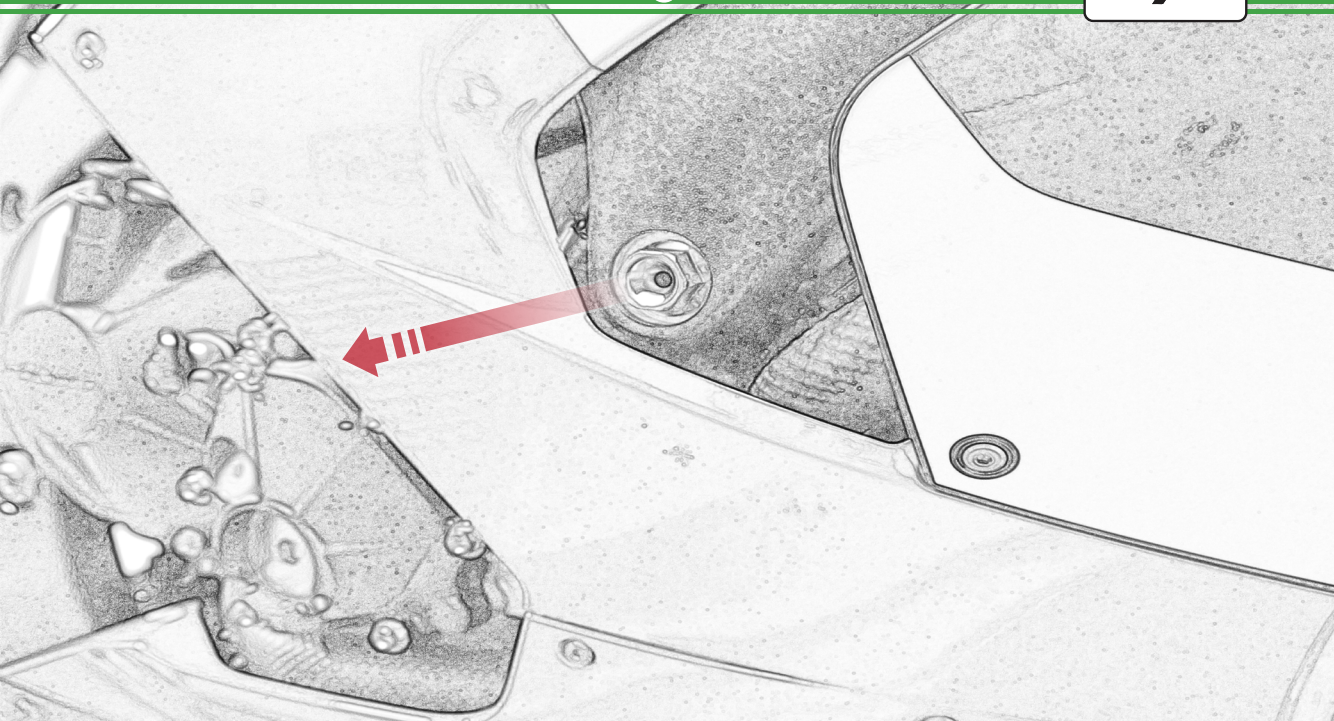

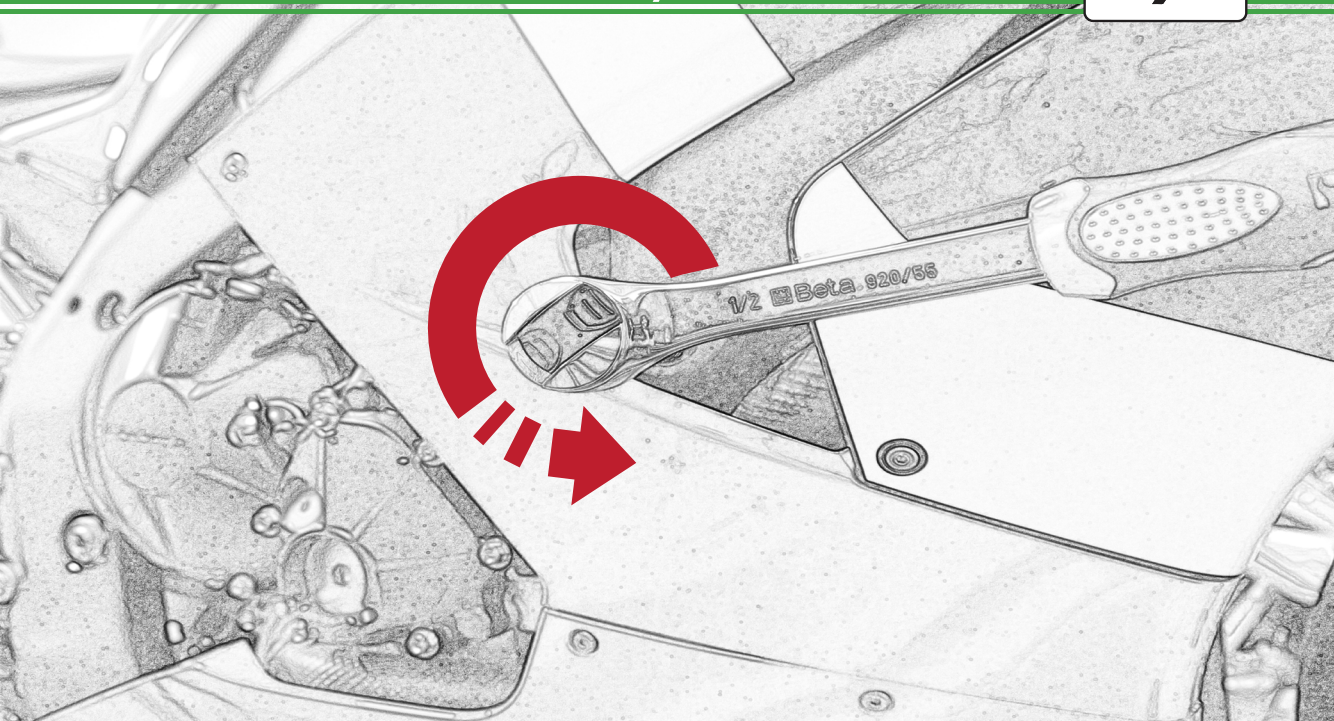









Caution


Torque Setting
65Nm

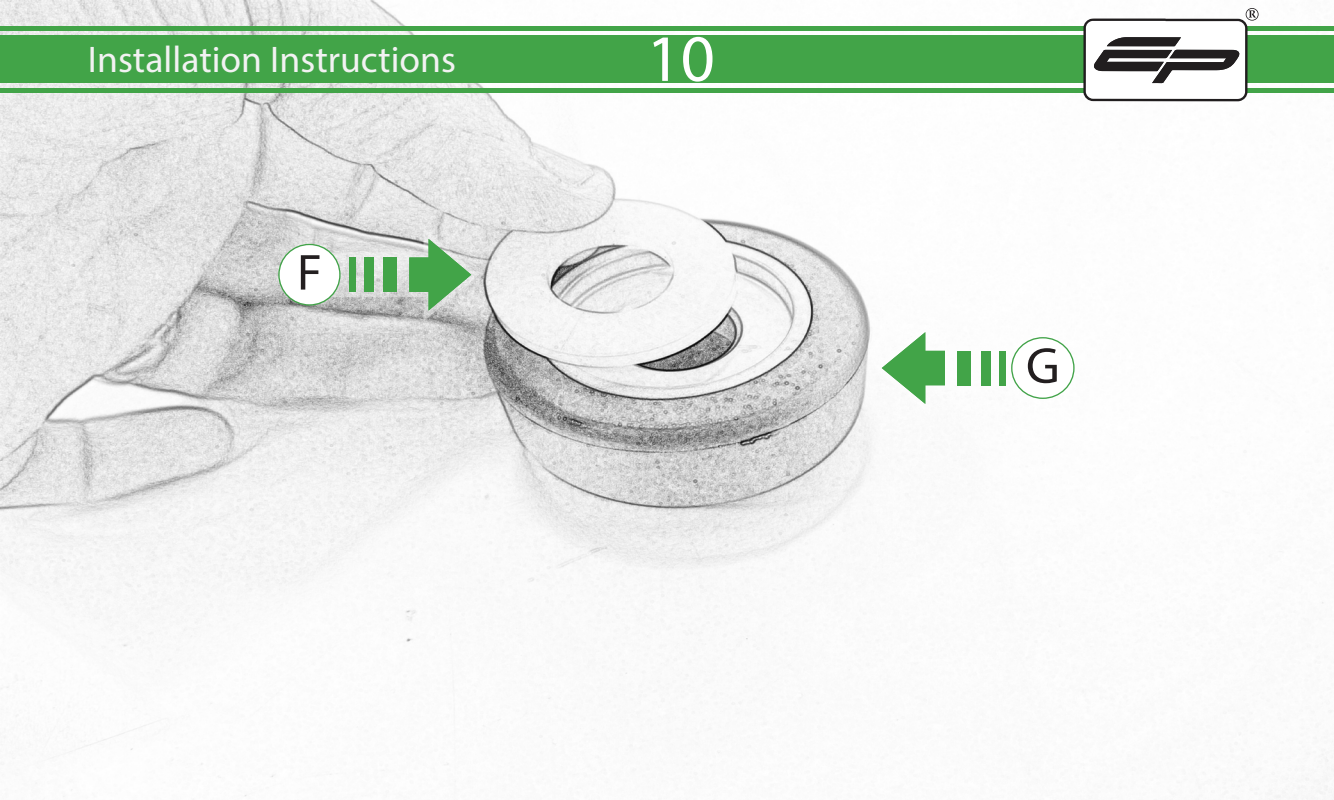


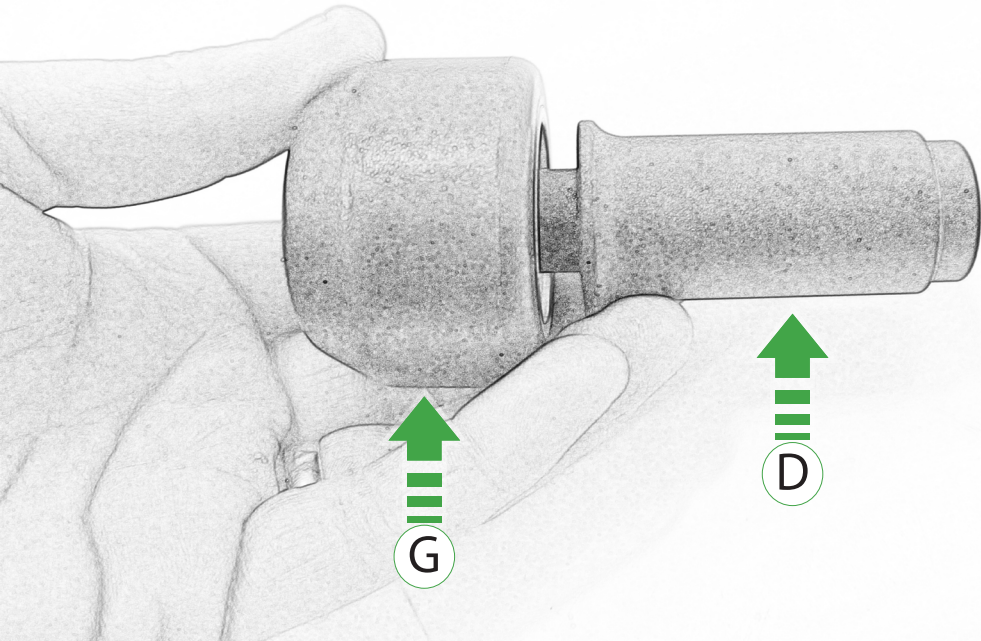


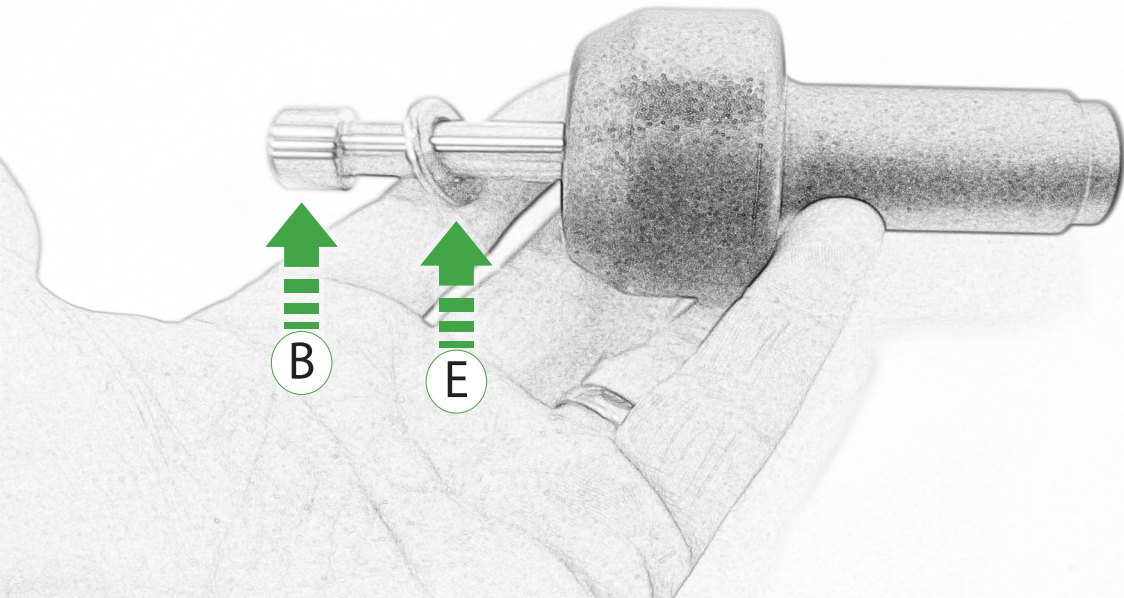


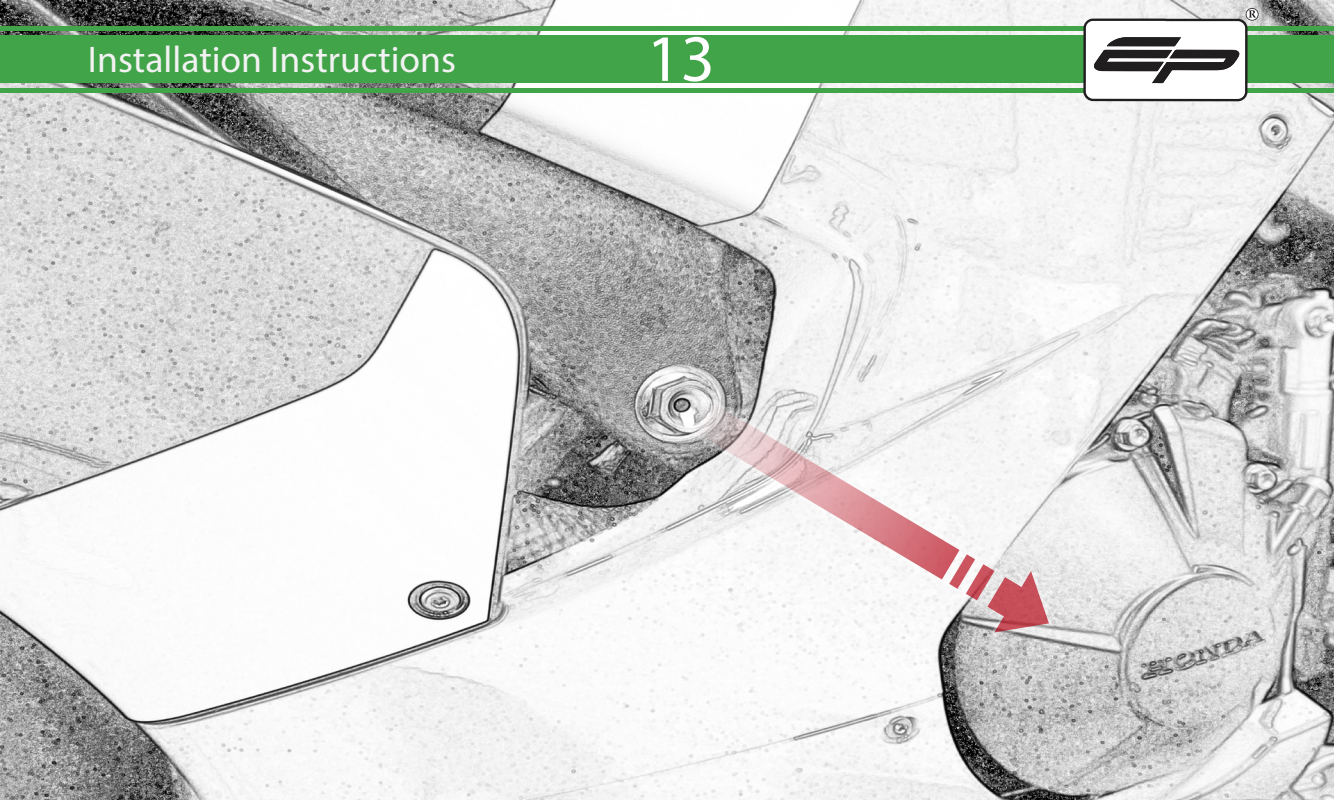

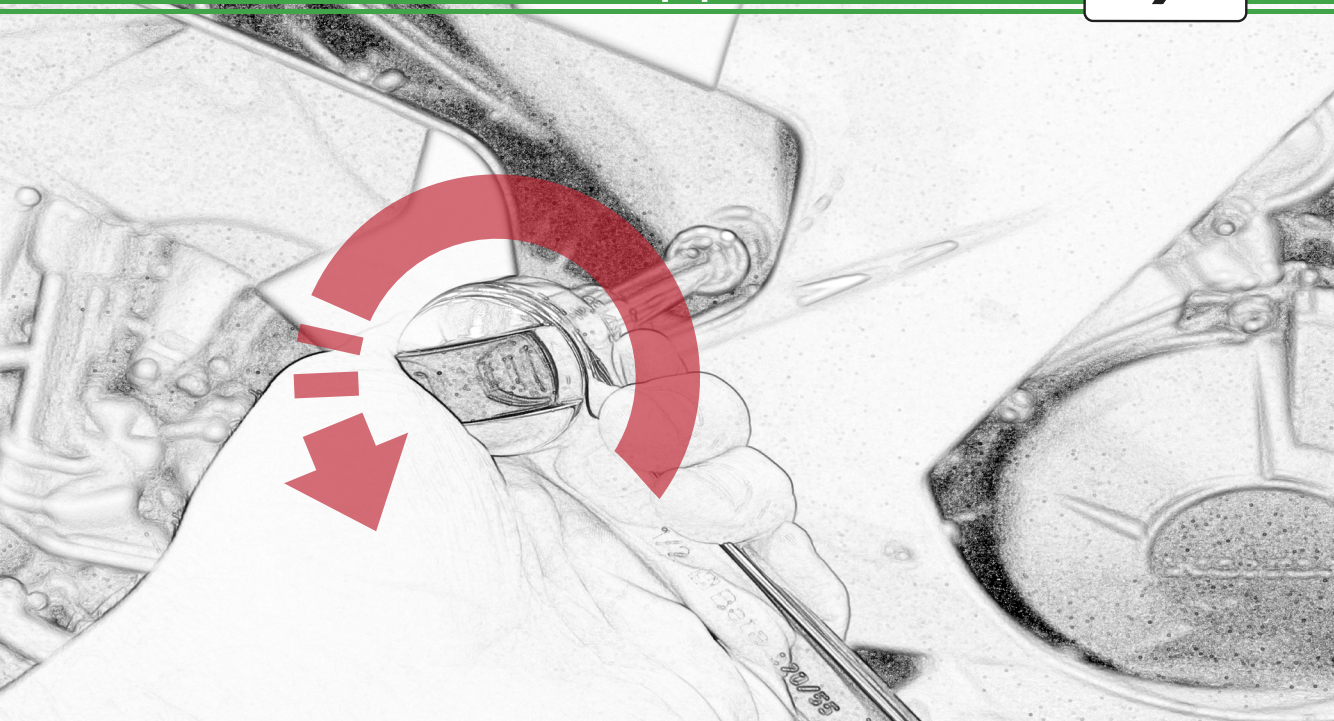

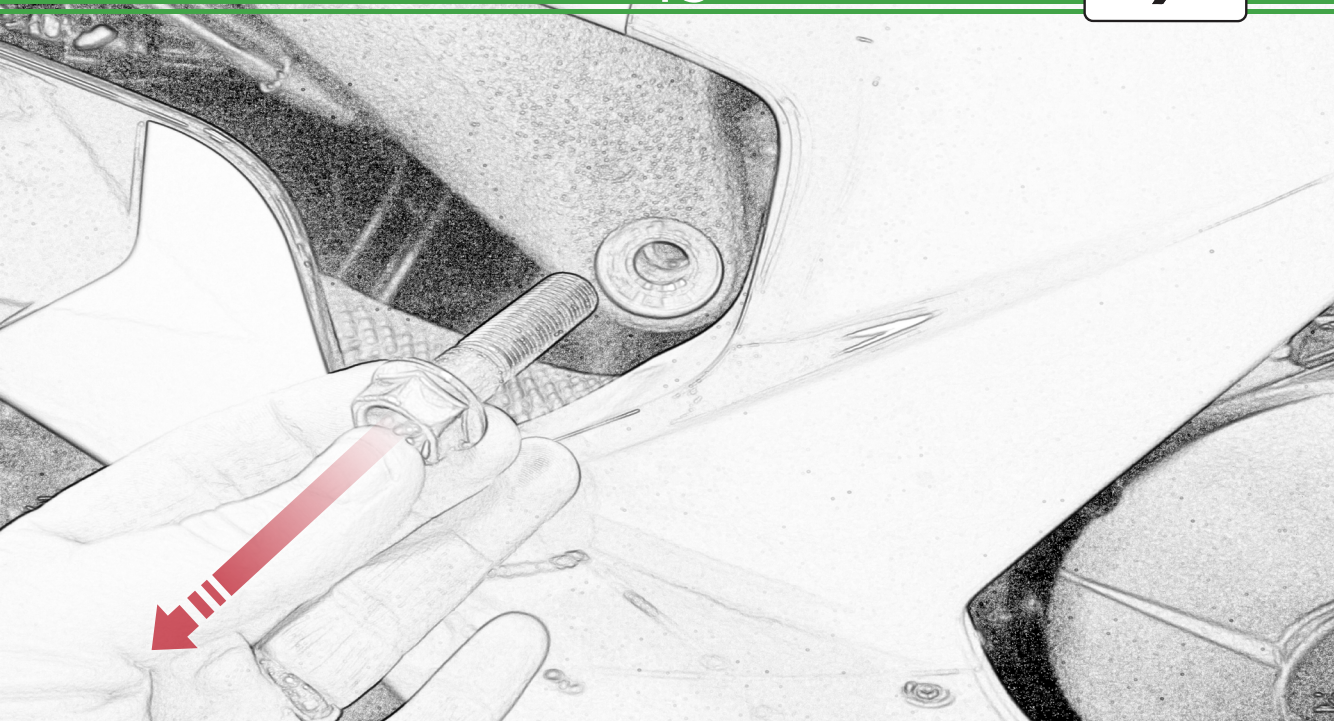

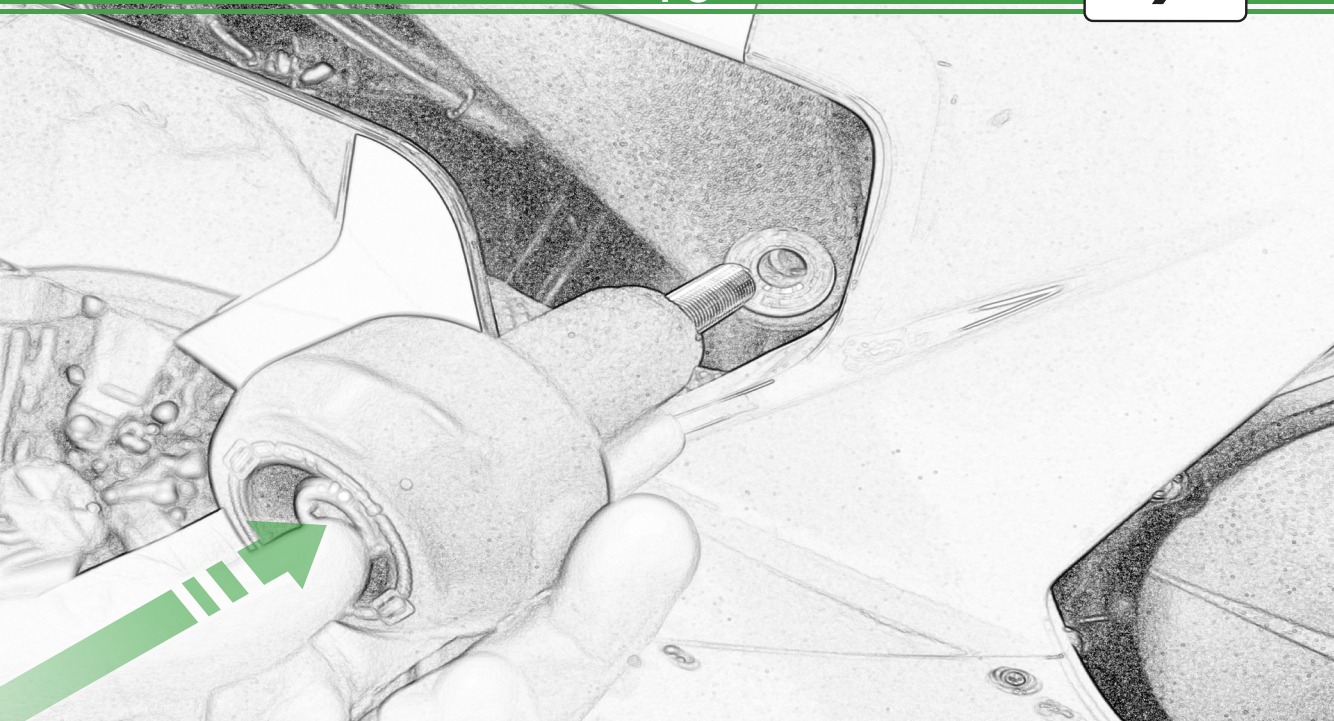

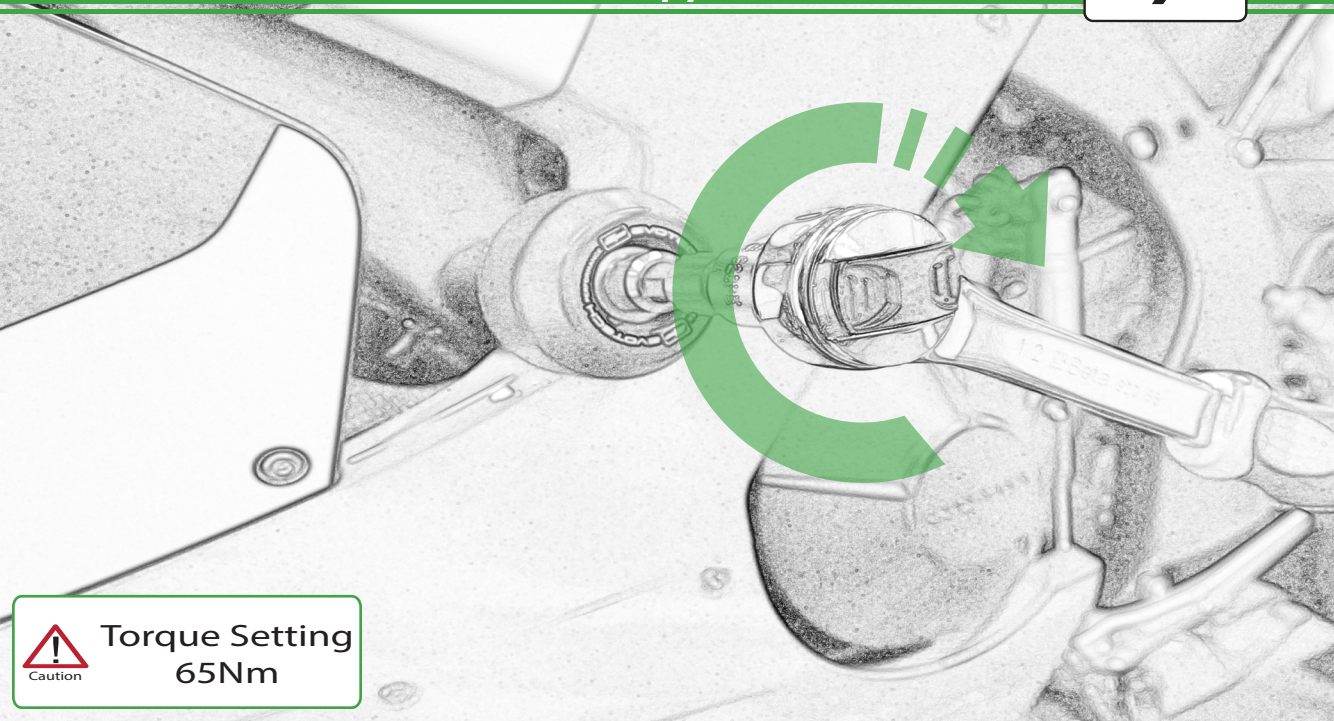

Caution

Torque Setting
65Nm



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com