



INSTALLATION INSTRUCTIONS

Accessory

BLACK BACKREST MOUNTING BRACKET
P/N 08F75-MFE-100A

Application

VT750C2B

Publications No.


MII 12987

Issue Date

September 2009

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

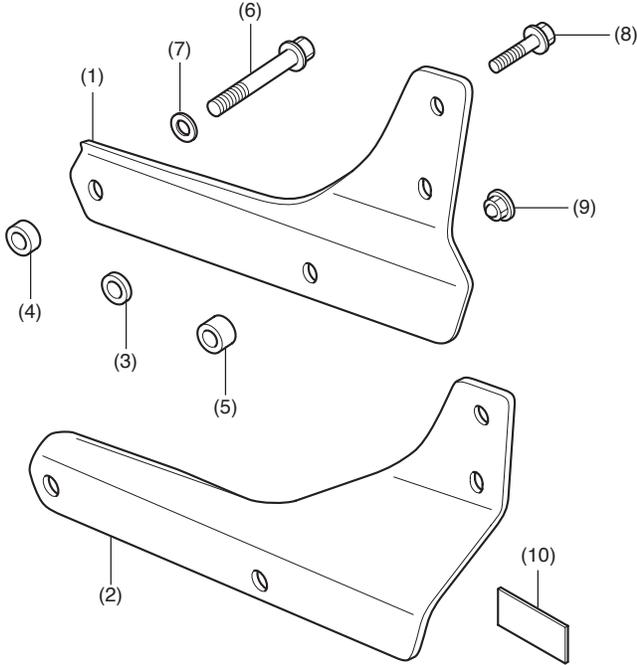


No.	Description	Qty
(1)	Right backrest stay	1
(2)	Left backrest stay	1
(3)	Collar (short)*	2
(4)	Collar (middle)	2
(5)	Collar (long)	2
(6)	10 mm flange bolt	4
(7)	Washer	4
(8)	8 mm flange bolt	4
(9)	8 mm cap nut	4
(10)	Double-sided adhesive tape	2

* Collar (short) should be used when installing together with the chrome saddlebag support kit (P/N 08L56-MEG-100J).

BLACK BACKREST KIT (TALL)


Sold separately (P/N 08F75-MFE-100B)

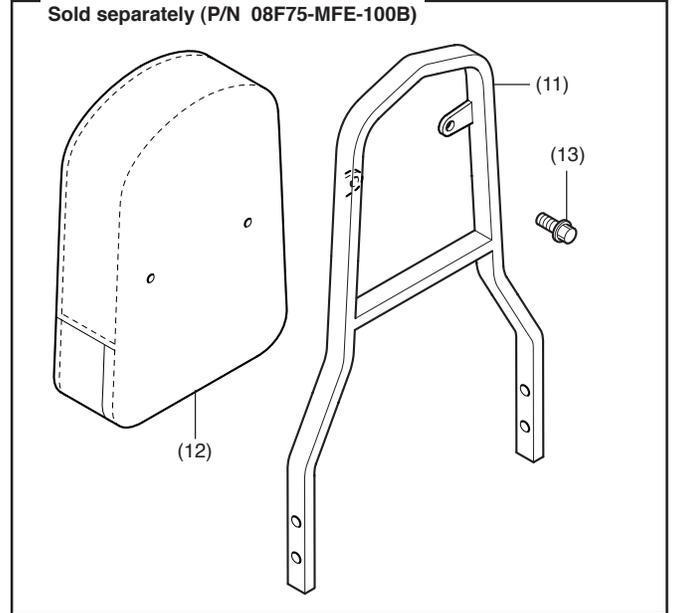

No.	Description	Qty
(11)	Backrest bar	1
(12)	Pad	1
(13)	6 mm SH flange bolt	2


BLACK BACKREST KIT (LOW)

Sold separately (P/N 08F75-MFE-100C)

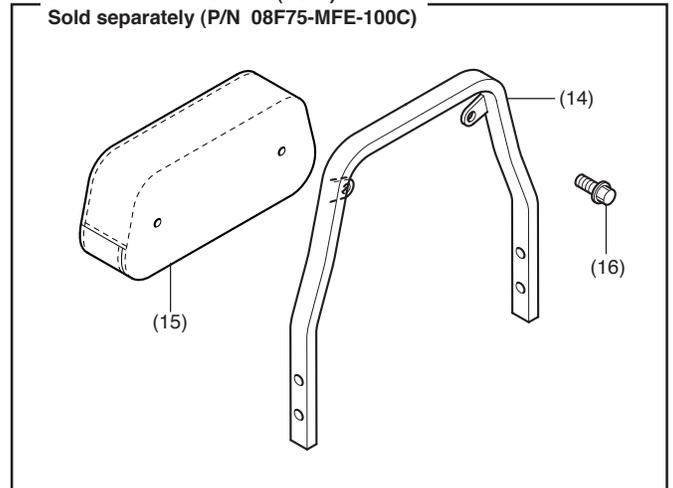

No.	Description	Qty
(14)	Backrest bar	1
(15)	Pad	1
(16)	6 mm SH flange bolt	2

REAR CARRIER
Sold separately (P/N 08L42-MFE-100)

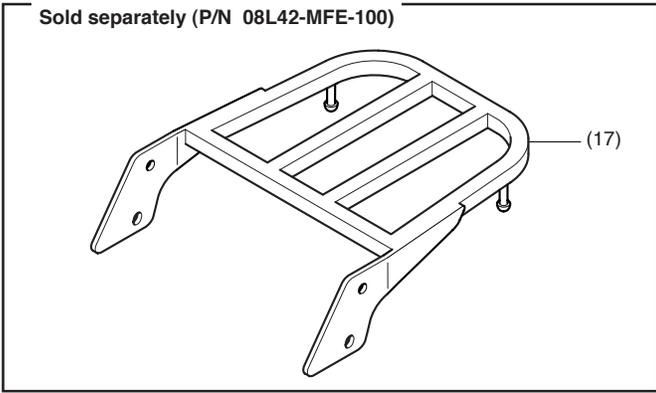

No.	Description	Qty
(17)	Rear carrier	1

TOOLS AND SUPPLIES REQUIRED

- Socket (8, 12 and 14 mm)
- Ratchet
- Box-end wrench (10 and 12 mm)
- Isopropyl alcohol
- Shop towel
- Ruler
- Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N·m	kgf·m	lbf·ft
6 mm SH flange bolt	9	0.9	6.5
8 mm flange bolt	26	2.7	20
10 mm flange bolt	64	6.5	47

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.


INSTALLATION

1. Remove the reflex reflector from the rear fender.

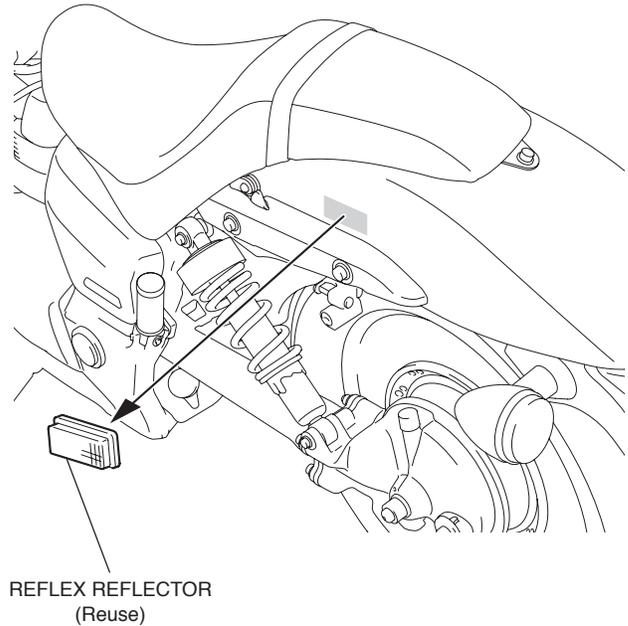


2. Remove the double-sided adhesive tape from the reflex reflector you just removed.


DOUBLE-SIDED ADHESIVE TAPE
(Replace with a new one from the kit)

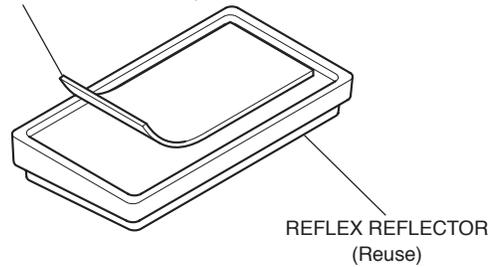

- Using an isopropyl alcohol solution, thoroughly clean the left rear side of the rear fender where the reflector will be attached. Attach the reflex reflector to the rear fender in the area shown.

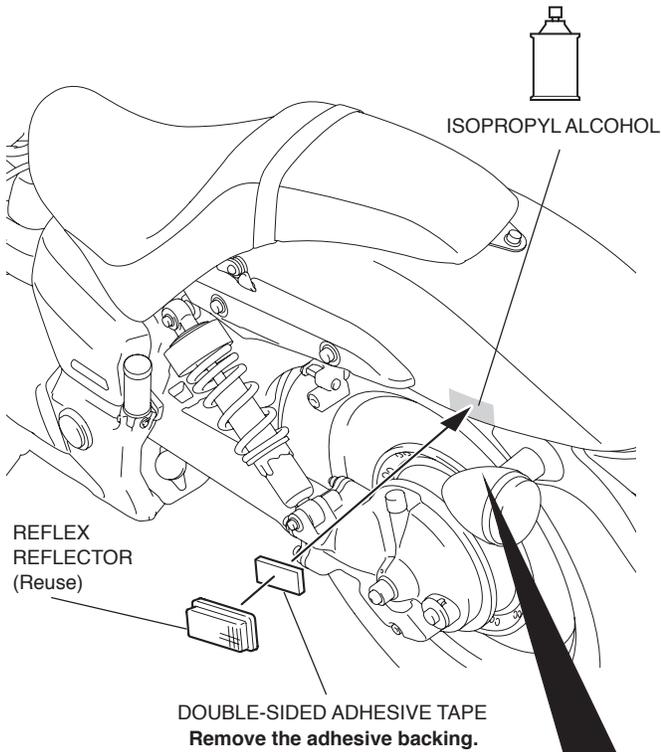


Align the reflex reflector end with the end of the bracket.

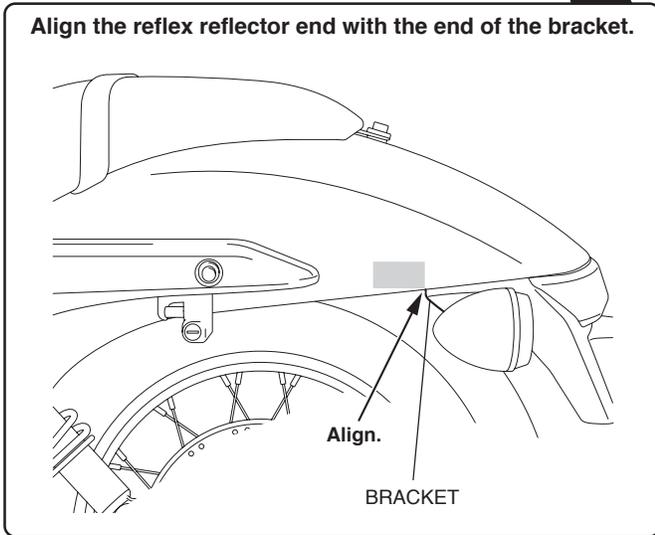


- Repeat on the right side.

- Install the pad (sold separately) on the backrest bar (sold separately) as described:


For Installing the Black Backrest (TALL) Kit

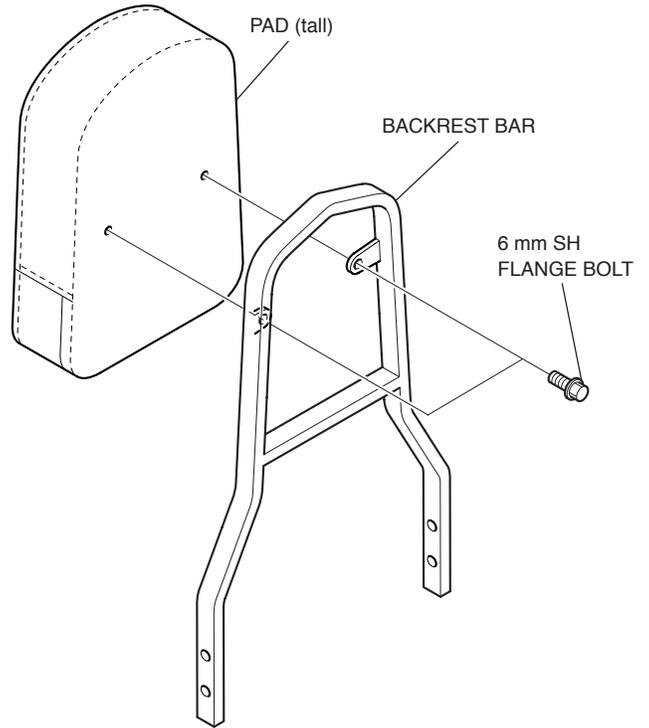


For Installing the Black Backrest (LOW) Kit

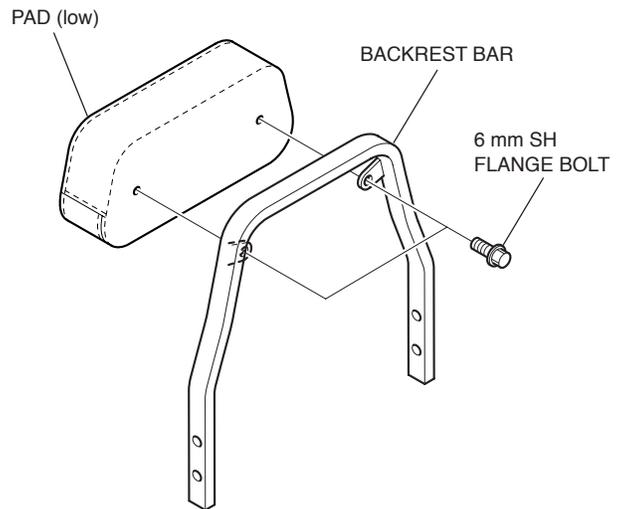

6. Remove the parts as shown.

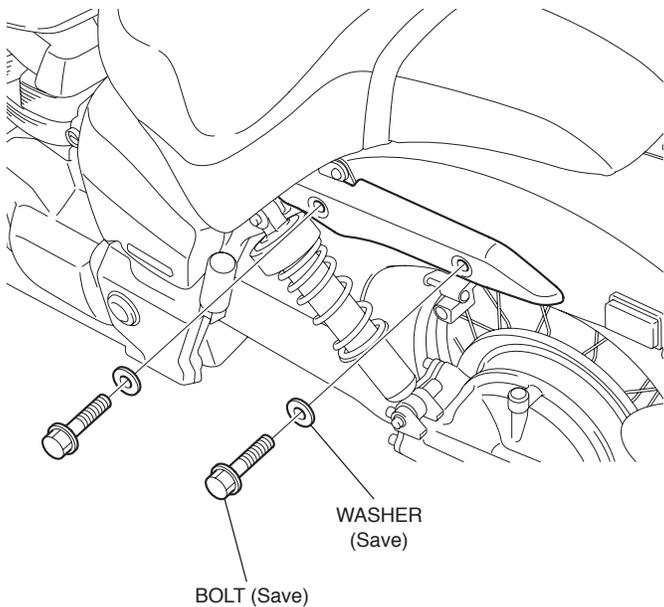


7. Loosely install the left backrest stay.

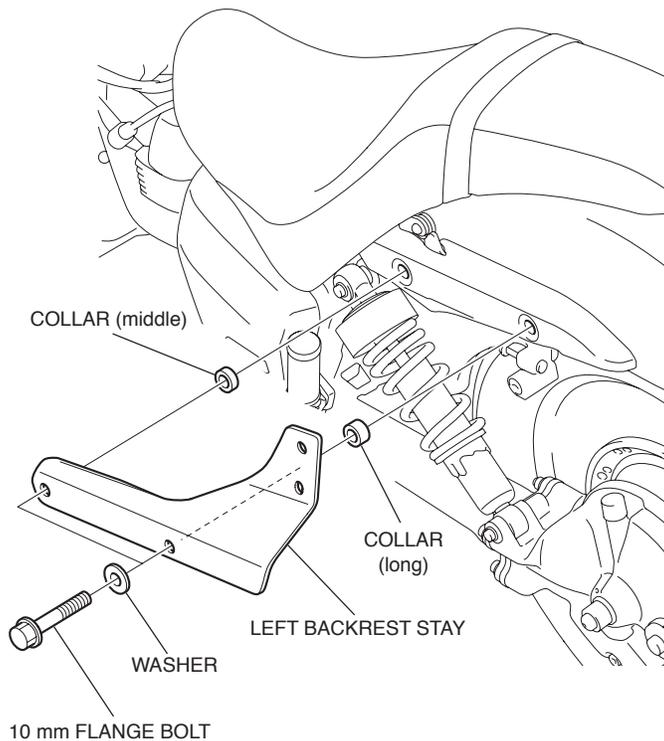

8. Repeat on the right side.


To install the Backrest With Pad (TALL) or the Backrest With Pad (LOW)

- Loosely install the backrest as shown.

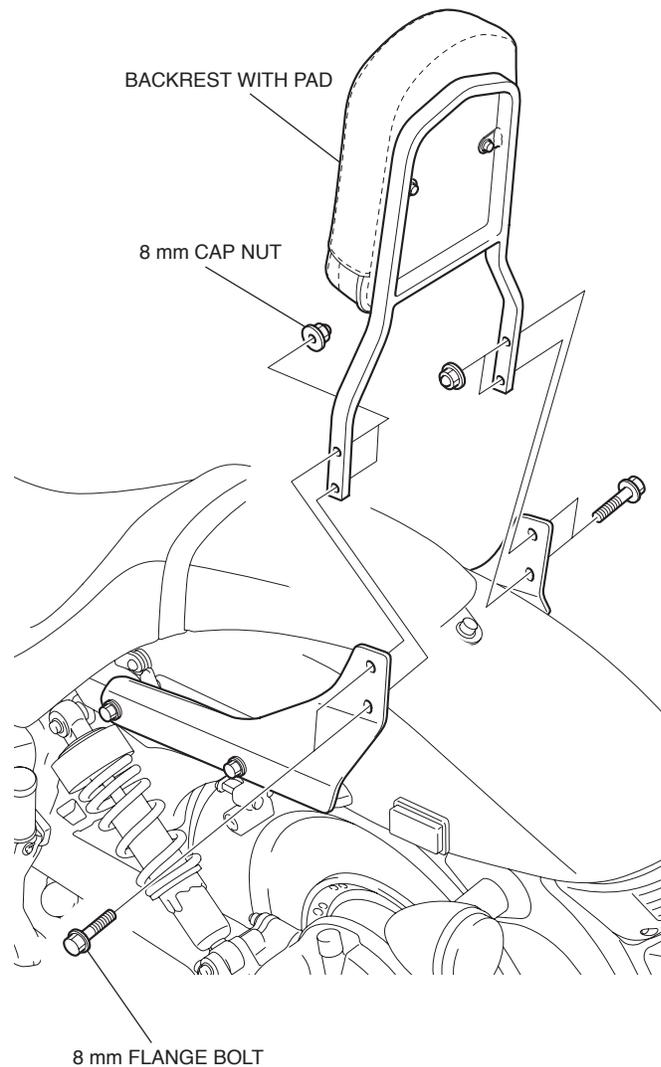


To Install the Rear Carrier

- Loosely install the rear carrier as shown.

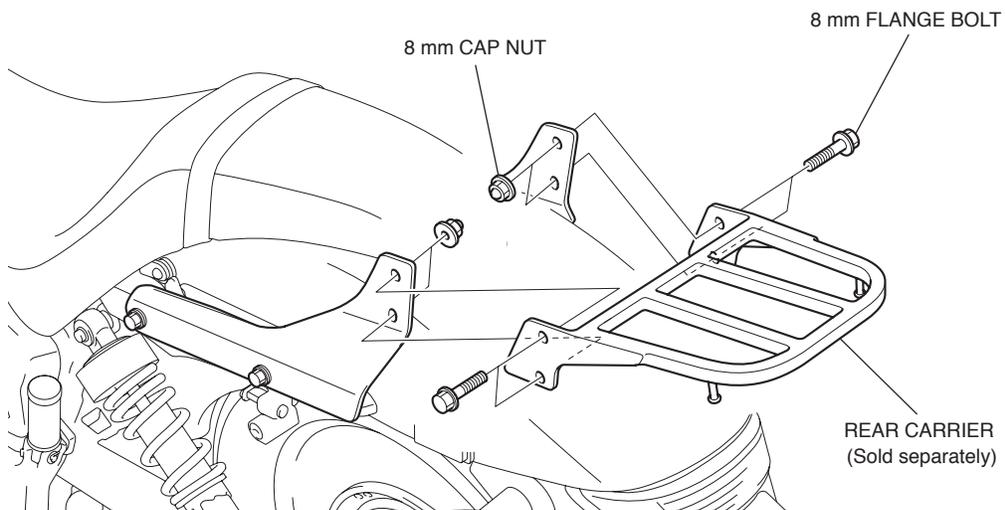

To install the Backrest With Pad and Rear Carrier

- Loosely install the backrest with pad and rear carrier as shown.

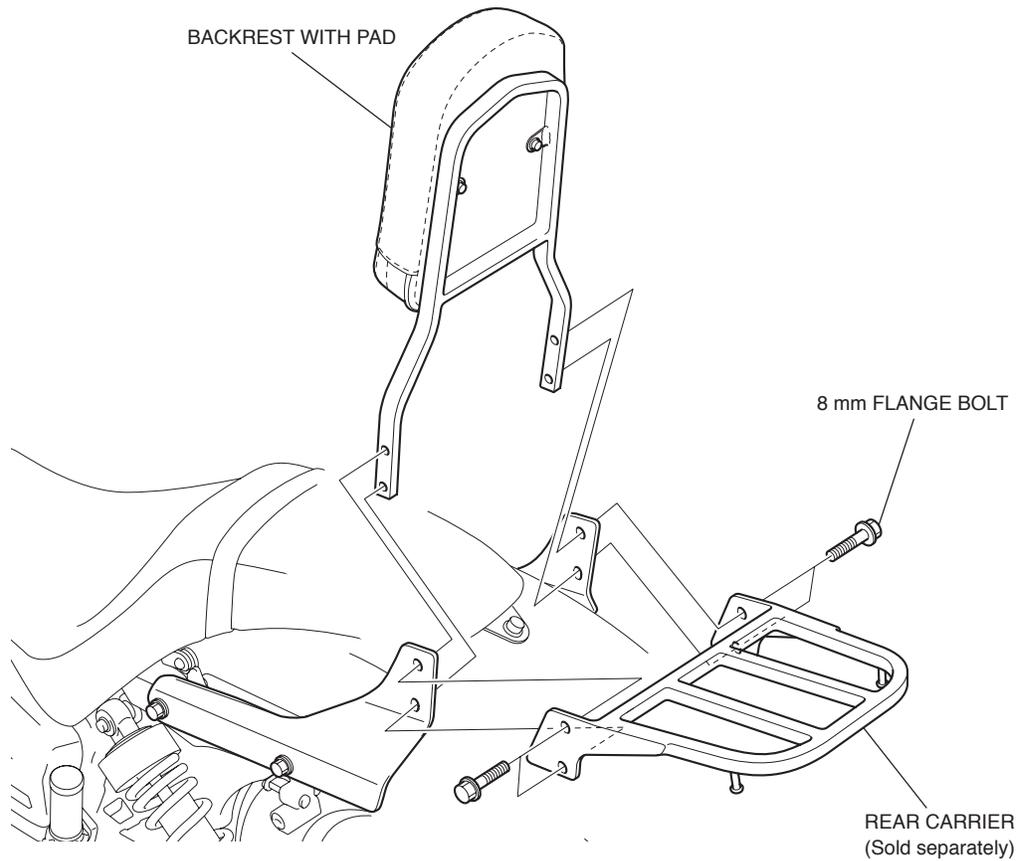

- Tighten the parts that you installed loosely.