


PARTS LIST

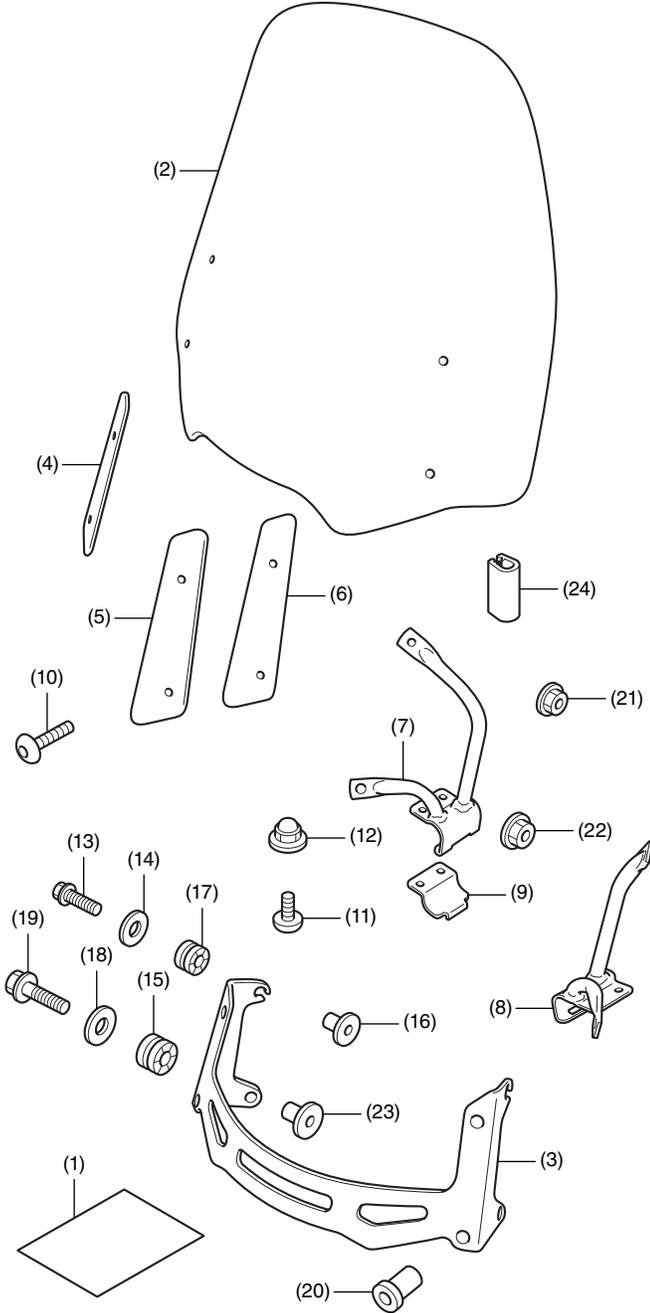

No.	Description	Qty
(1)	Installation Instructions URL	1
(2)	Windscreen	1
(3)	Tall windscreen stay	1
(4)	Right windscreen garnish	1
(5)	Left windscreen garnish	1
(6)	Screen cushion	2
(7)	Right tall screen bracket	1
(8)	Left tall screen bracket	1
(9)	Windscreen lower holder	2
(10)	6 mm screw	4
(11)	6 mm bolt	4
(12)	6 mm cap nut	4
(13)	6 mm SH flange bolt	2
(14)	Washer (small)	2
(15)	Grommet (large)	2
(16)	Flange collar (small)	2
(17)	Grommet (small)	2
(18)	Washer (large)	2
(19)	8 mm flange bolt	2
(20)	Well nut	4
(21)	6 mm flange nut	2
(22)	8 mm flange nut	2
(23)	Flange collar (large)	2
(24)	Trim	1

TOOLS REQUIRED

Socket (8 and 12 mm)
 Ratchet
 Box-end wrench (10 and 12 mm)
 Open-end wrench (10 and 12 mm)
 Hex wrench (5 mm)
 Ruler
 Torque wrench


TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.



Item	N-m	kgf-m	lbf-ft
6 mm screw	0.9	0.09	0.7
6 mm cap nut	12	1.2	9
6 mm flange nut	12	1.2	9
8 mm flange nut	27	2.8	20

INSTALLATION


1. Install the well nuts to the tall windscreen stay as shown.

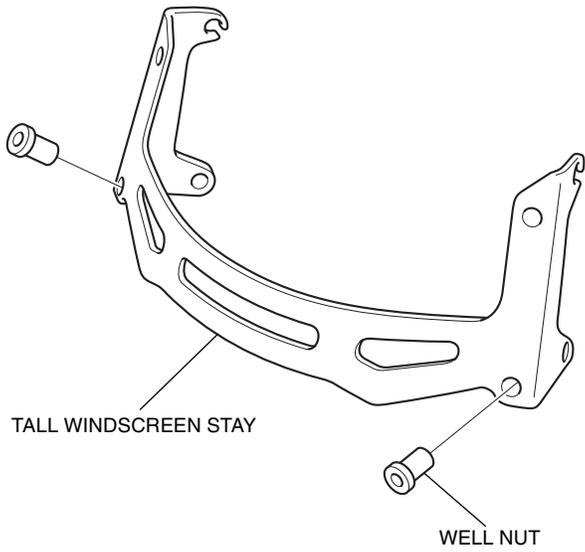


2. Install the grommets as shown.

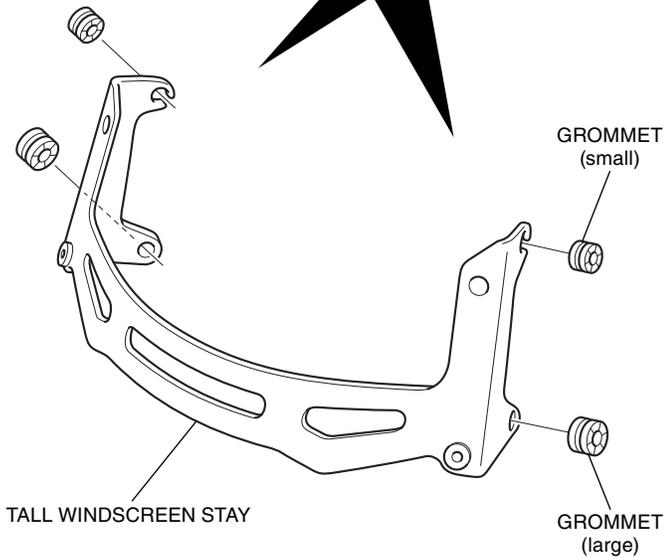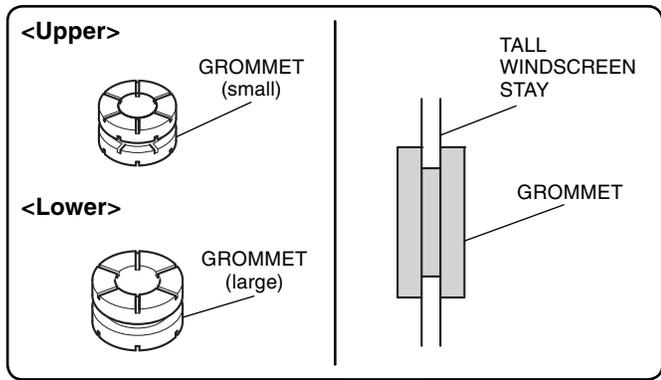


3. Install the flange collars as shown.

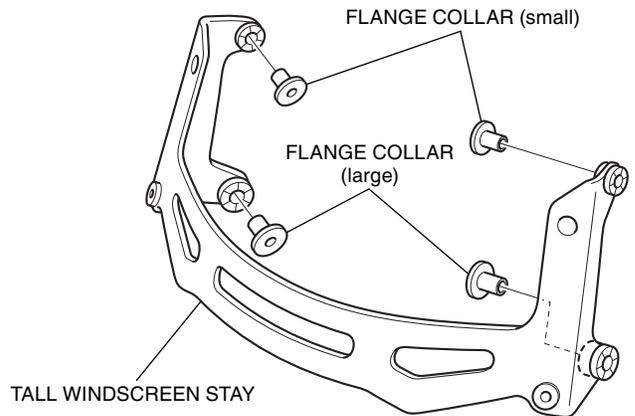



4. Loosely install the right and left windscreen garnish as shown.

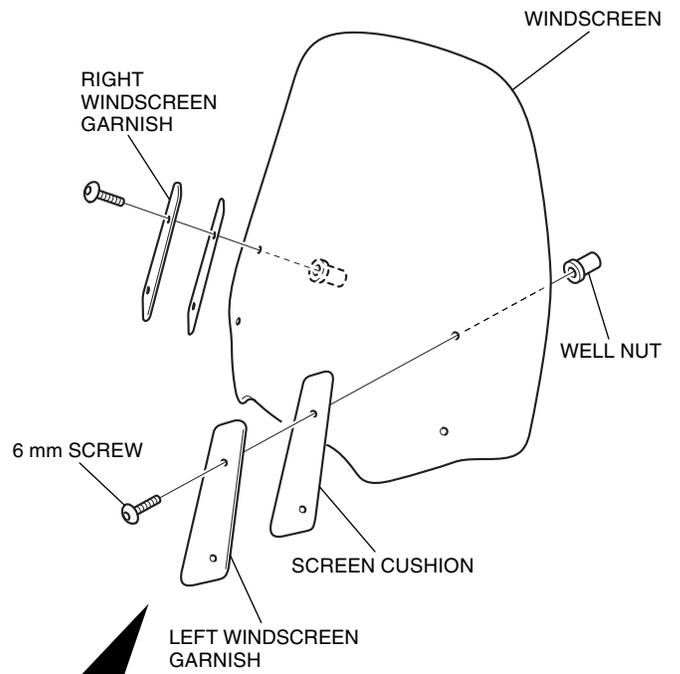



The side with the square edge must point to the rear.

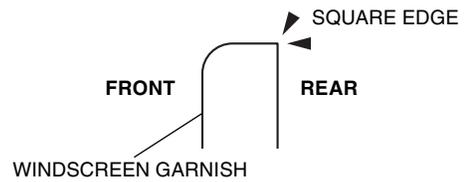


5. Check the alignment of the handlebar punch mark and the lower holder as shown. If the punch mark is not aligned with the top edge of the lower holder, correct the position of the handlebar.

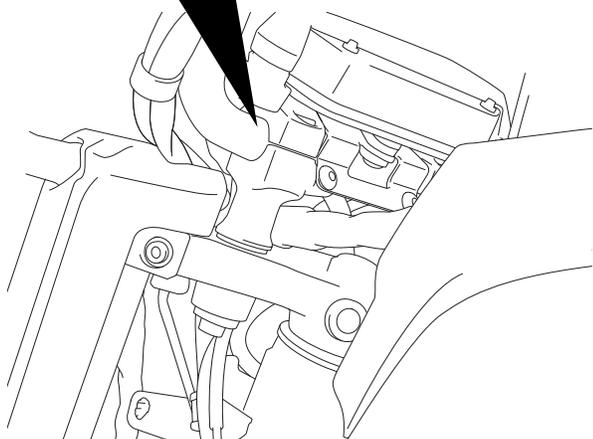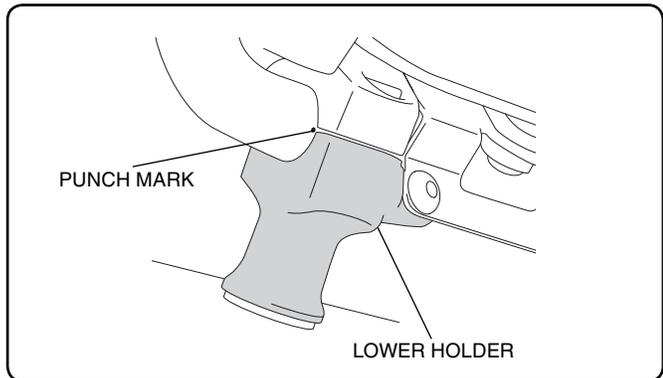




6. Install the trim to the left fork cover as shown.

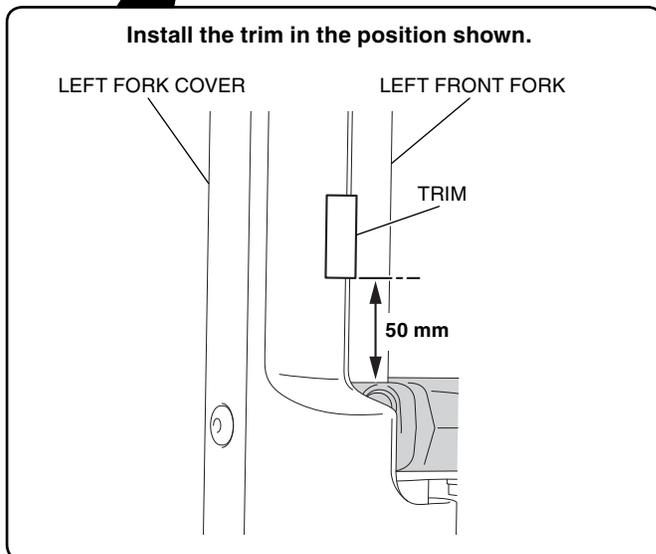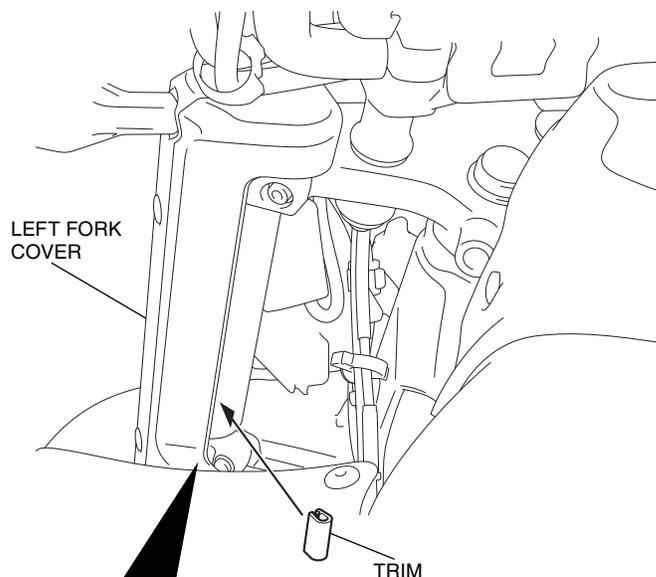


7. Remove the indicated clamp.
<Right side>

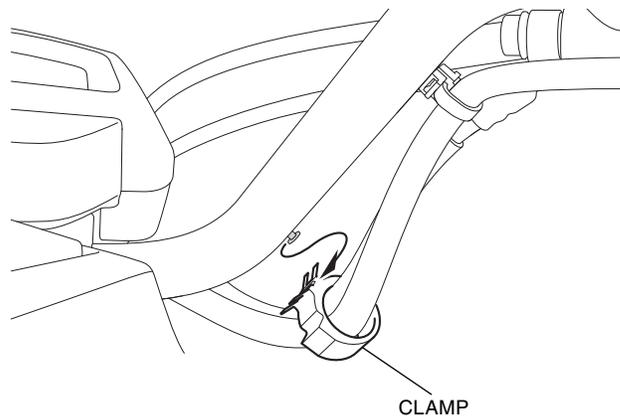

8. Loosely install the right tall screen bracket and windscreen lower holder as shown.

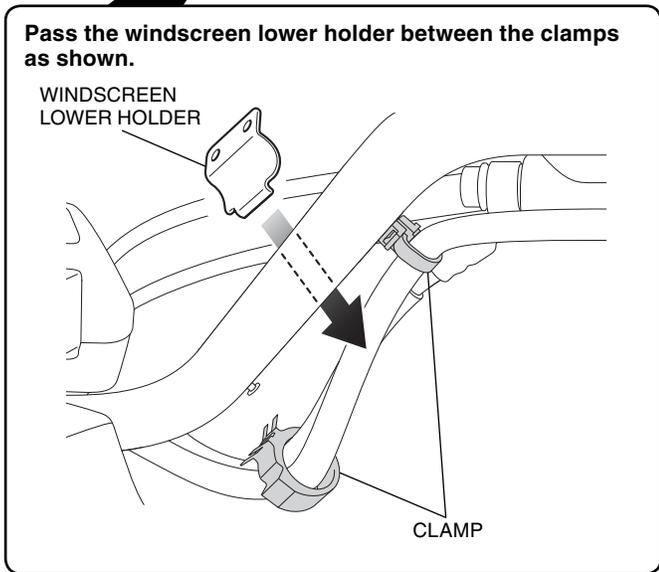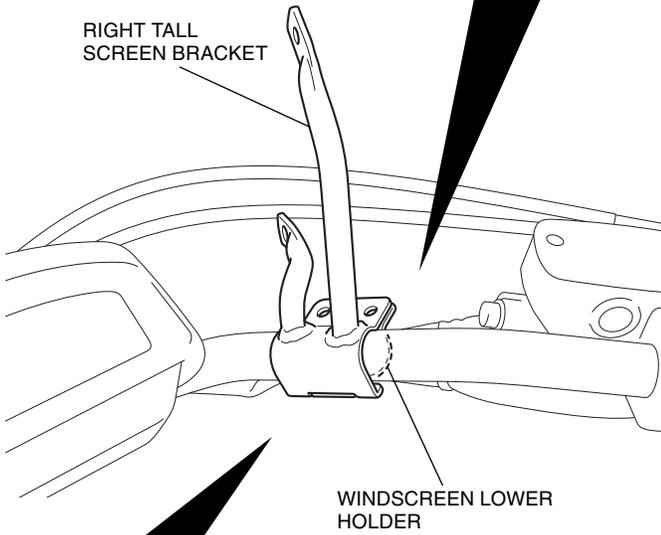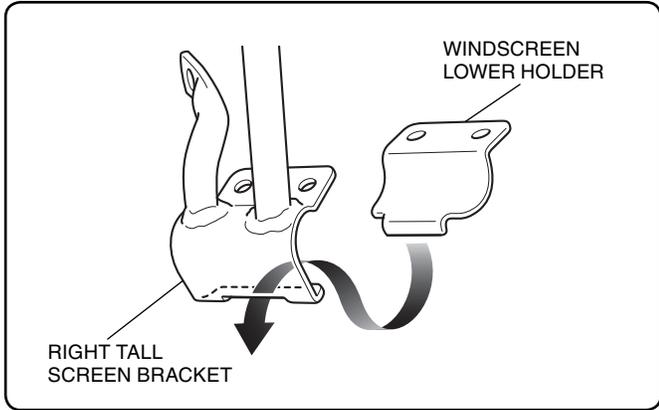

9. Loosely install the 6 mm bolt and 6 mm cap nut as shown.


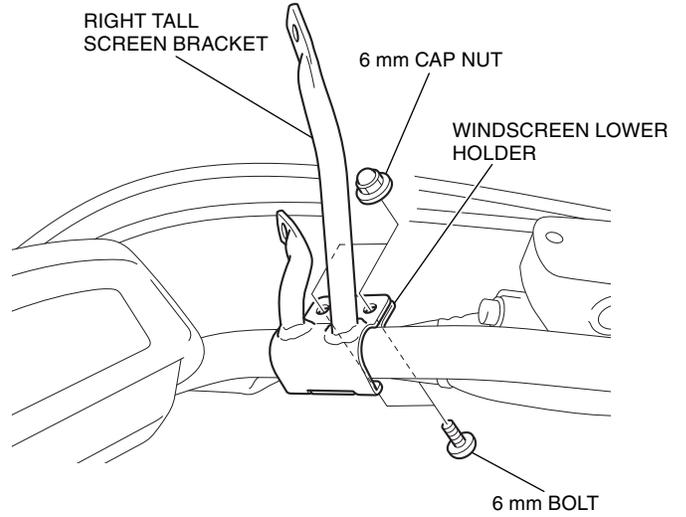


10. Reinstall the removed clamp.


11. Repeat Step 6 through 9 on the left side.

12. Loosely install the assembled tall windscreen stay as shown.

- Loosely install the 8 mm flange bolt first.

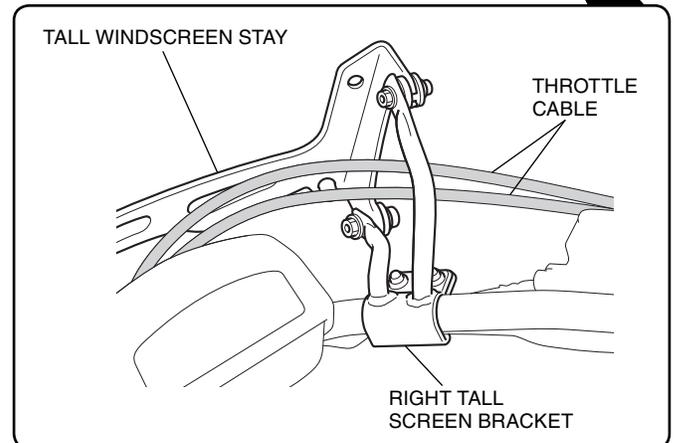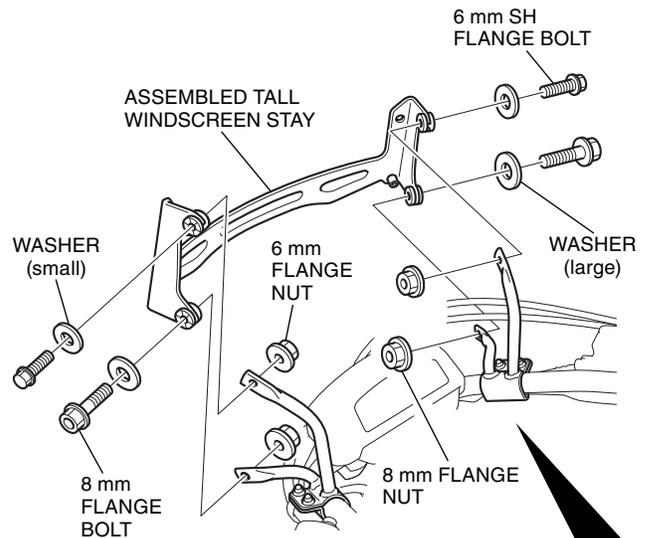

13. Loosely install the assembled windscreen as shown.

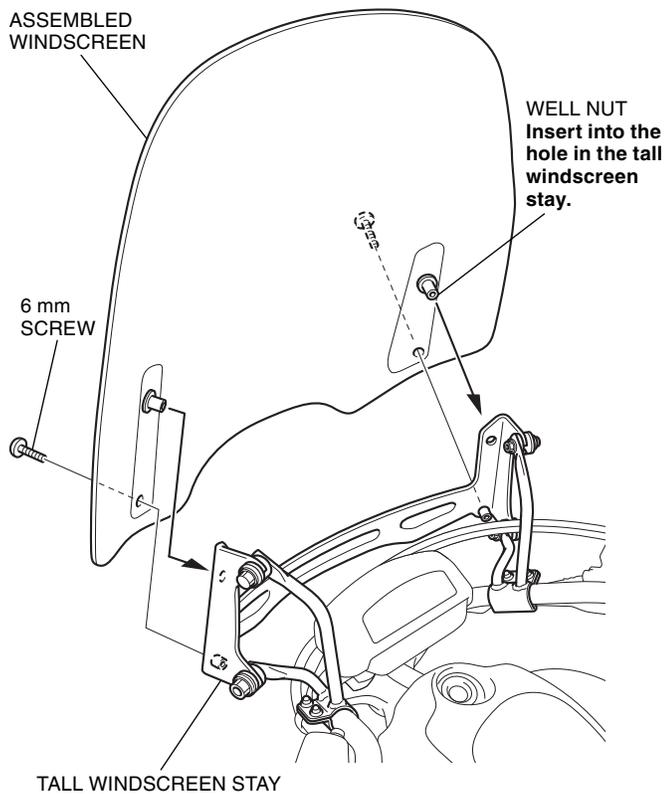

14. Align the windscreen assembly in accordance with the dimensions shown and check that the windscreen is positioned equally on both sides, then tighten the screws, bolts, and nuts to the specifications in the Torque Chart.

<Right side>

- When installing the tall windscreen stay, tighten the 8 mm flange bolt securely first.
- When installing the windscreen, tighten the upper 6 mm screw securely first.
- Repeat on the left side.
- The throttle cable slightly contacts with the tall windscreen stay while turning the handlebar to the left.

