



INSTALLATION INSTRUCTIONS

Accessory

CARBON FIBER KNEEPADS
P/N 08P61-MGE-200E

Application

VFR1200F

Publication No.


MII 13494

Issue Date

December 2010

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

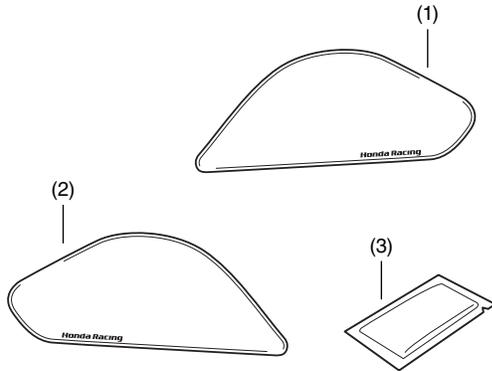

No.	Description	Qty
(1)	Right side kneepad	1
(2)	Left side kneepad	1
(3)	Alcohol pad	1


INSTALLATION

NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.


1. Clean the surface of the area shown using an alcohol pad.

ALCOHOL PAD
Thoroughly clean the area where the right side kneepad will be attached.

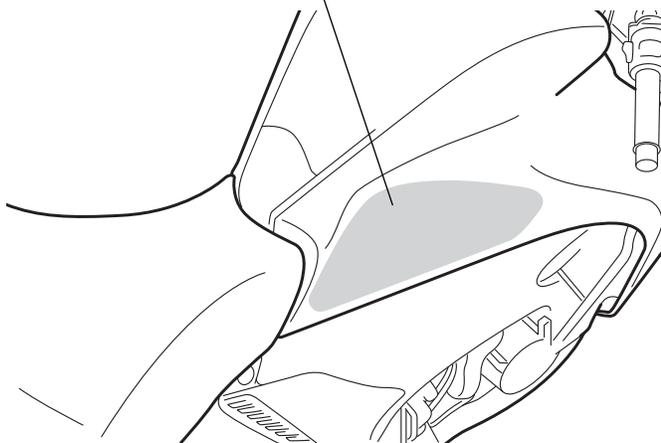

ALCOHOL PAD
Thoroughly clean the area where the left side kneepad will be attached.

2. Attach the left side kneepad in the position shown to follow the contours of the tank. Repeat this step on the right side.

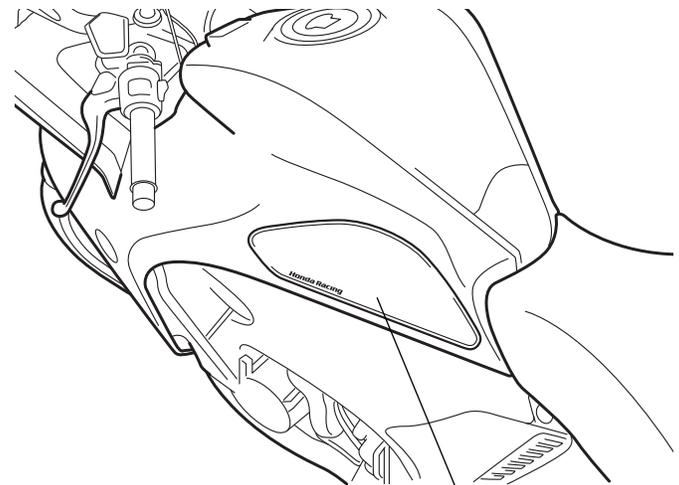

LEFT SIDE KNEEPAD
Remove the adhesive backing before attaching.

Attach according to the dimensions shown.

