



INSTALLATION INSTRUCTIONS

Accessory

AIR DEFLECTOR SET
P/N 08R81-MGE-100

Application

VFR1200F

Publications No.


MII 13068

Issue Date

February 2010

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

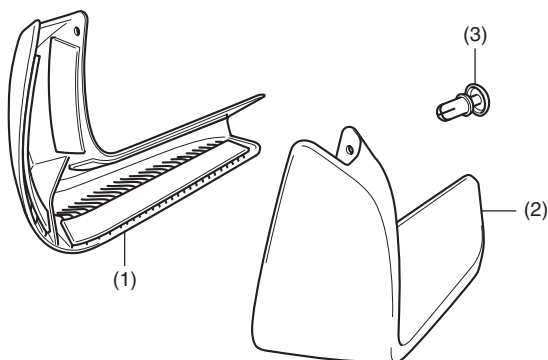

No.	Description	Qty
(1)	Right air deflector	1
(2)	Left air deflector	1
(3)	Clip	2

SUPPLIES REQUIRED

Electric drill
Drill bit (3.5 mm)
Marker
Electrical tape
Isopropyl alcohol
Shop towel

USE AND CARE INFORMATION



- Check the accessory mounts frequently.

INSTALLATION


NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.


- Position the left air deflector as shown and mark the position shown.

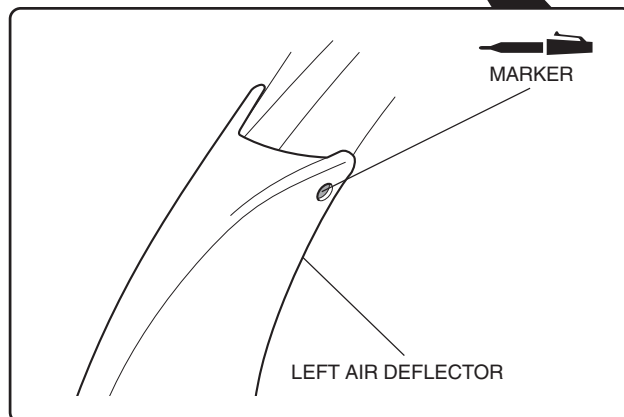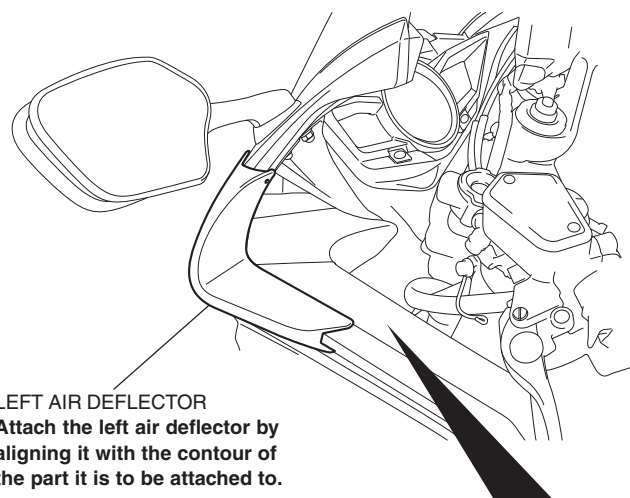



2. Drill at the marked point using an electric drill as shown.
- **Remove any burrs from the edge of the hole.**

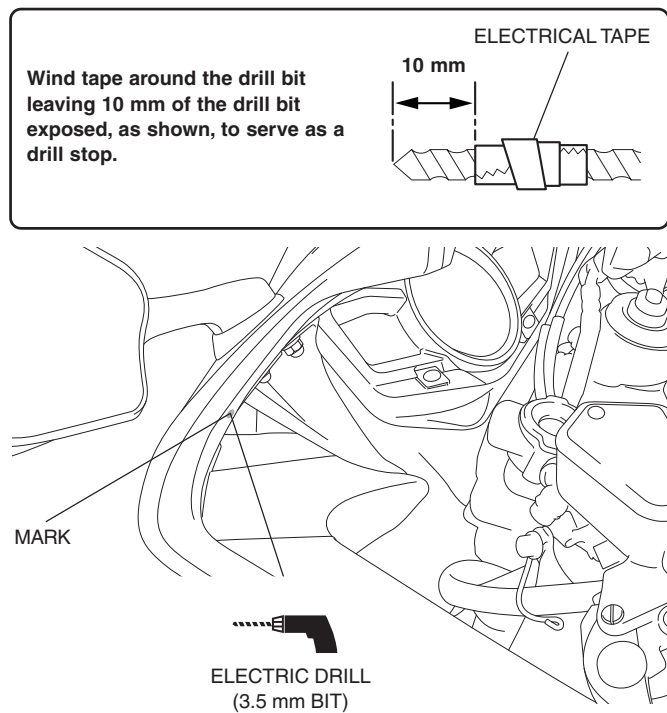


3. Peel off the adhesive backing on the rear of the left air deflector as shown.

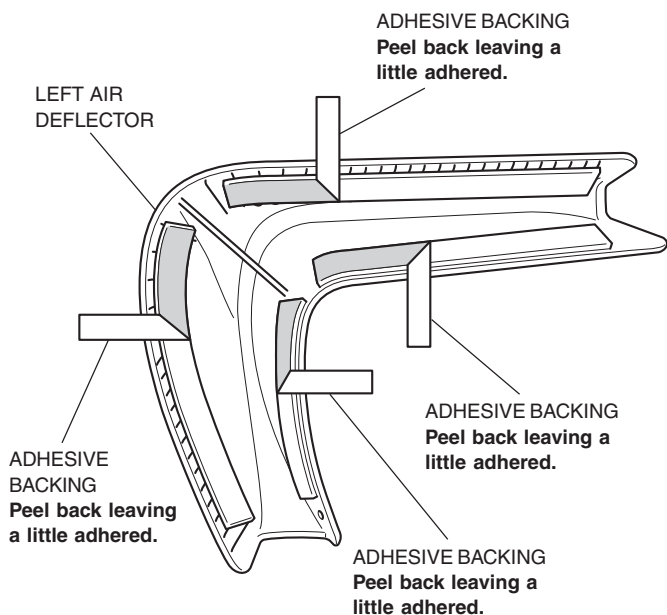


4. Clean the surface of the area shown using isopropyl alcohol.

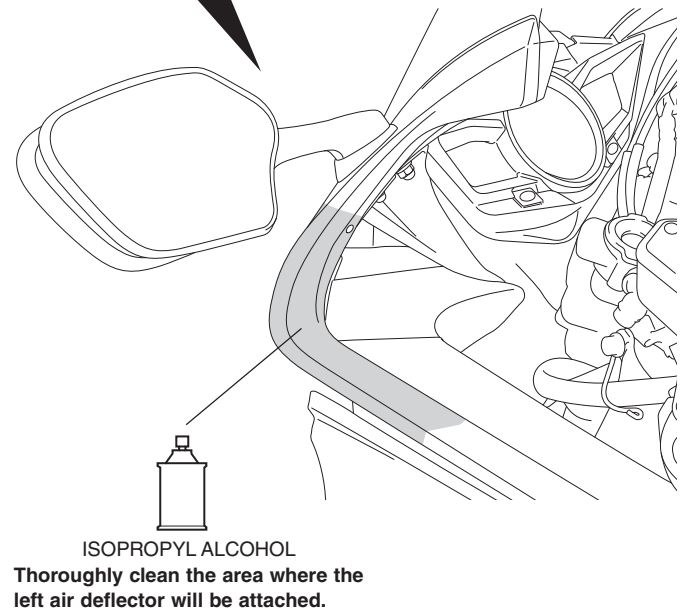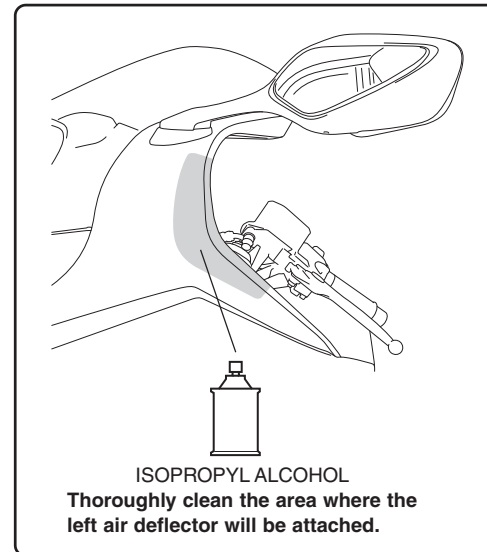



5. Align the mounting hole of the left air deflector with the drilled hole, then attach the left air deflector as shown.

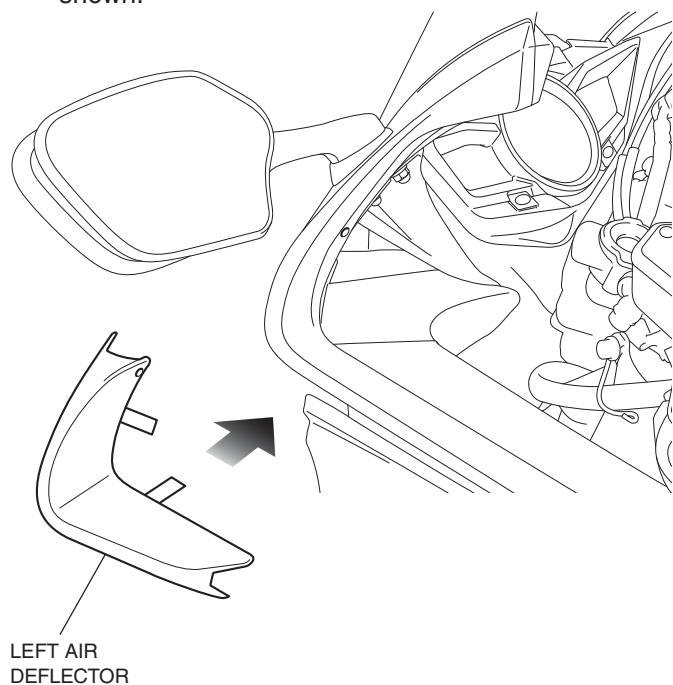

6. Install the clip as shown.

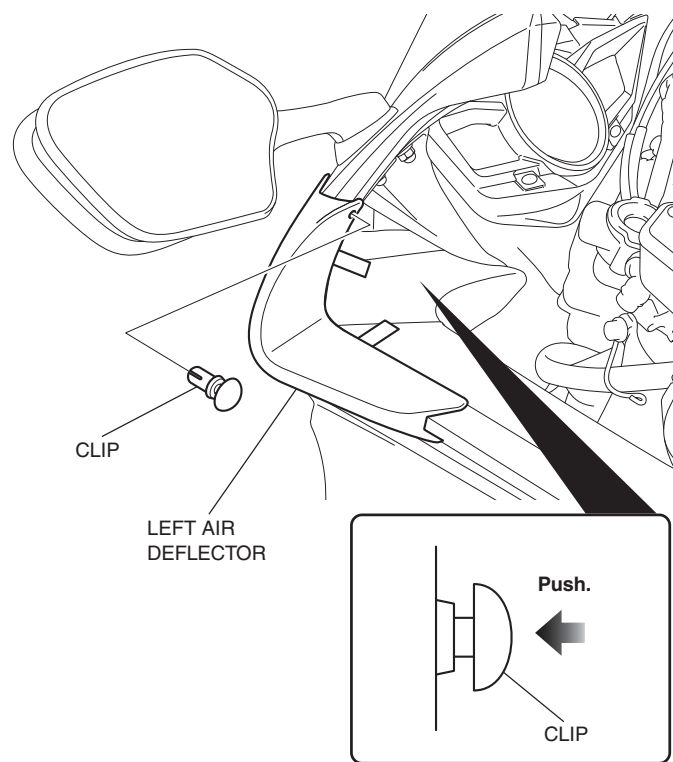

7. Pull out the adhesive backing of the left air deflector as shown.

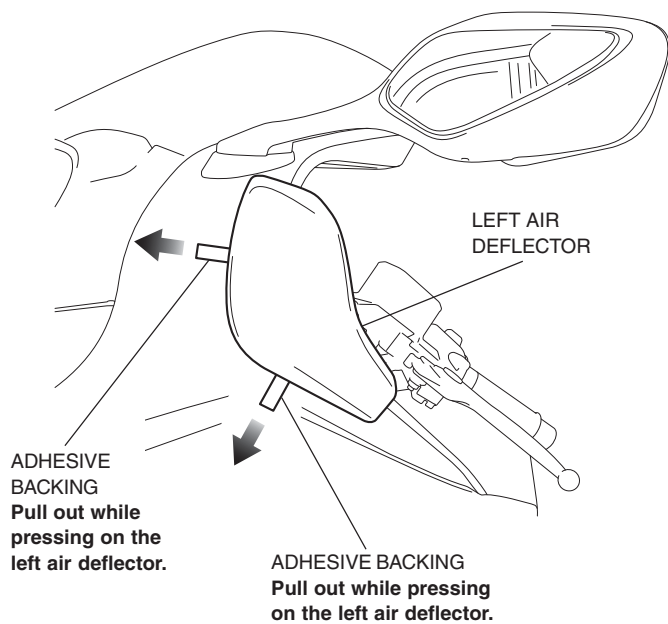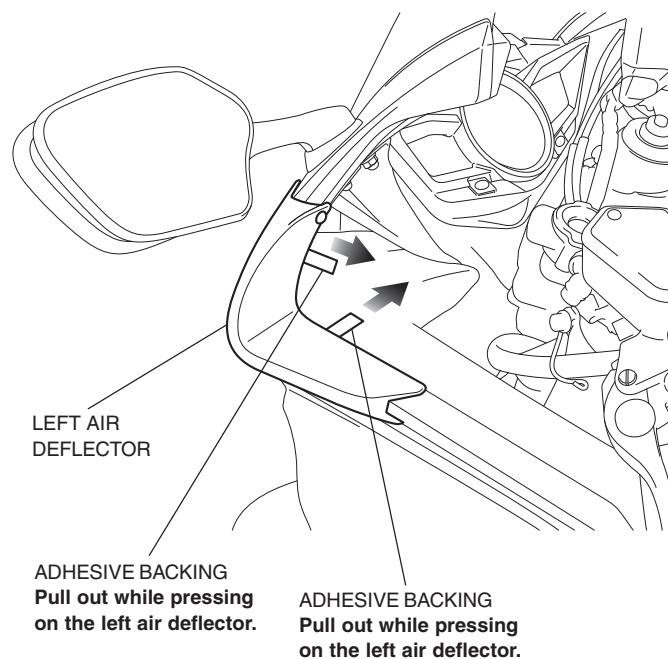

8. Apply pressure to the adhesive backed areas of left air deflector.
9. Repeat on the right side.