

HONDA

INSTALLATION INSTRUCTIONS


Accessory
DEFLECTOR
P/N 08R70-MGH-J20

Application
VFR1200X/XD

Publication No.
MII 15640
Issue Date
April 2016

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

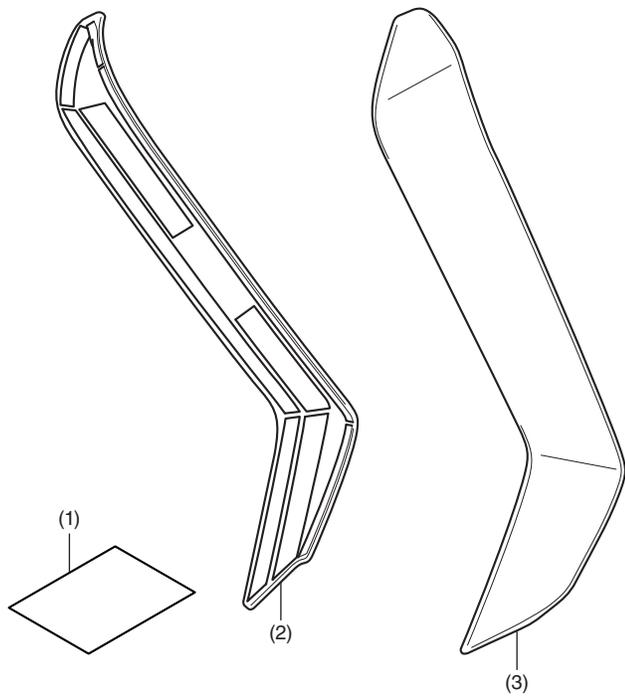

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Right side deflector	1
(3)	Left side deflector	1

SUPPLIES REQUIRED

Isopropyl alcohol
Shop towel


INSTALLATION

NOTE:


- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding the motorcycle.

1. Clean the surface of the area shown using isopropyl alcohol and a shop towel.



<Left side>

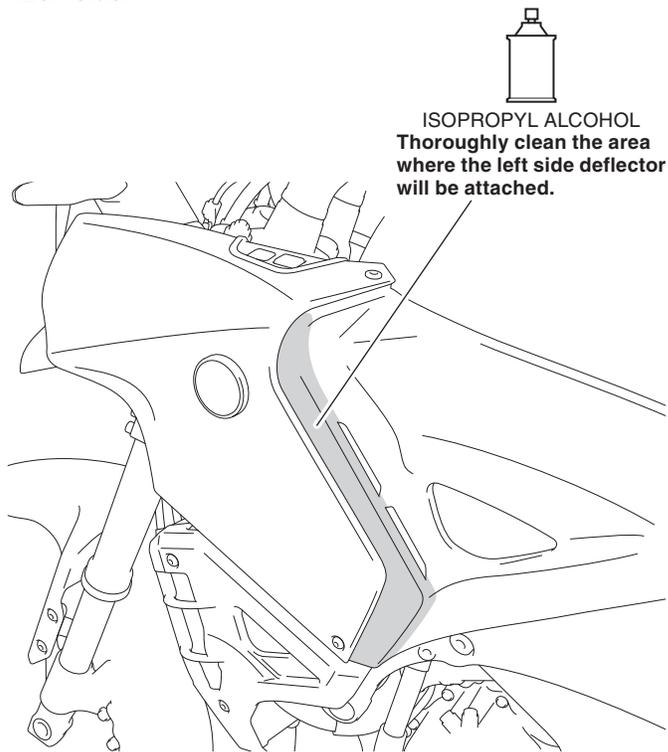


2. Peel off the adhesive backing on the rear of the left side deflector as shown.

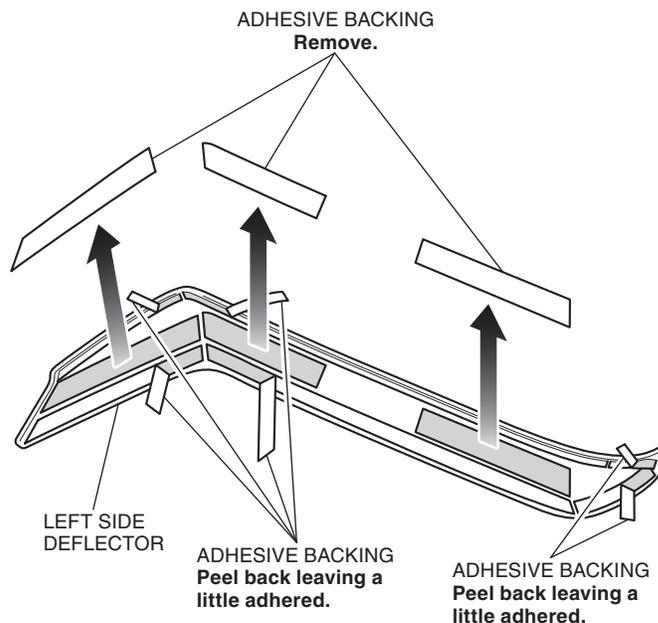

3. Attach the left side deflector by aligning it with the contour of the part it is to be attached to.

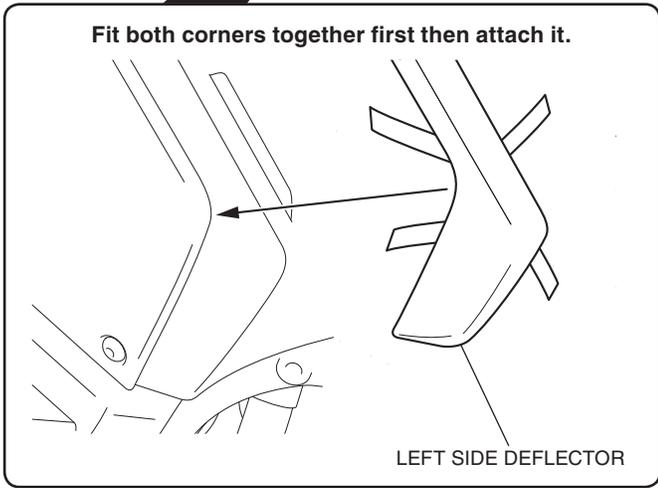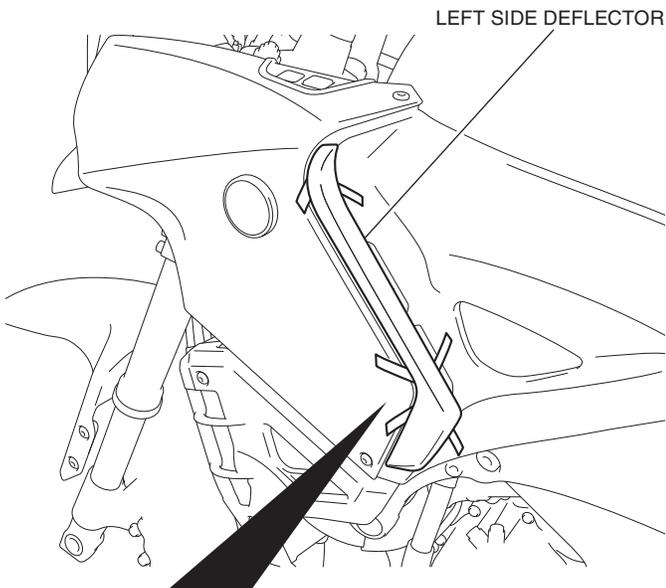

4. Remove the adhesive backing as shown.

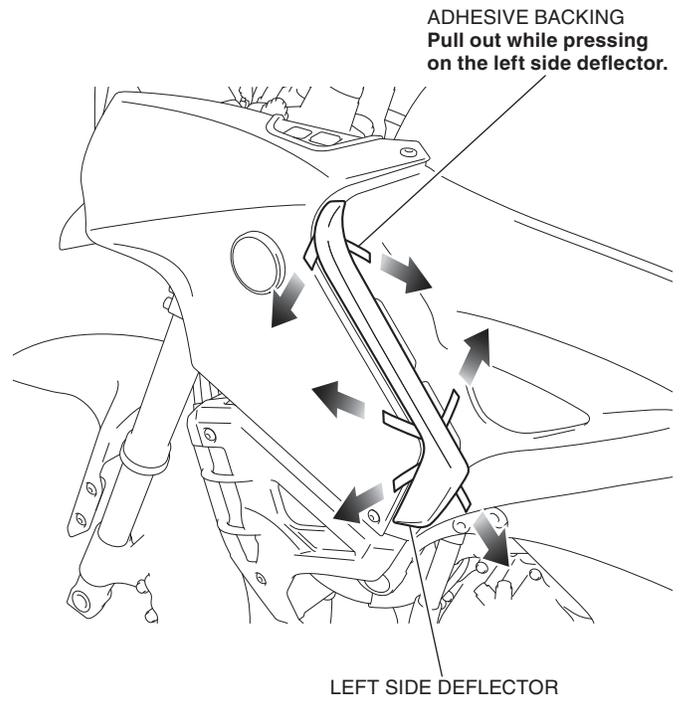

5. Apply adequate pressure to the attached left side deflector.
6. Repeat on the right side.