



EVOTECH®
P E R F O R M A N C E


Installation Instructions


HONDA CBR500 R TAIL TIDY


Product Reference - 13293


Kit Contents


- | | |
|-----------------------------------|-------------------------------------|
| A 1 x Main Tail Tidy | H 2 x M3 - 12 Black Screws |
| B 1 x Plate Light Bracket | I 2 x Plastic Screws |
| C 1 x LED Light Unit | J 2 x Plastic Nuts |
| D 1 x Reflector Bracket | K 2 x Male Bullet Connectors |
| E 1 x Wiring Connector | L 4 x M6 x 30 Black Screws |
| F 1 x Reflector | M 4 x M6 Nyloc Nuts |
| G 2 x M4 - 10 Black Screws | N 5 x Cable Ties |

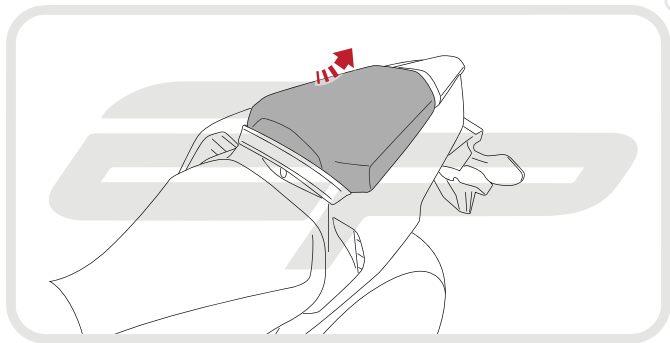


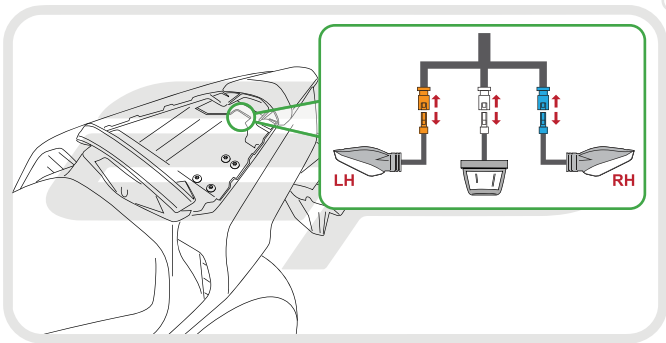


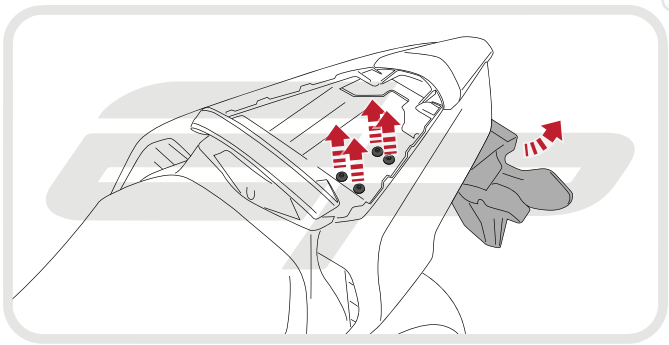

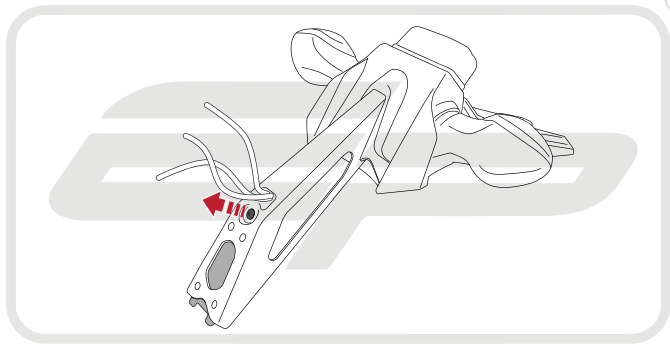


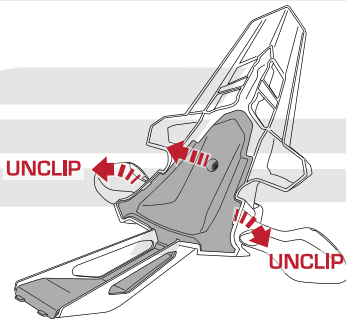

Repeat for LH and RH

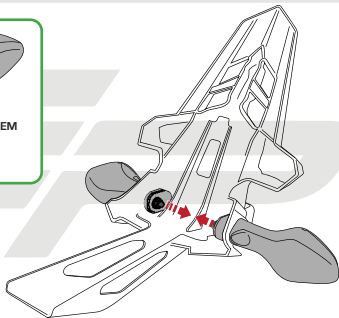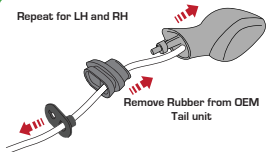

Re-fit OEM indicator rubbers

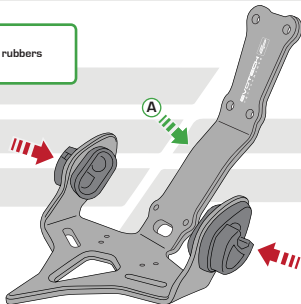


Re-fit OEM indicators




Caution

Ensure indicators are installed on the correct sides - drain holes should face down

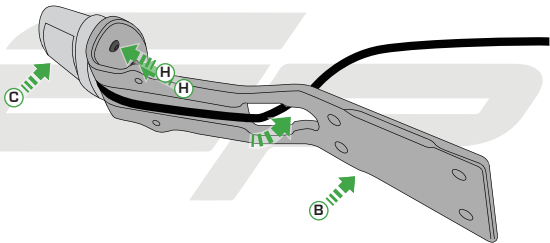




Feed cable tie through tail tidy
so the head sits inside the
slot on the outer face

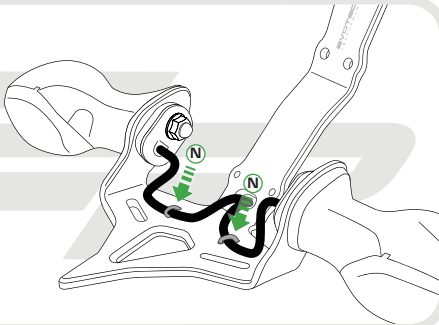





Caution

Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

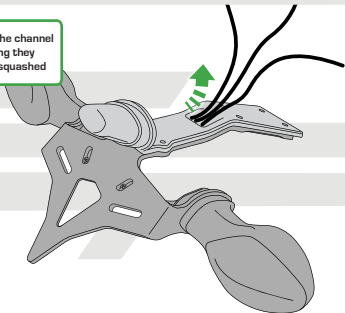


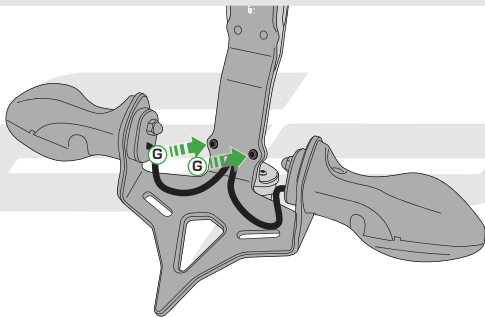


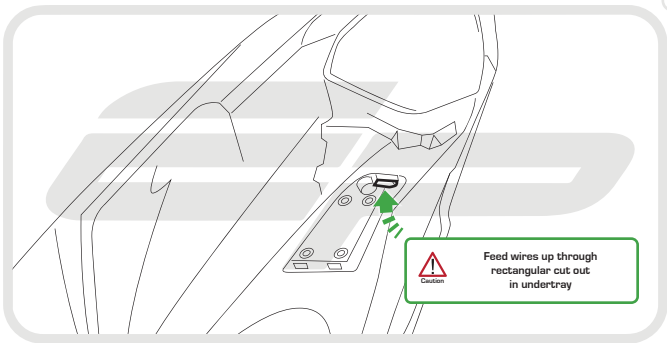


Caution

Feed wires up through
rectangular cut out
in undertray

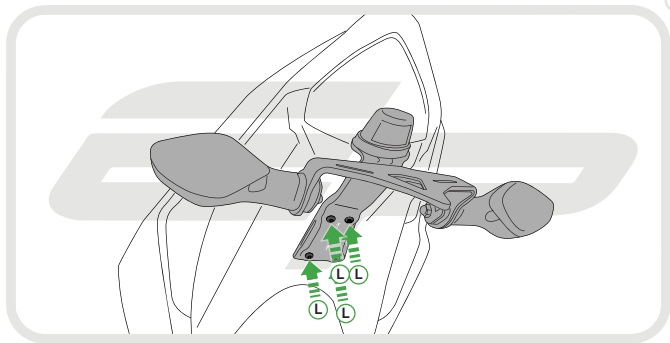


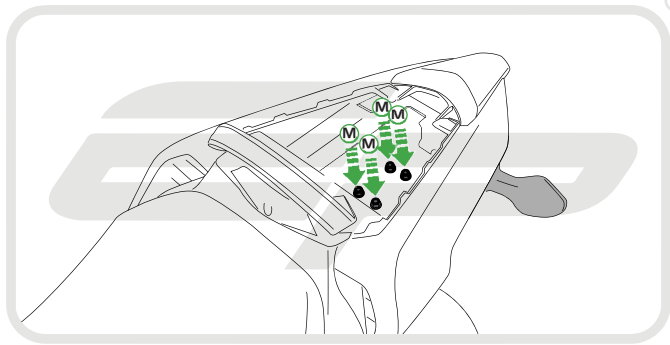

EVOTECH[®]
P E R F O R M A N C E

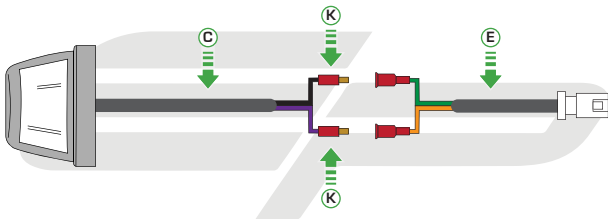

Reflector Bracket Installation

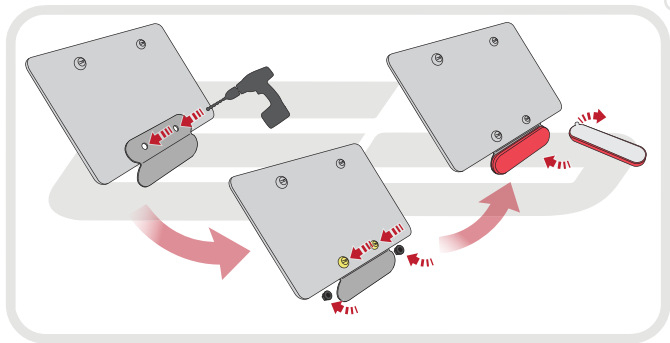

EVOTECH[®]
P E R F O R M A N C E



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com