




EVOTECH®
P E R F O R M A N C E


Honda CBR650F / CB650F
Tail Tidy


Installation Instructions


Kit Contents PRN013920


- A** 1 x Oval Light
- B** 1 x Reflector Kit
- C** 1 x Loom Connector
- D** 2 x M3 x 10mm Black Button Head
- E** 2 x P Clips
- F** 3 x M6 x 16mm Black Button Head
- G** 3 x M6 Flange Nuts
- H** 4 x M3 x 6mm Black Button Head
- I** 4 x M4 x 8mm Black Button Head
- J** 4 x M4 x 12mm Countersink Screws

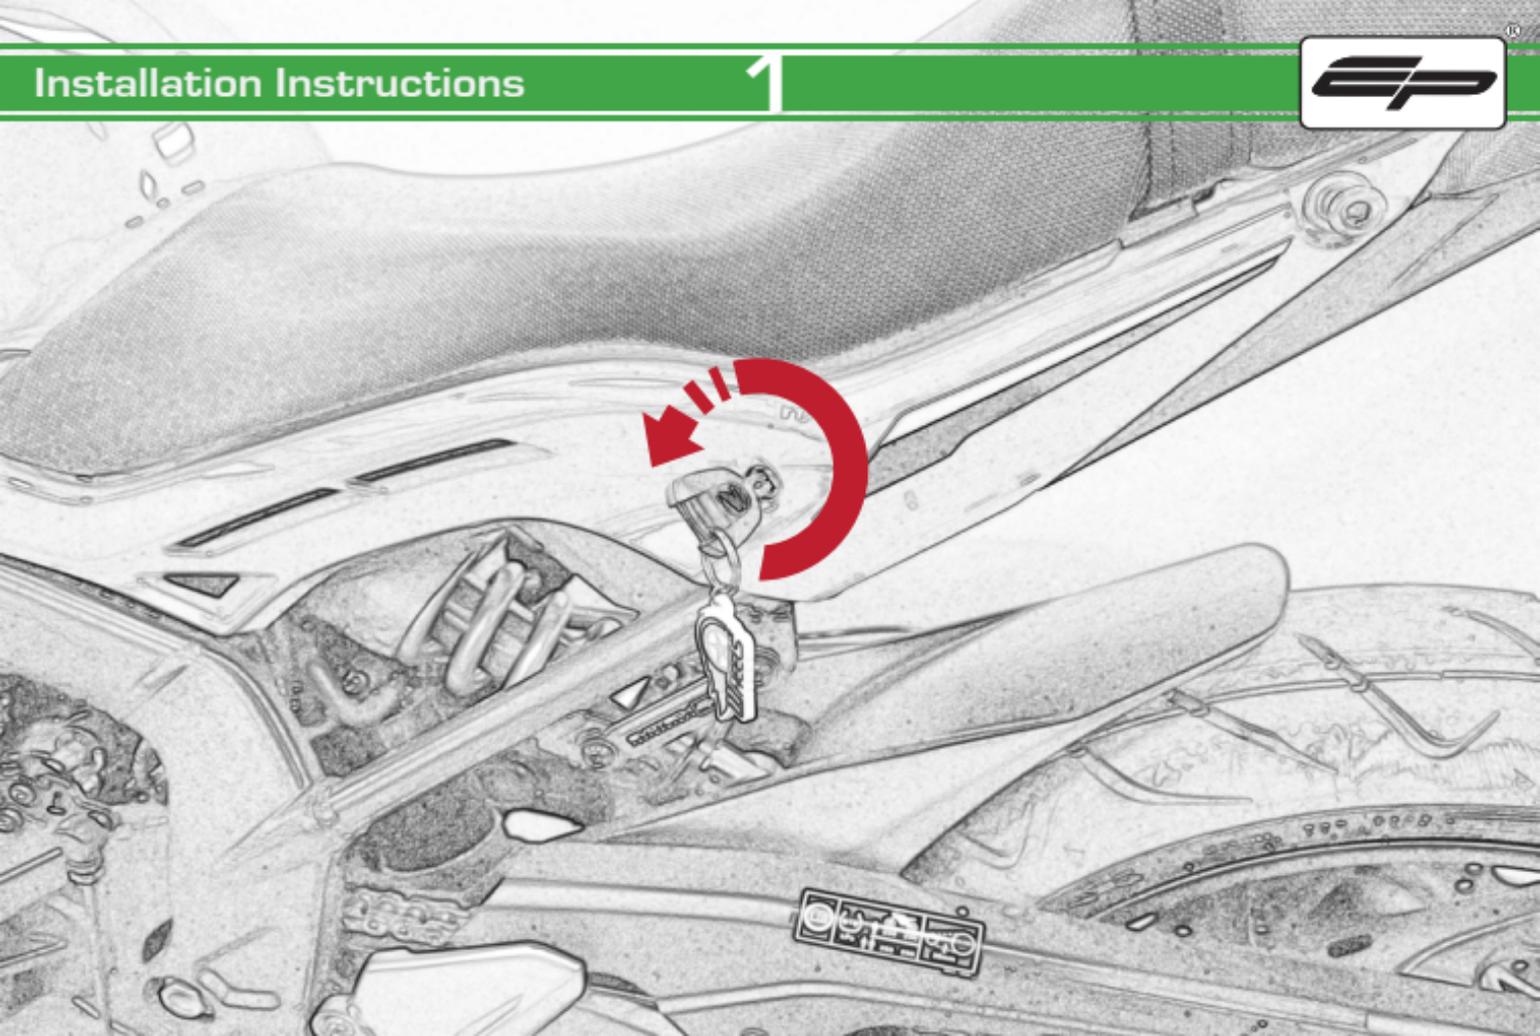


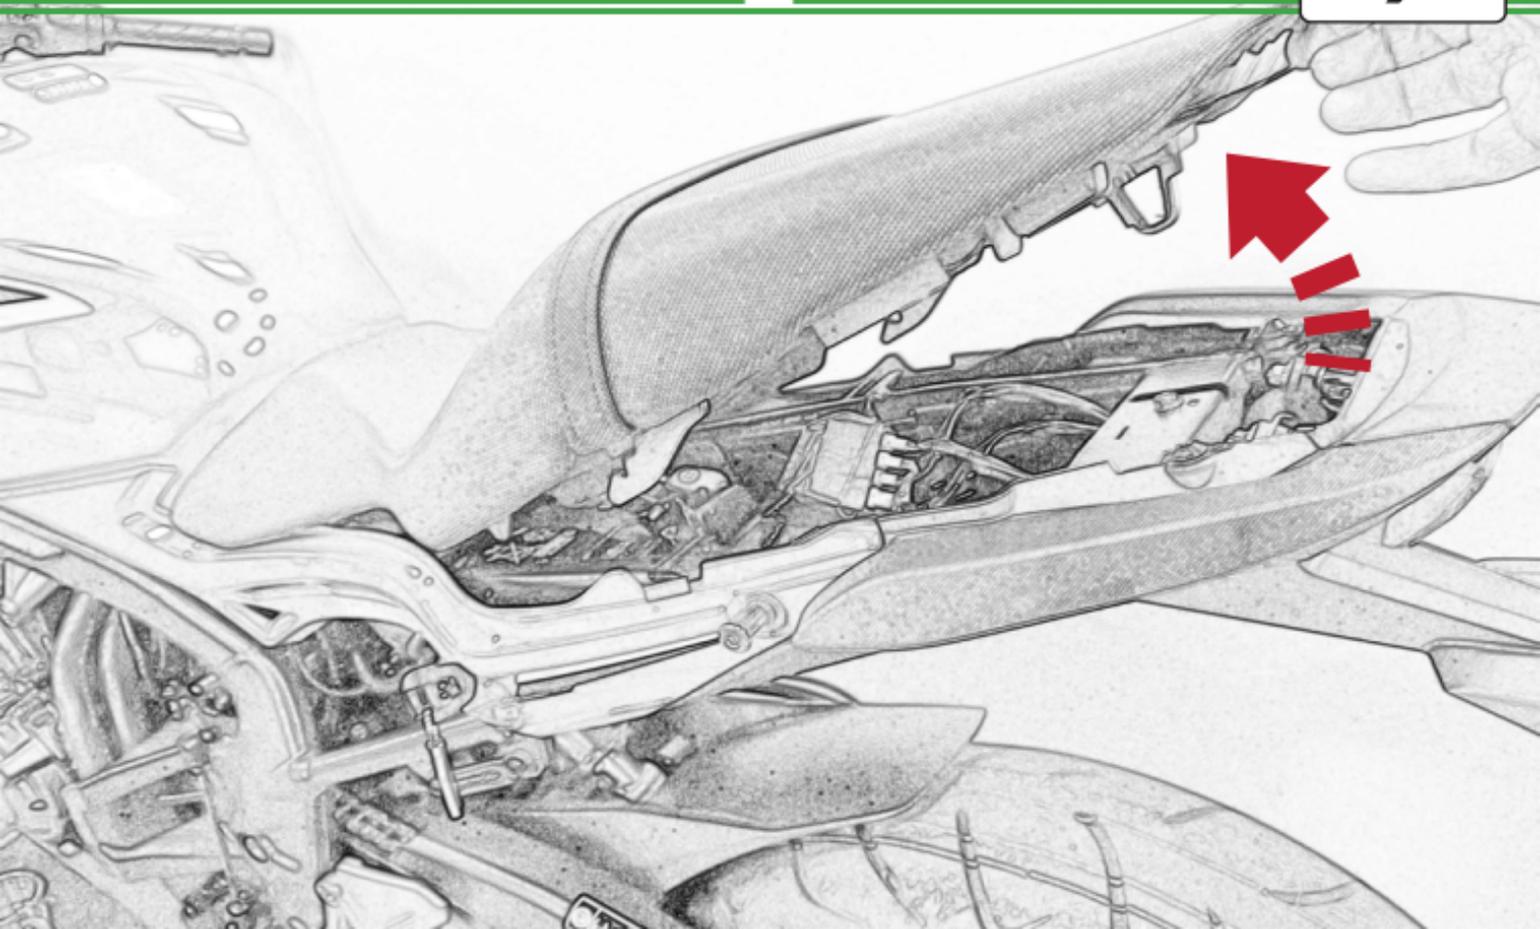


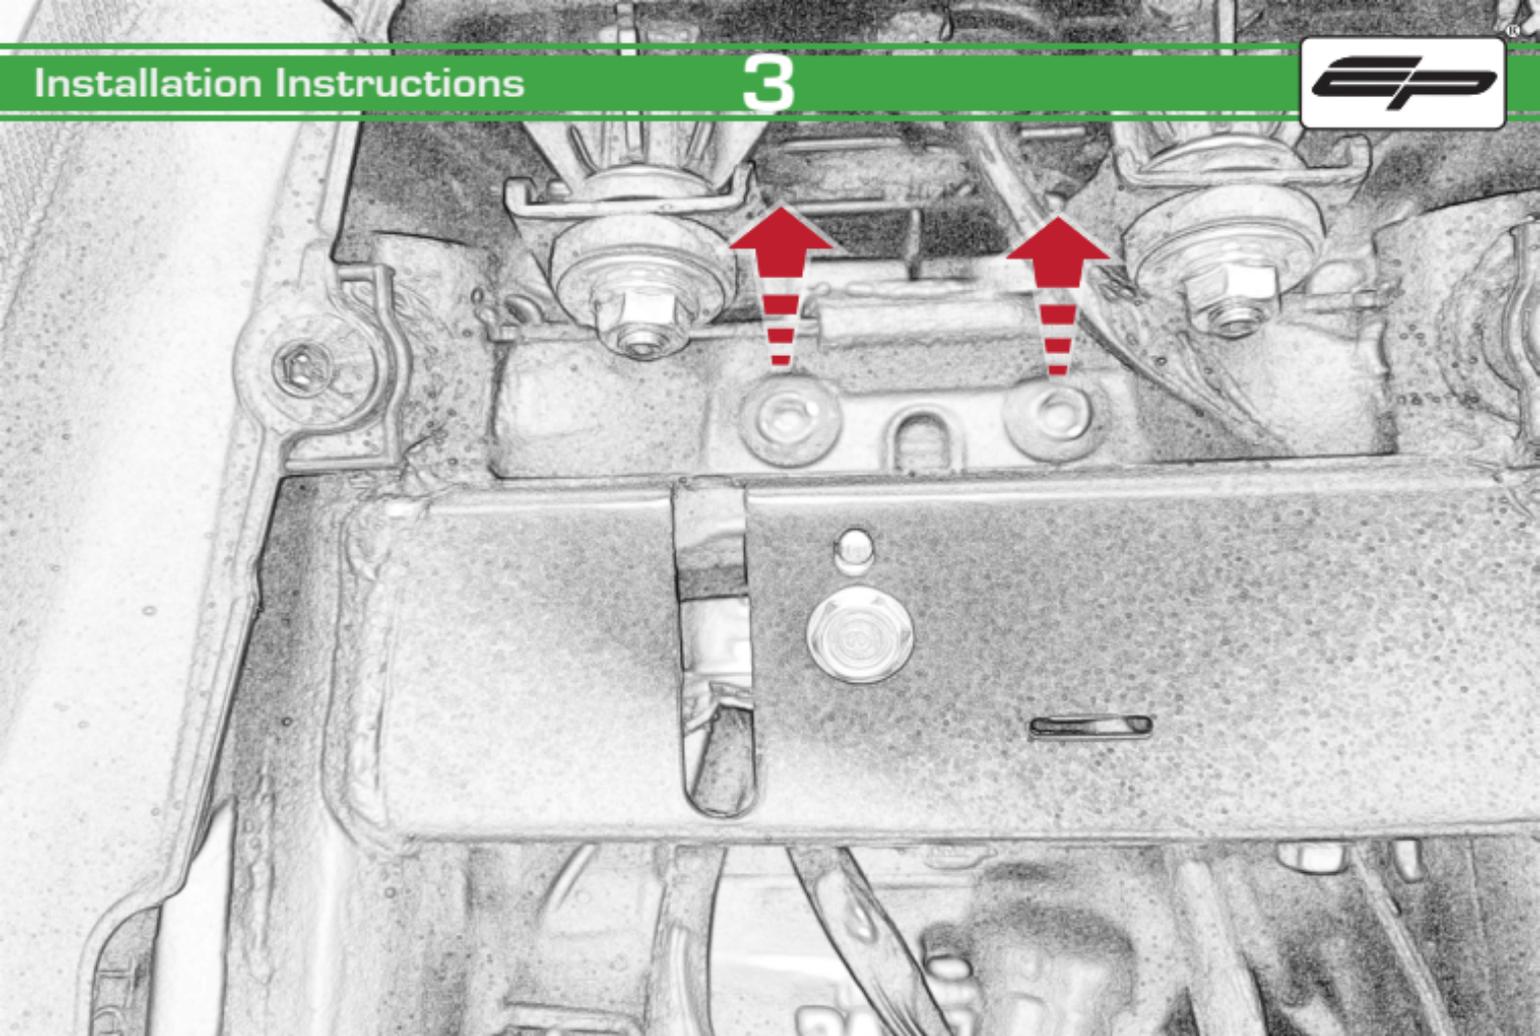


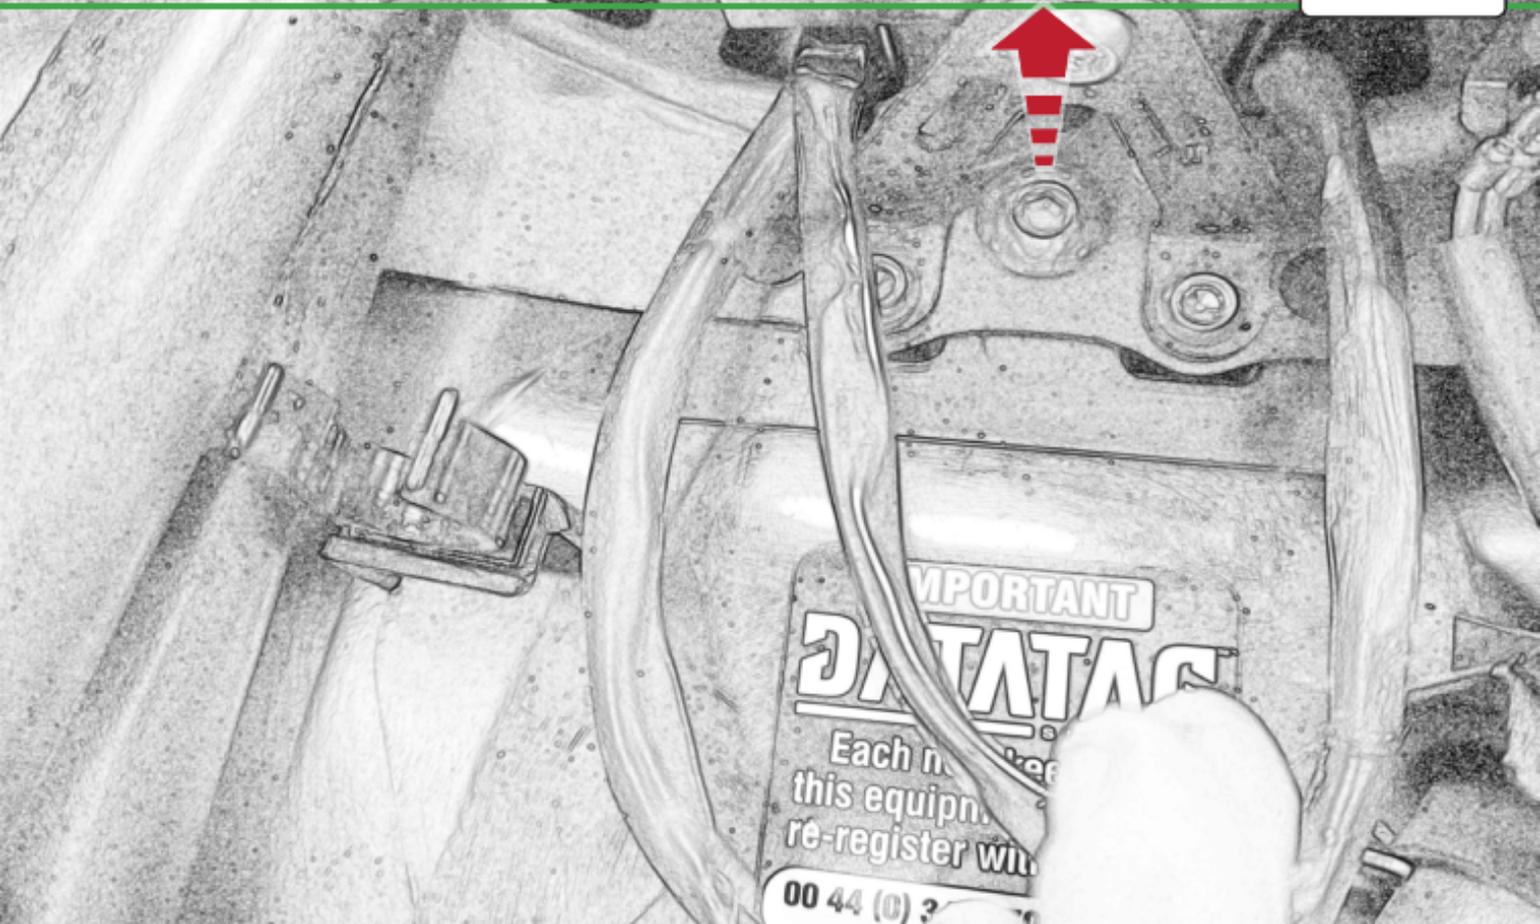


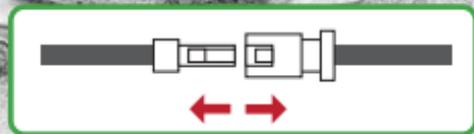


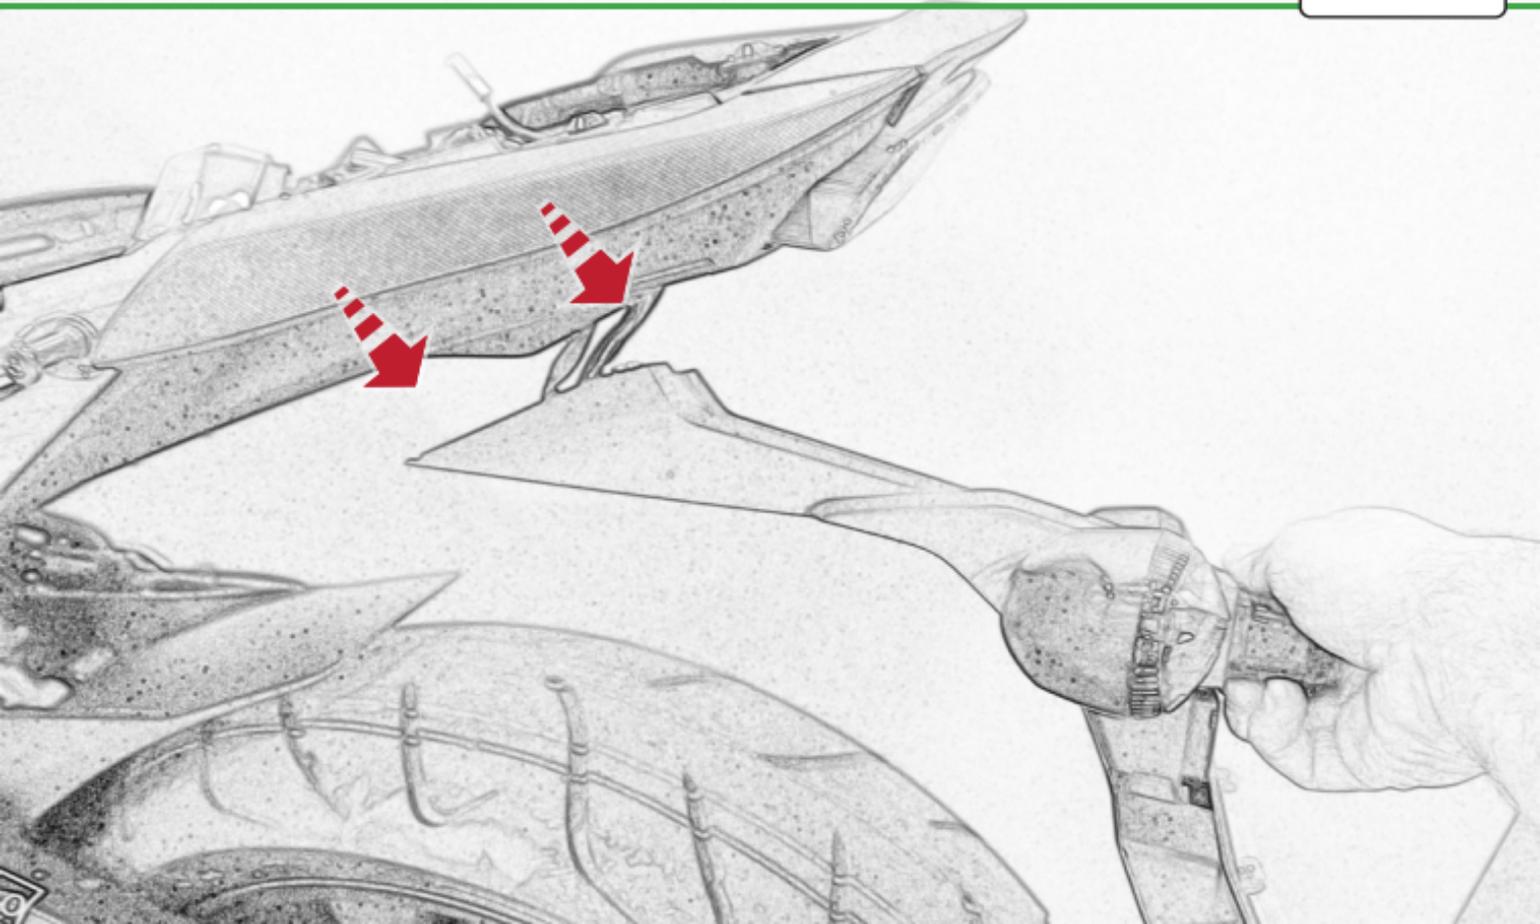


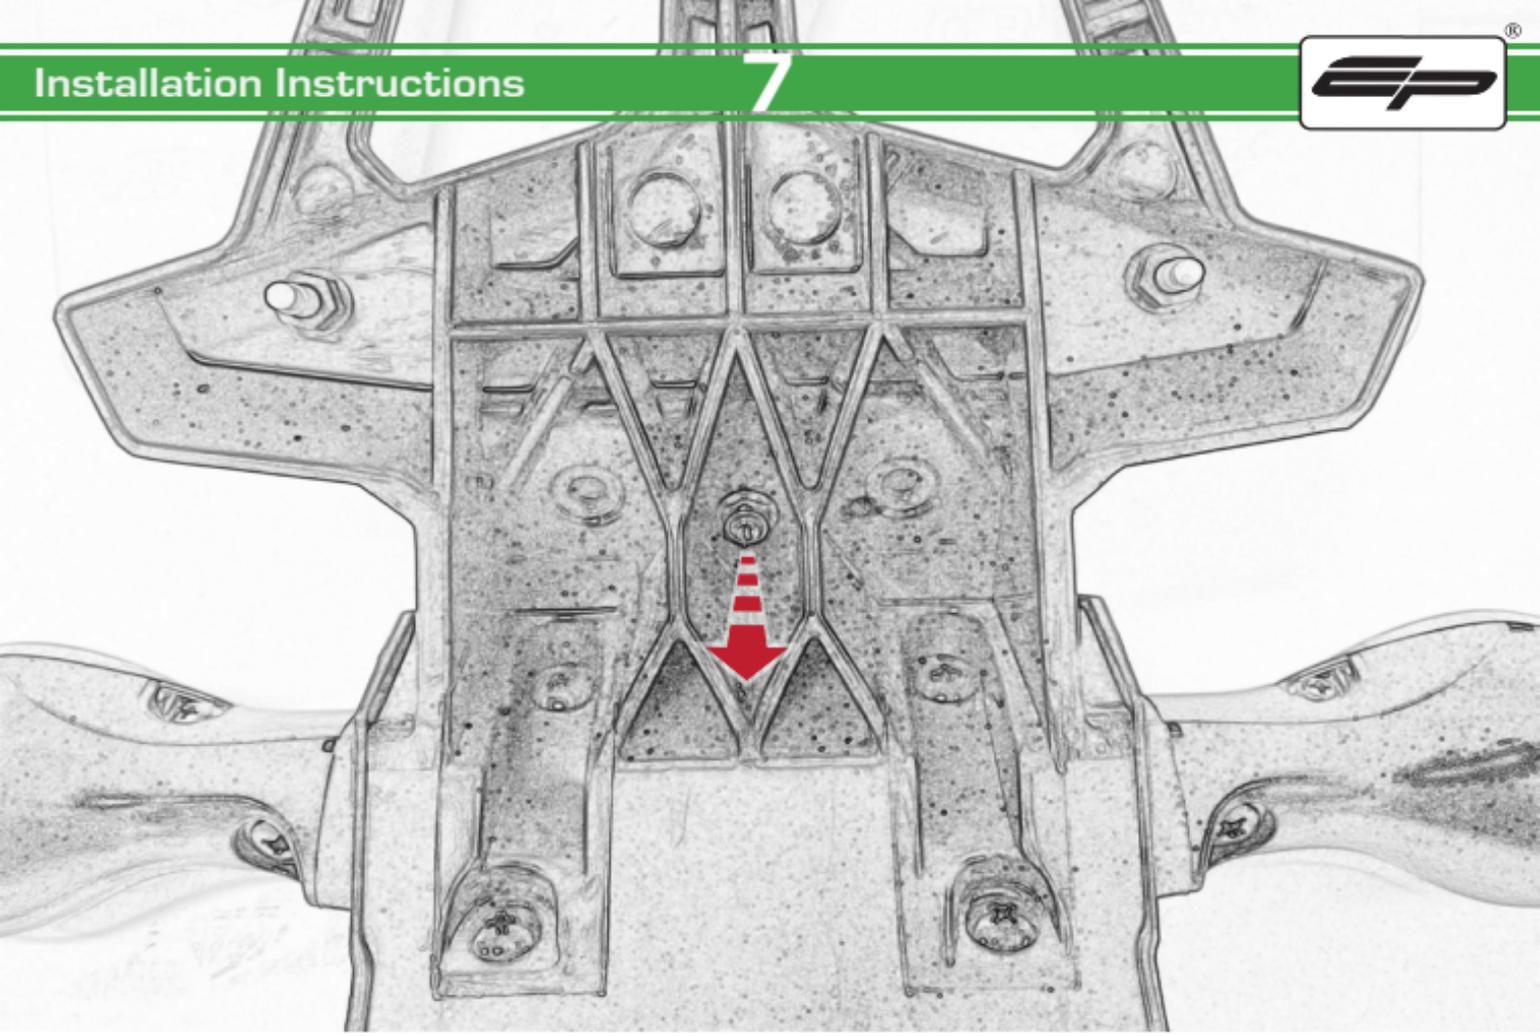


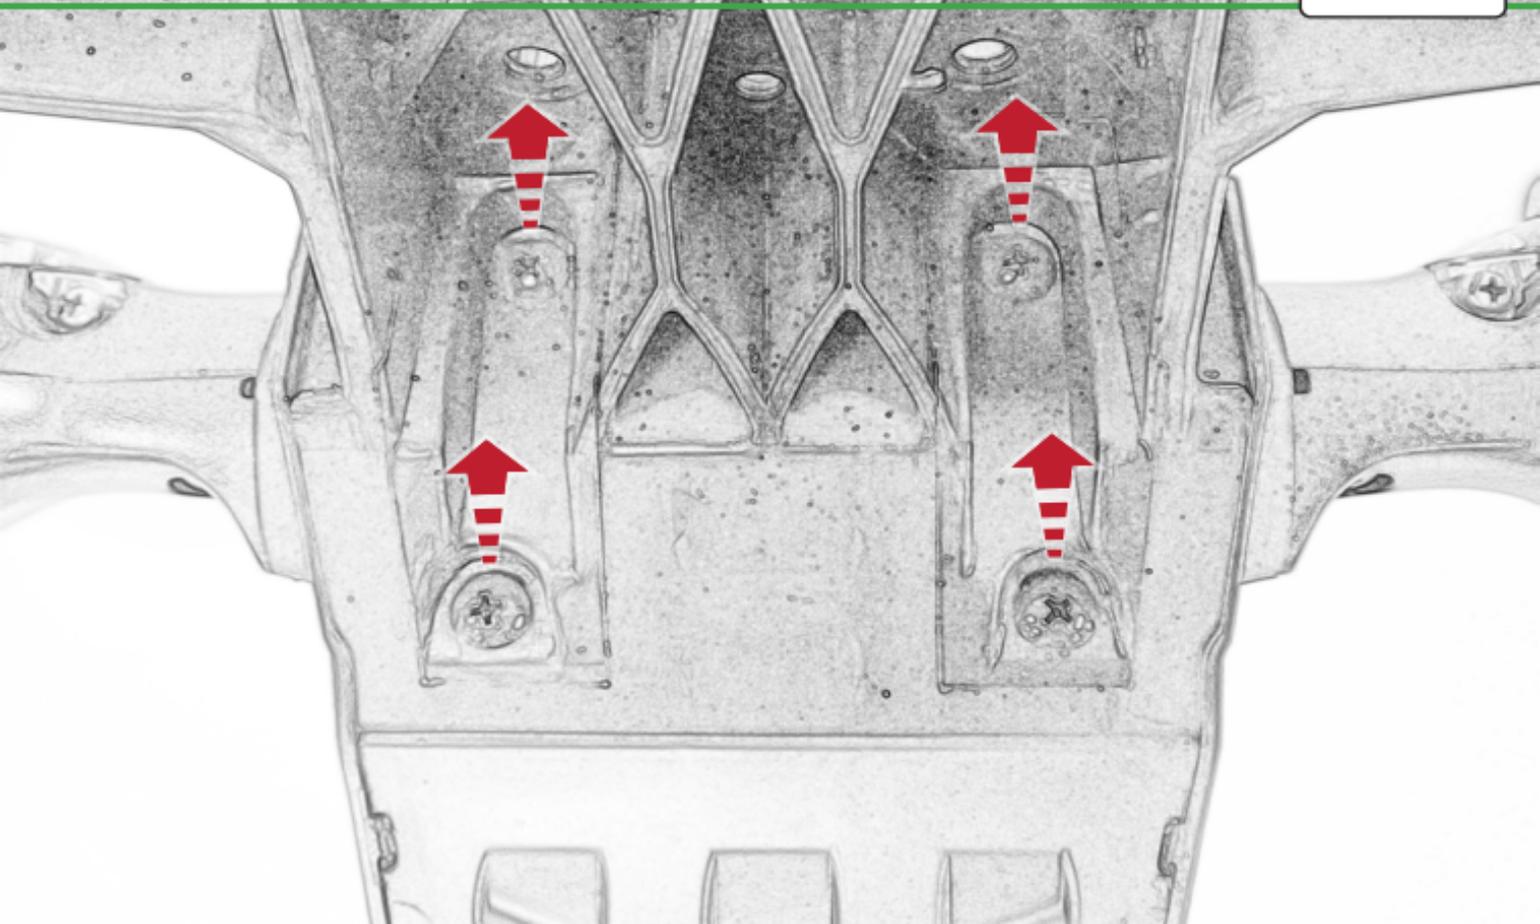

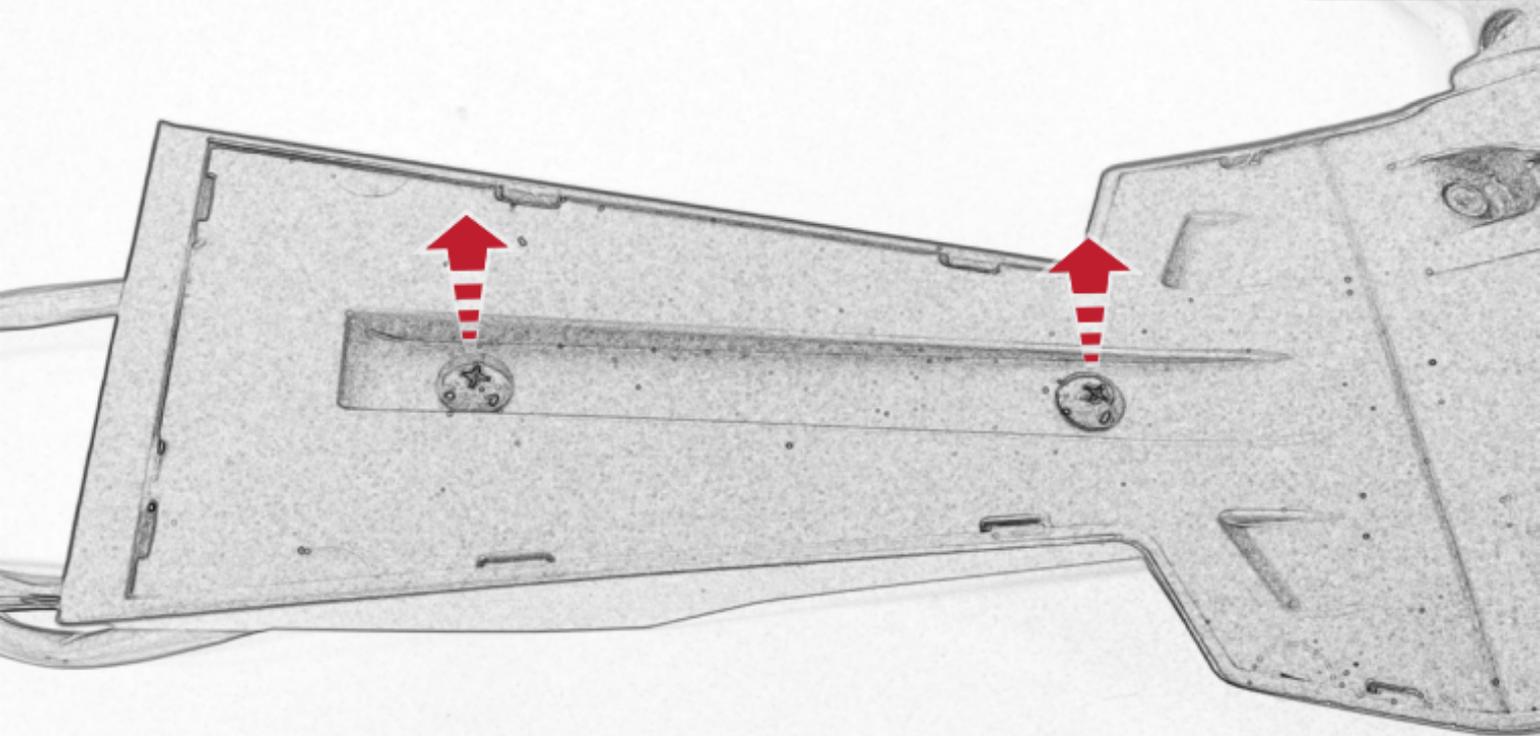


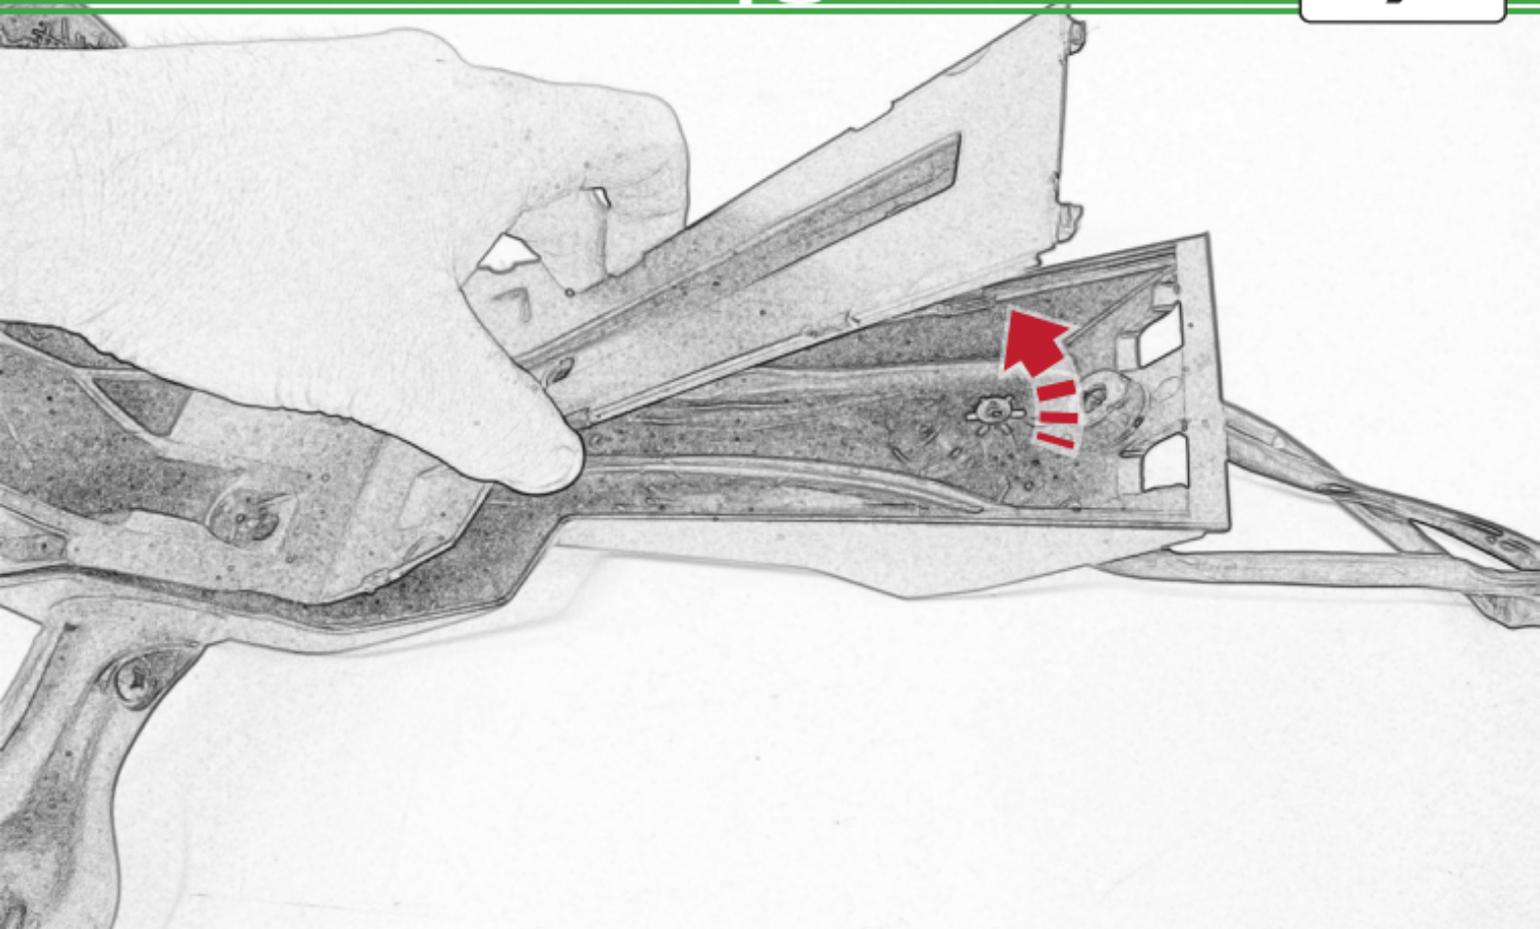

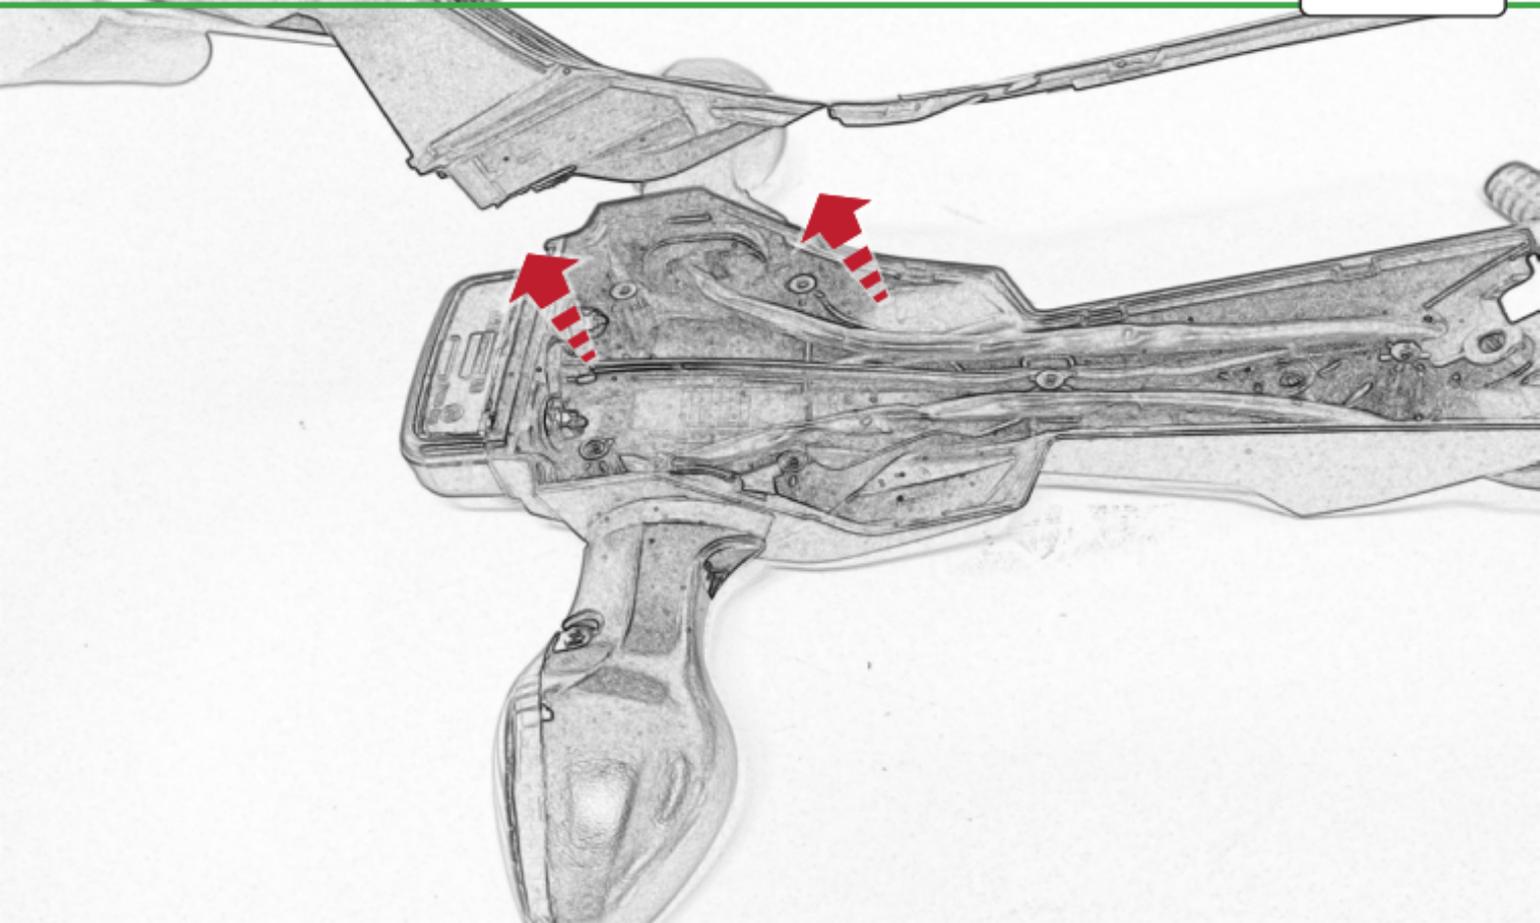


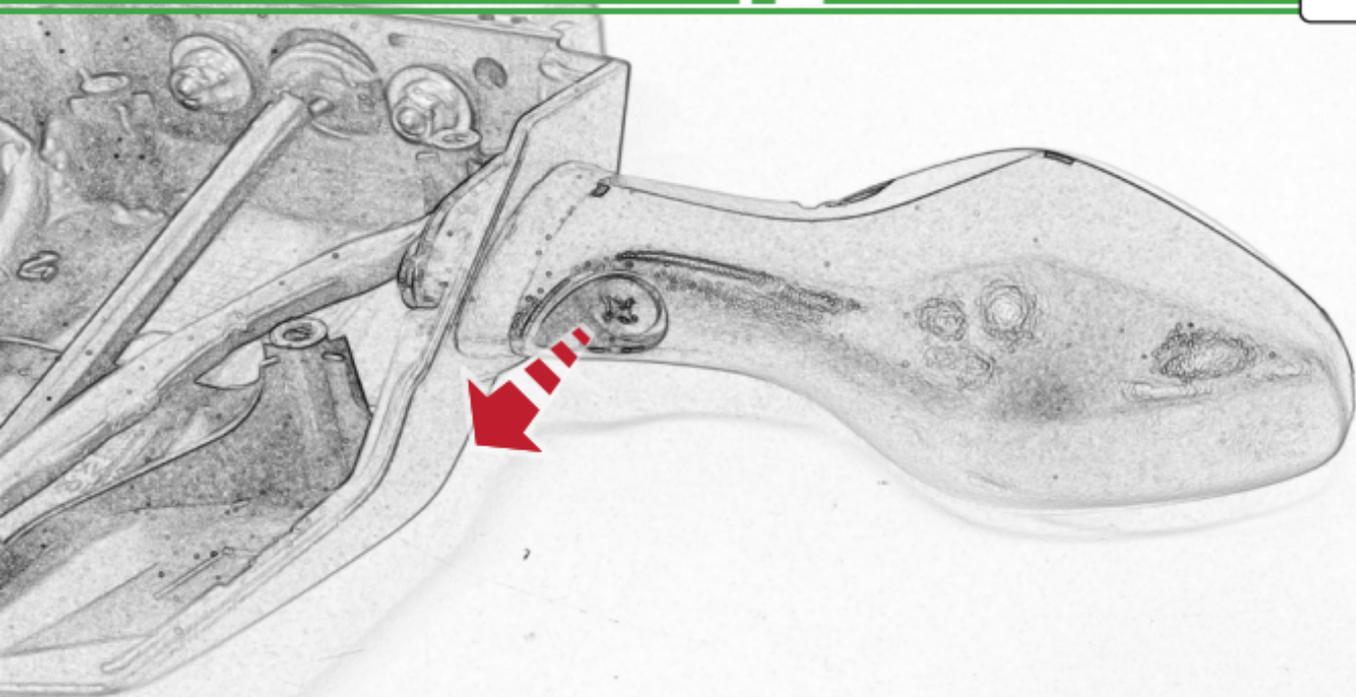


Repeat
Both Sides

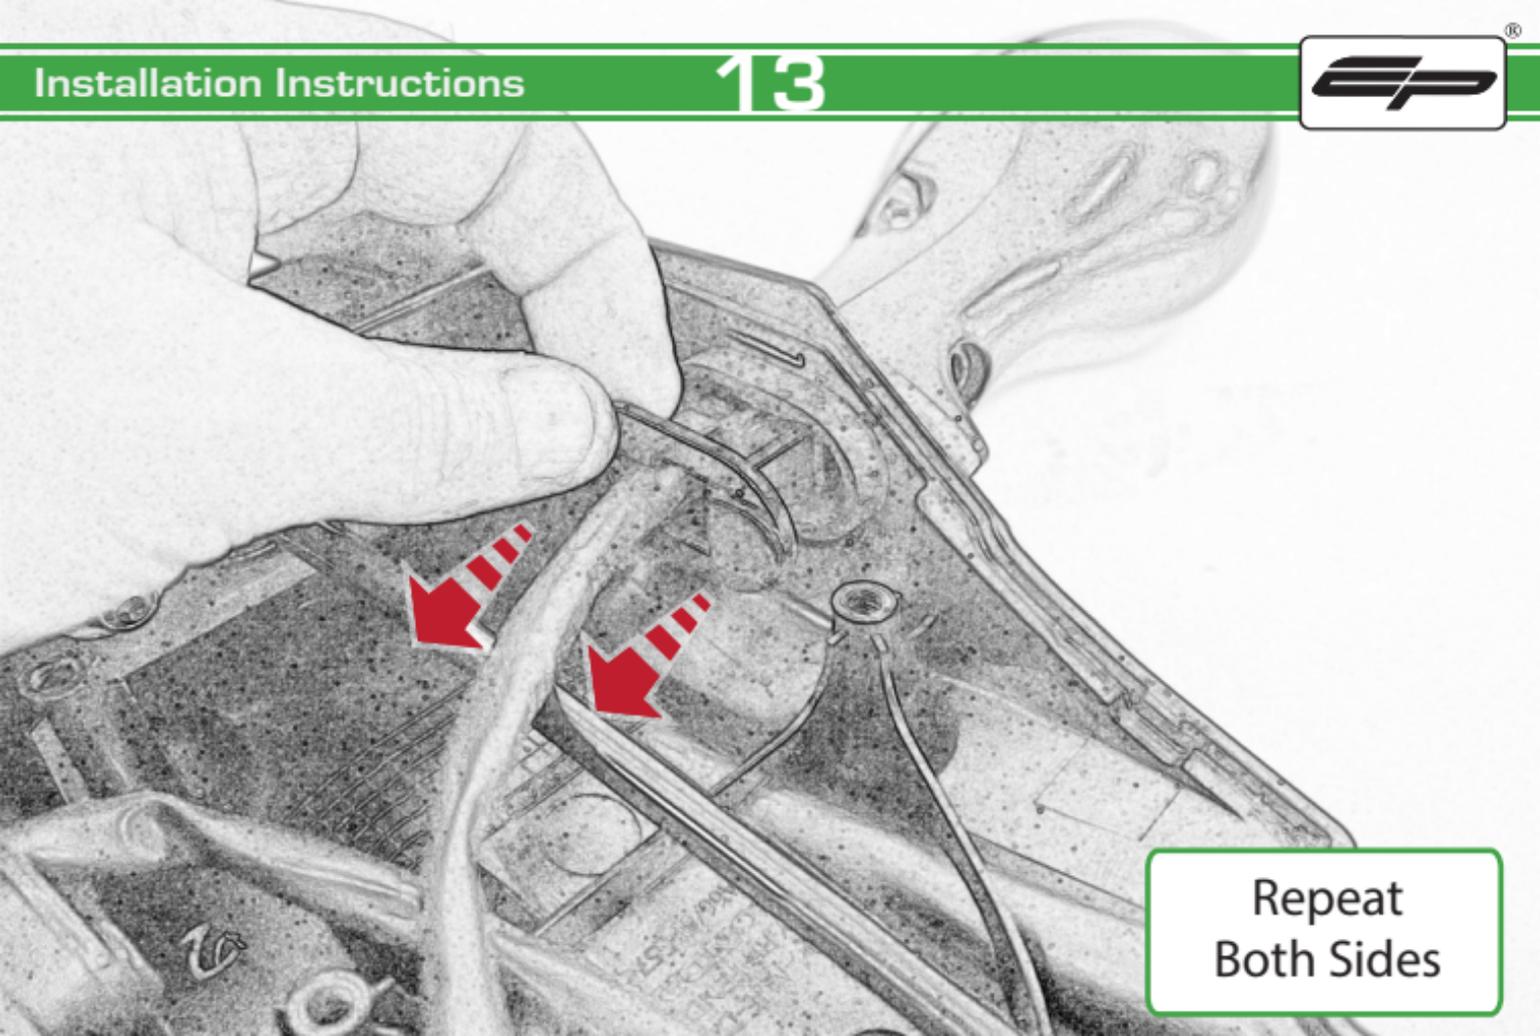


Repeat
Both Sides

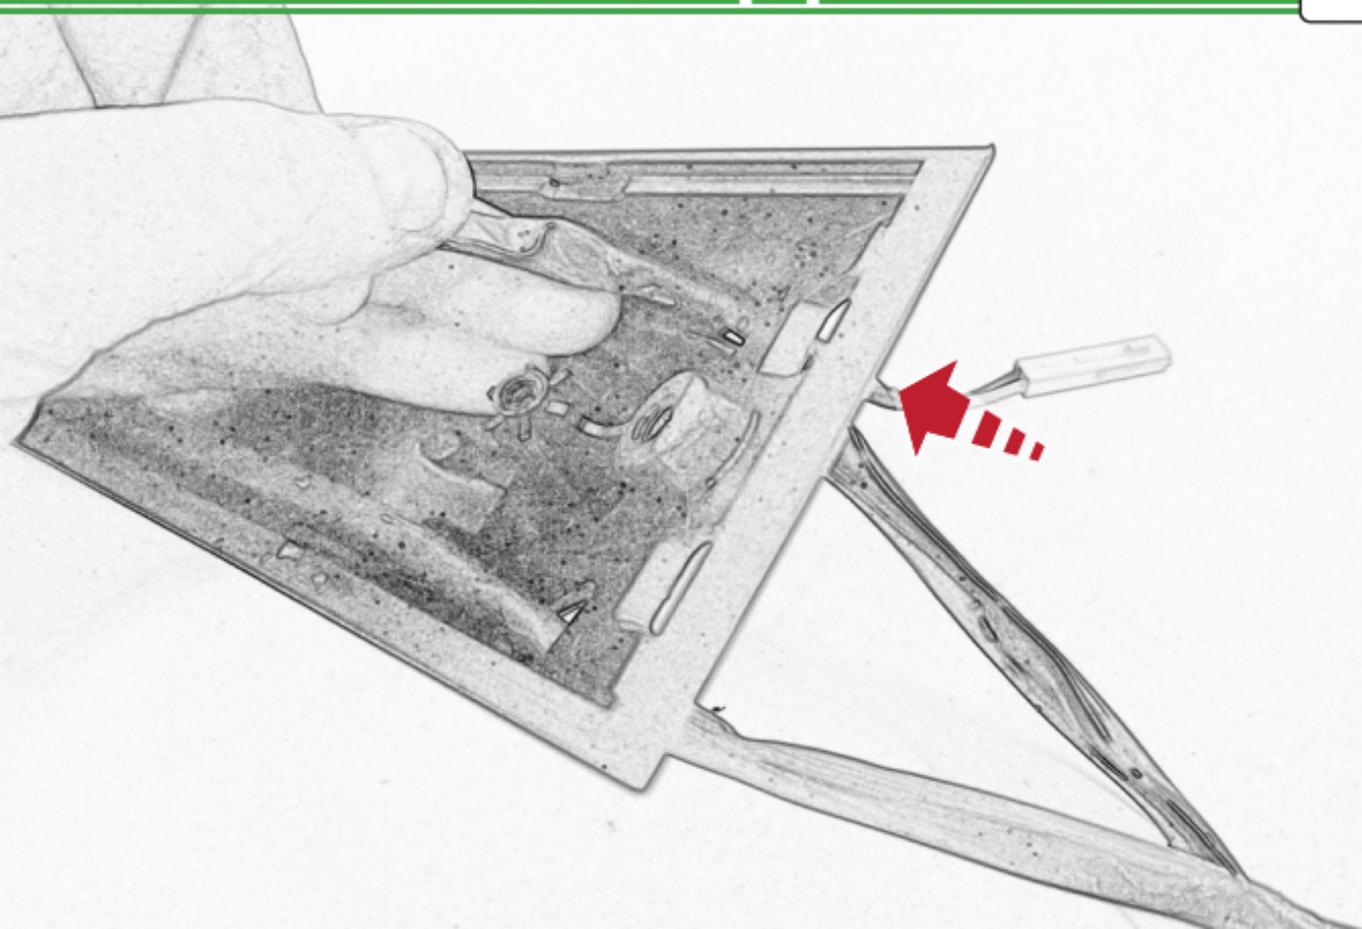


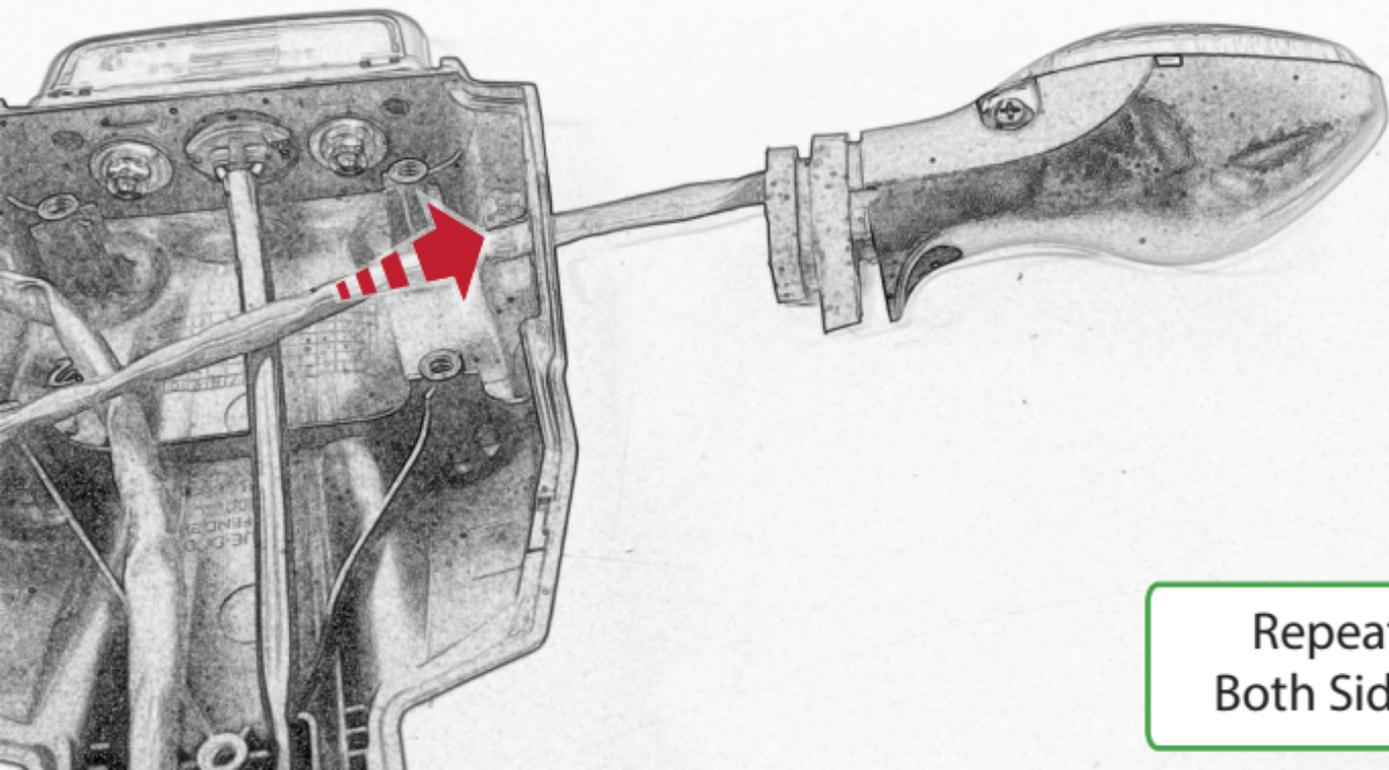

Repeat
Both Sides

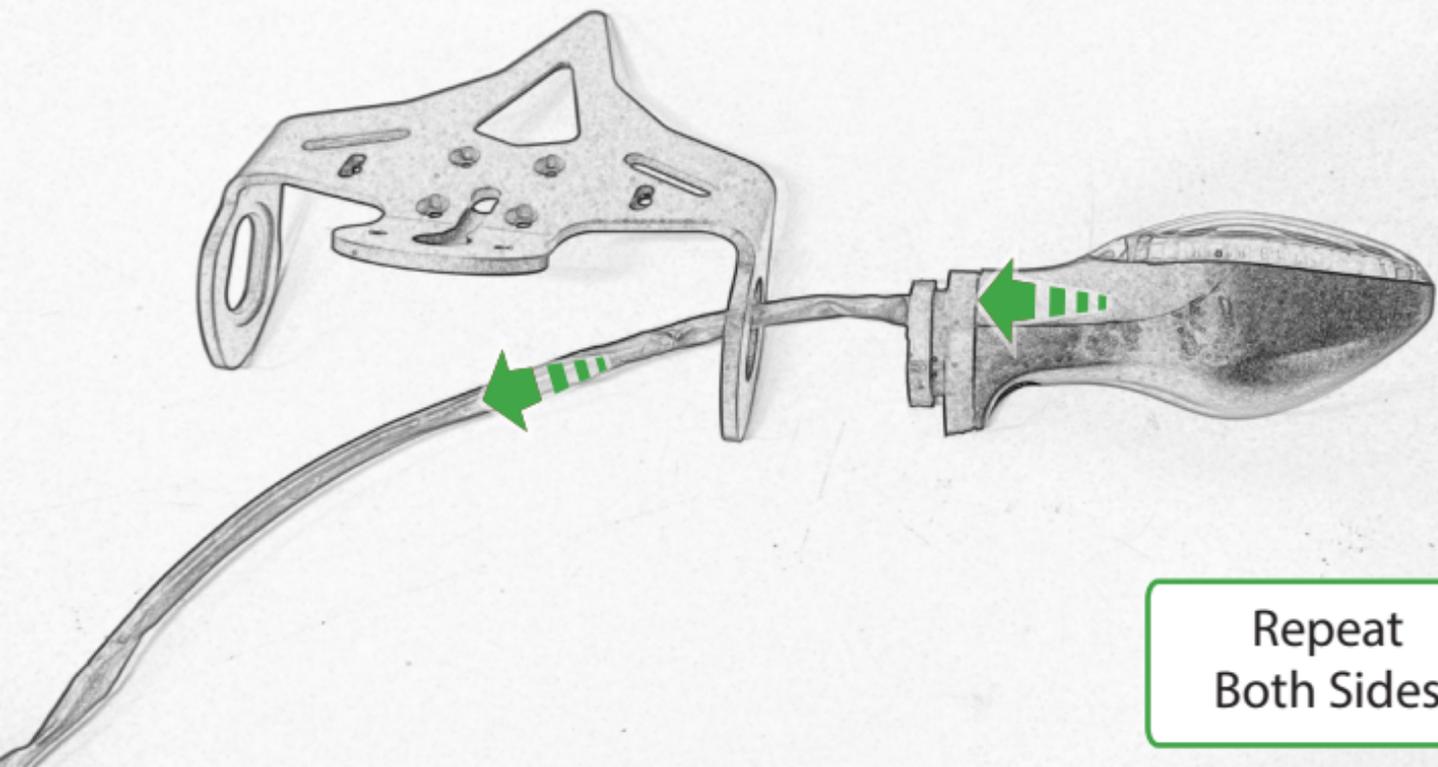

Repeat
Both Sides

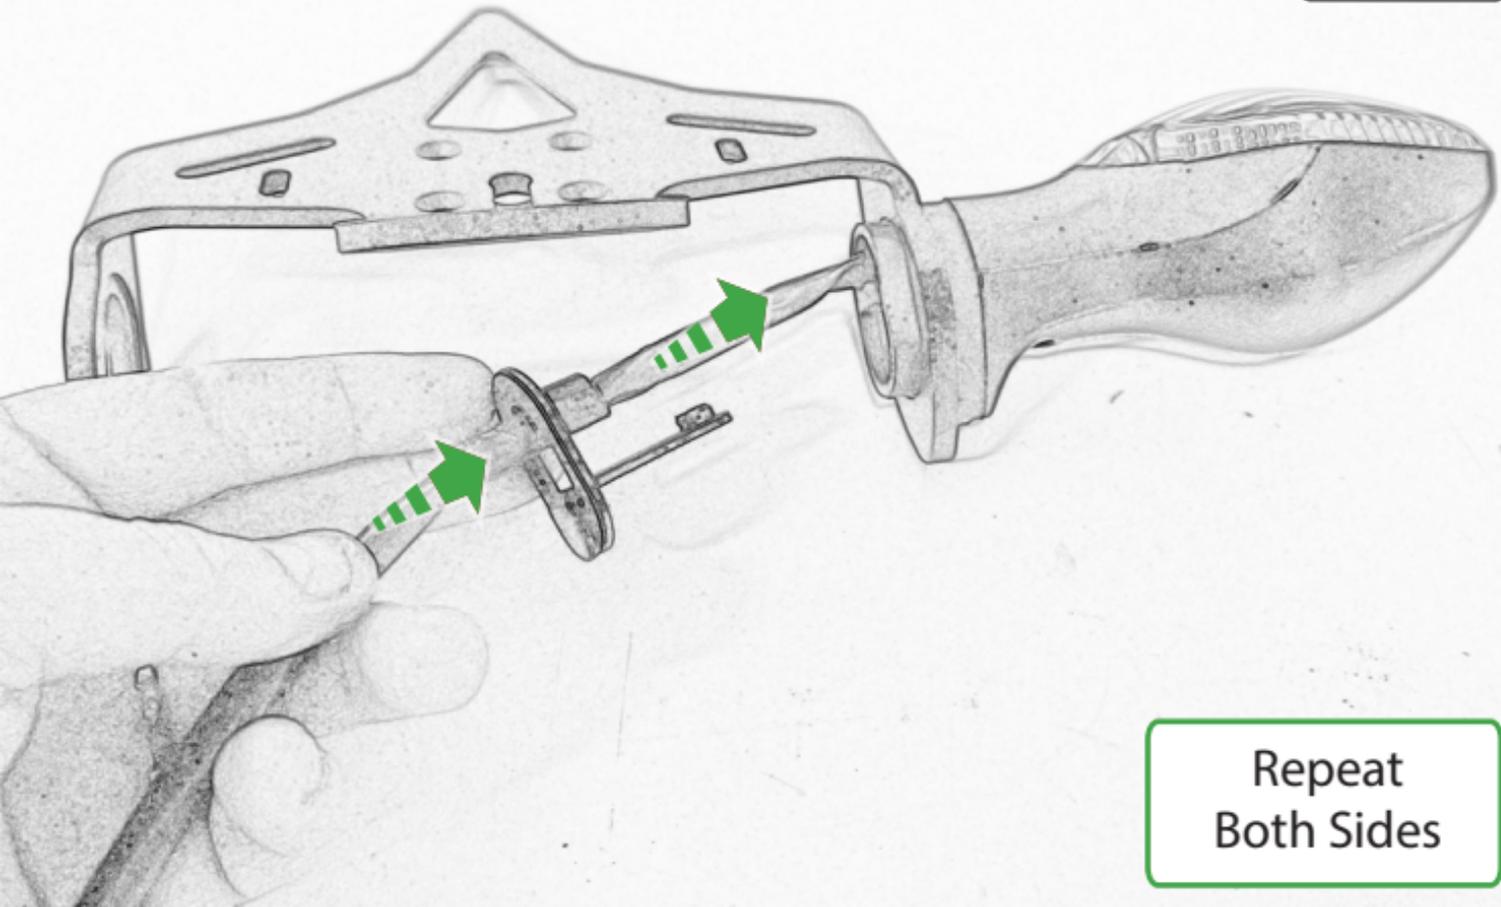



Repeat
Both Sides




OEM PART



Repeat
Both Sides

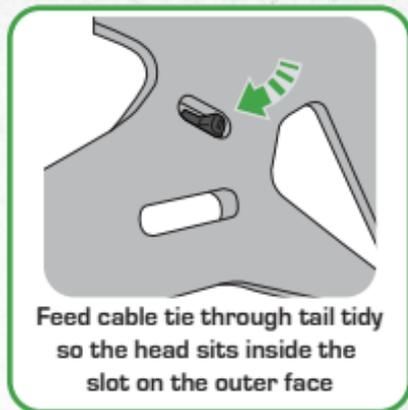
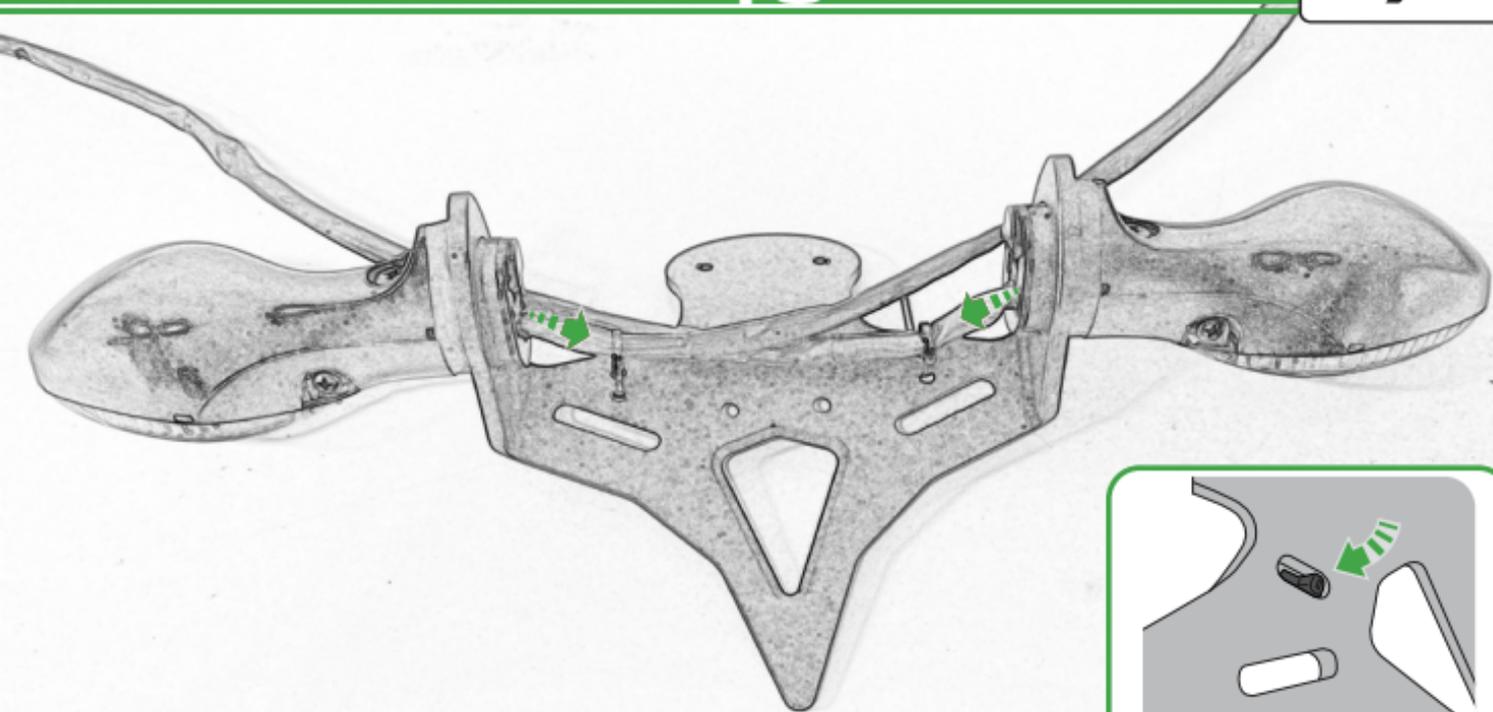


Feed cable tie through tail tidy so the head sits inside the slot on the outer face

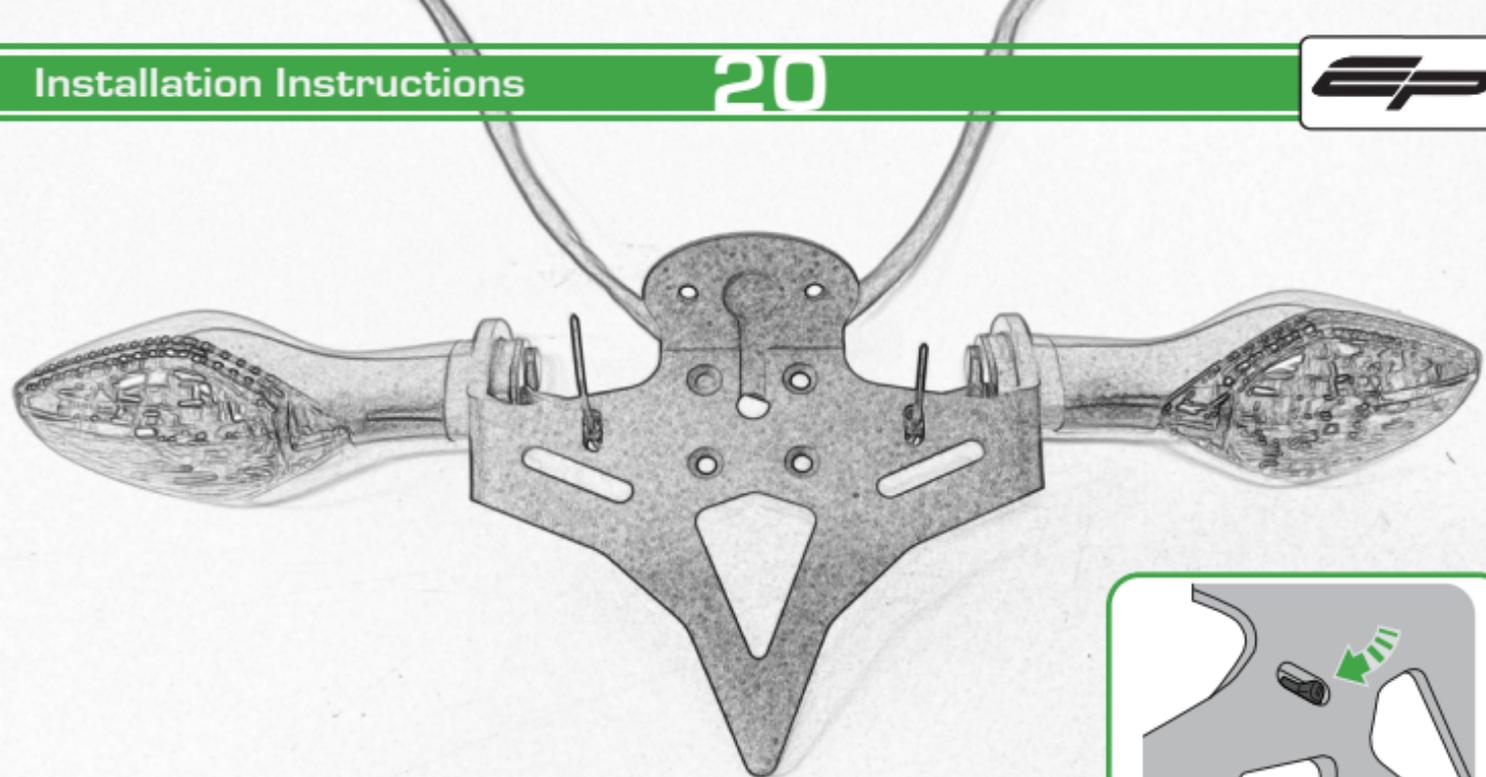


Feed cable tie through tail tidy so the head sits inside the slot on the outer face


The inset diagram shows a close-up of a metal tail tidy component. A cable tie is being inserted into a slot. A green arrow indicates the direction of insertion. The text below the diagram explains that the cable tie should be fed through the tail tidy so that its head sits inside the slot on the outer face.

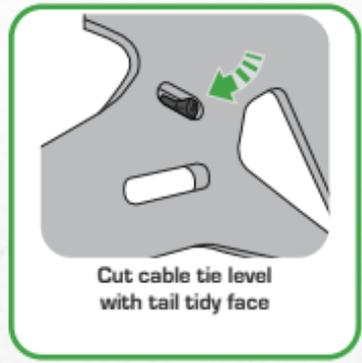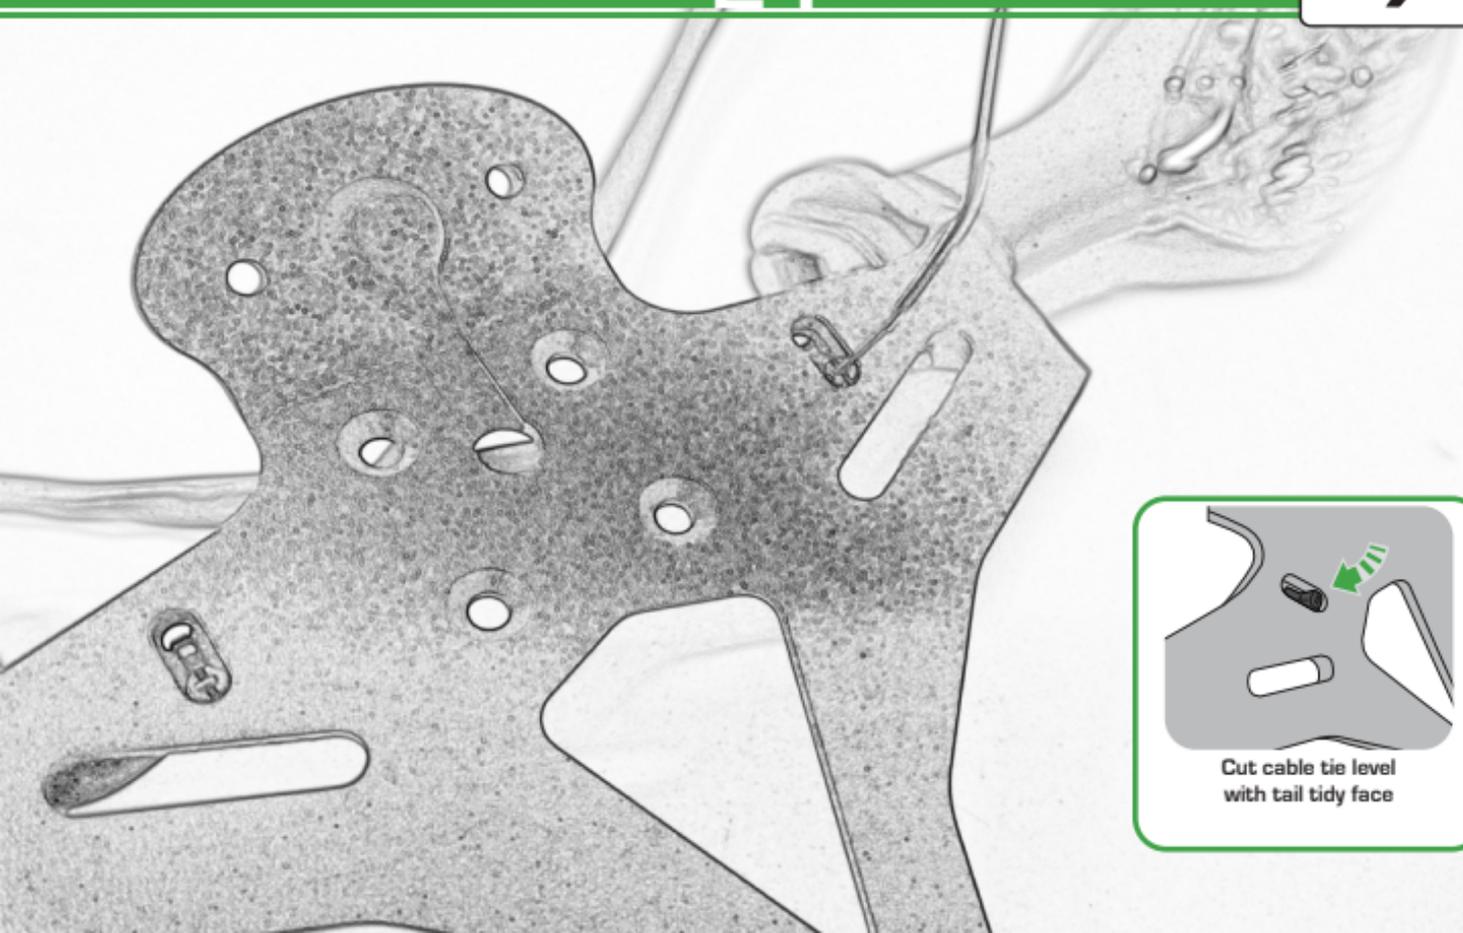



Cut cable tie level with tail tidy face

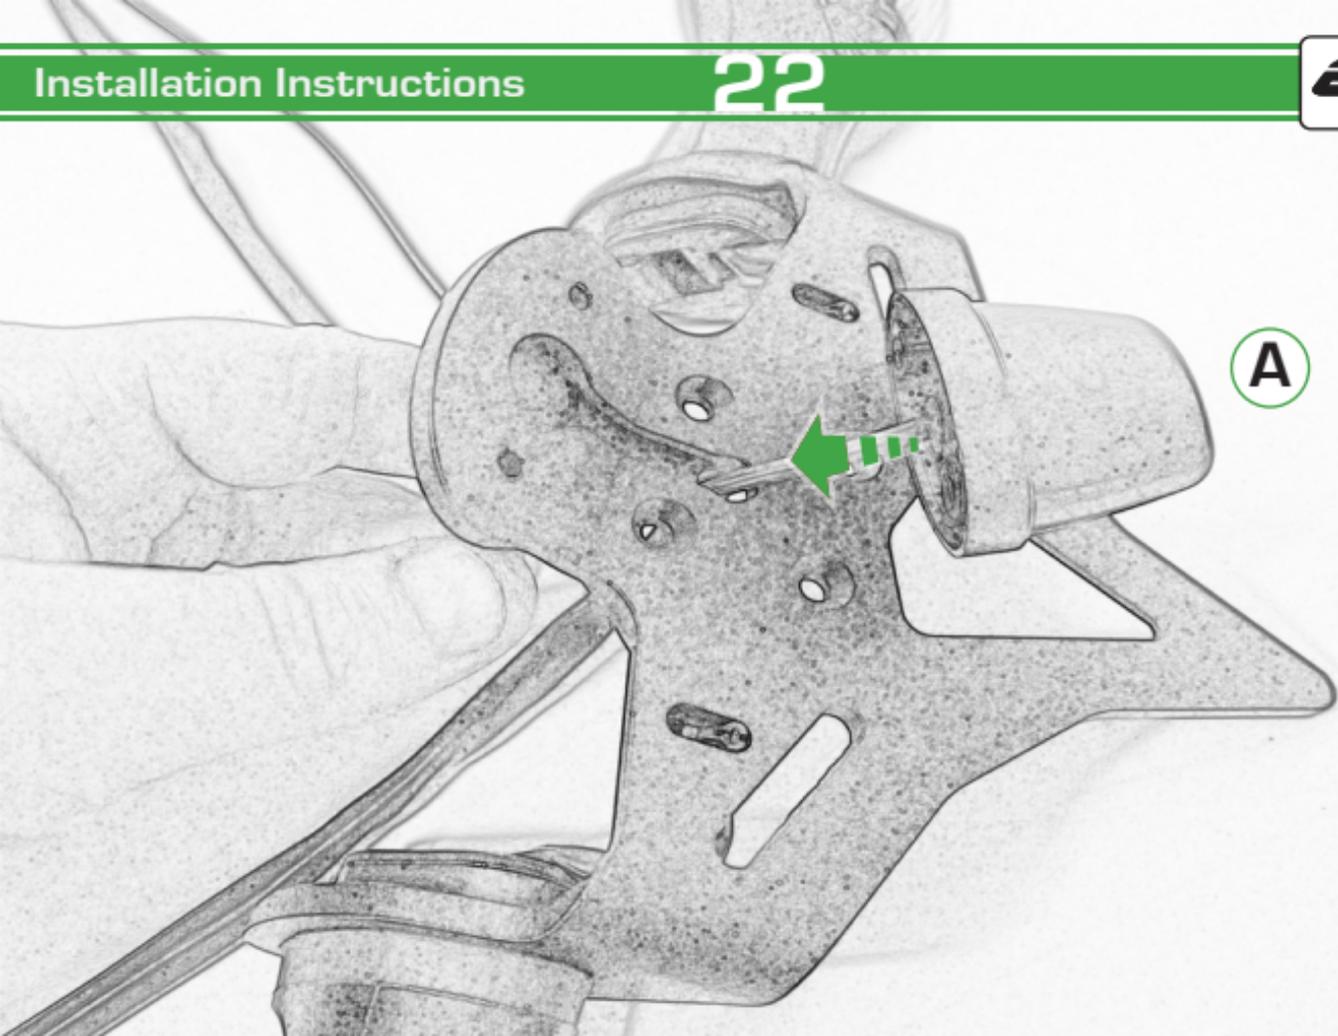



A

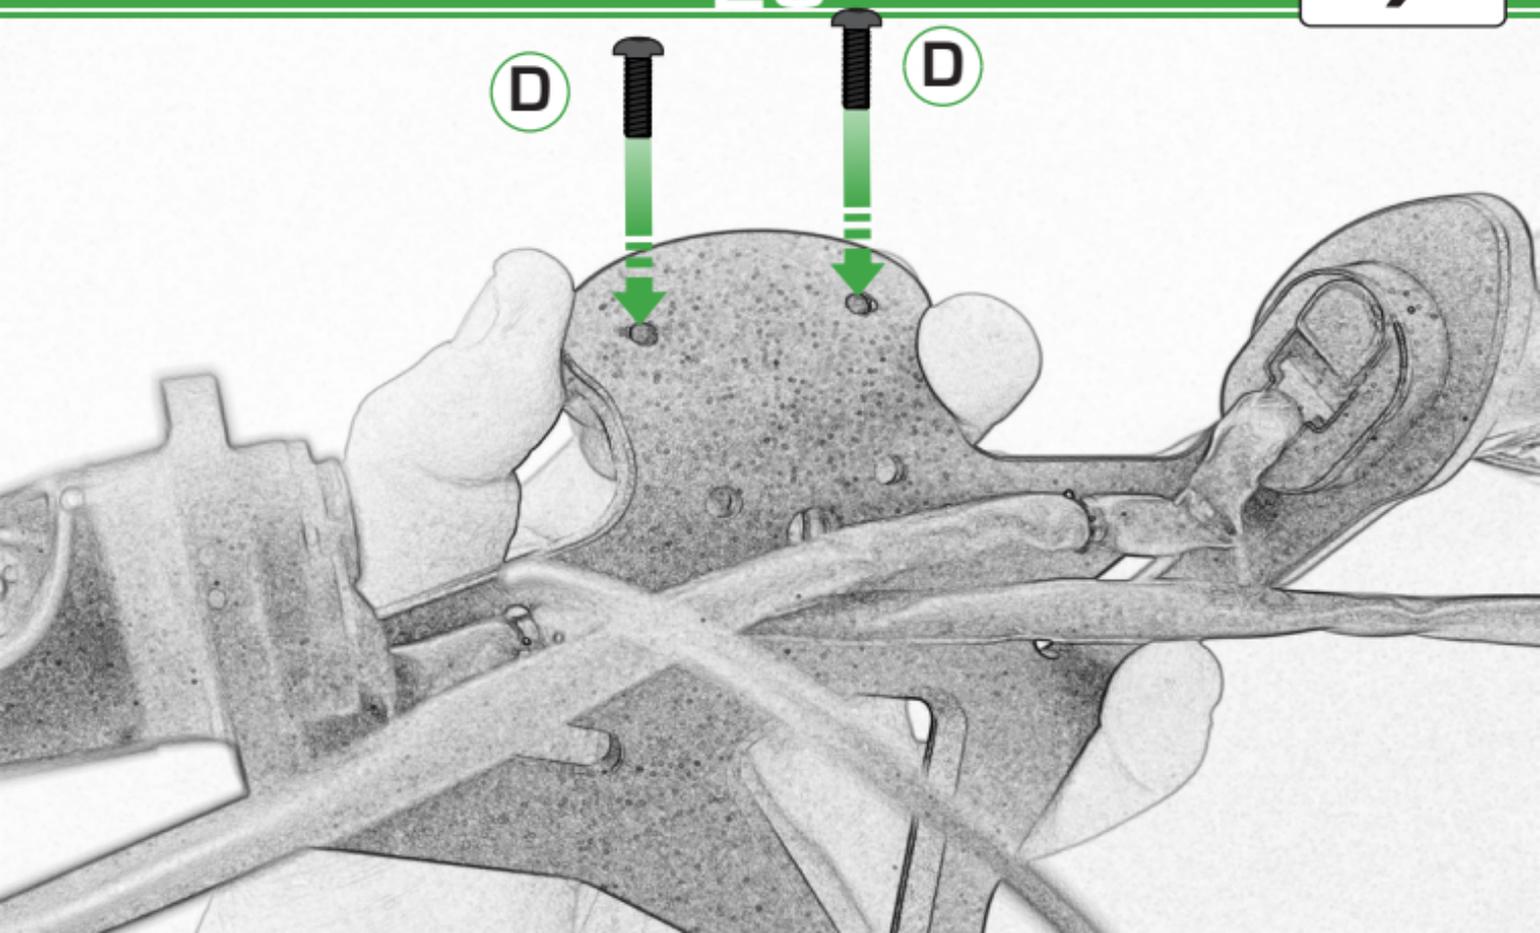


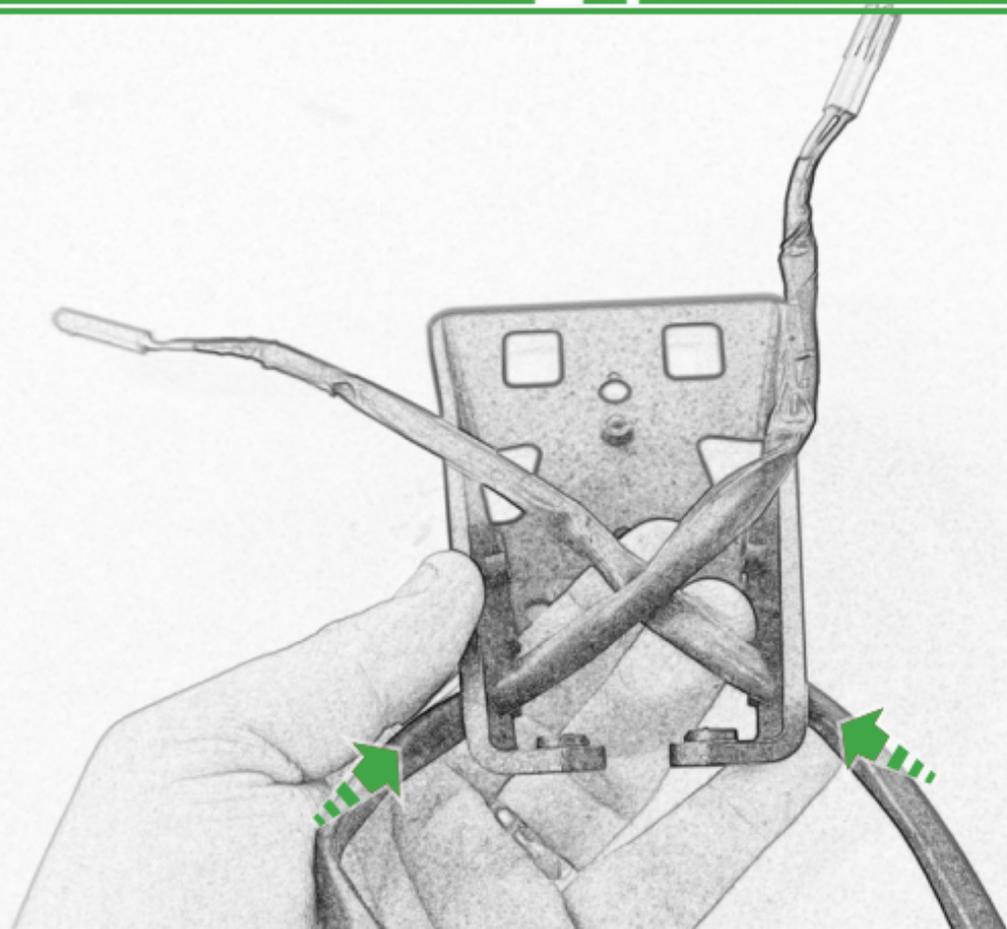


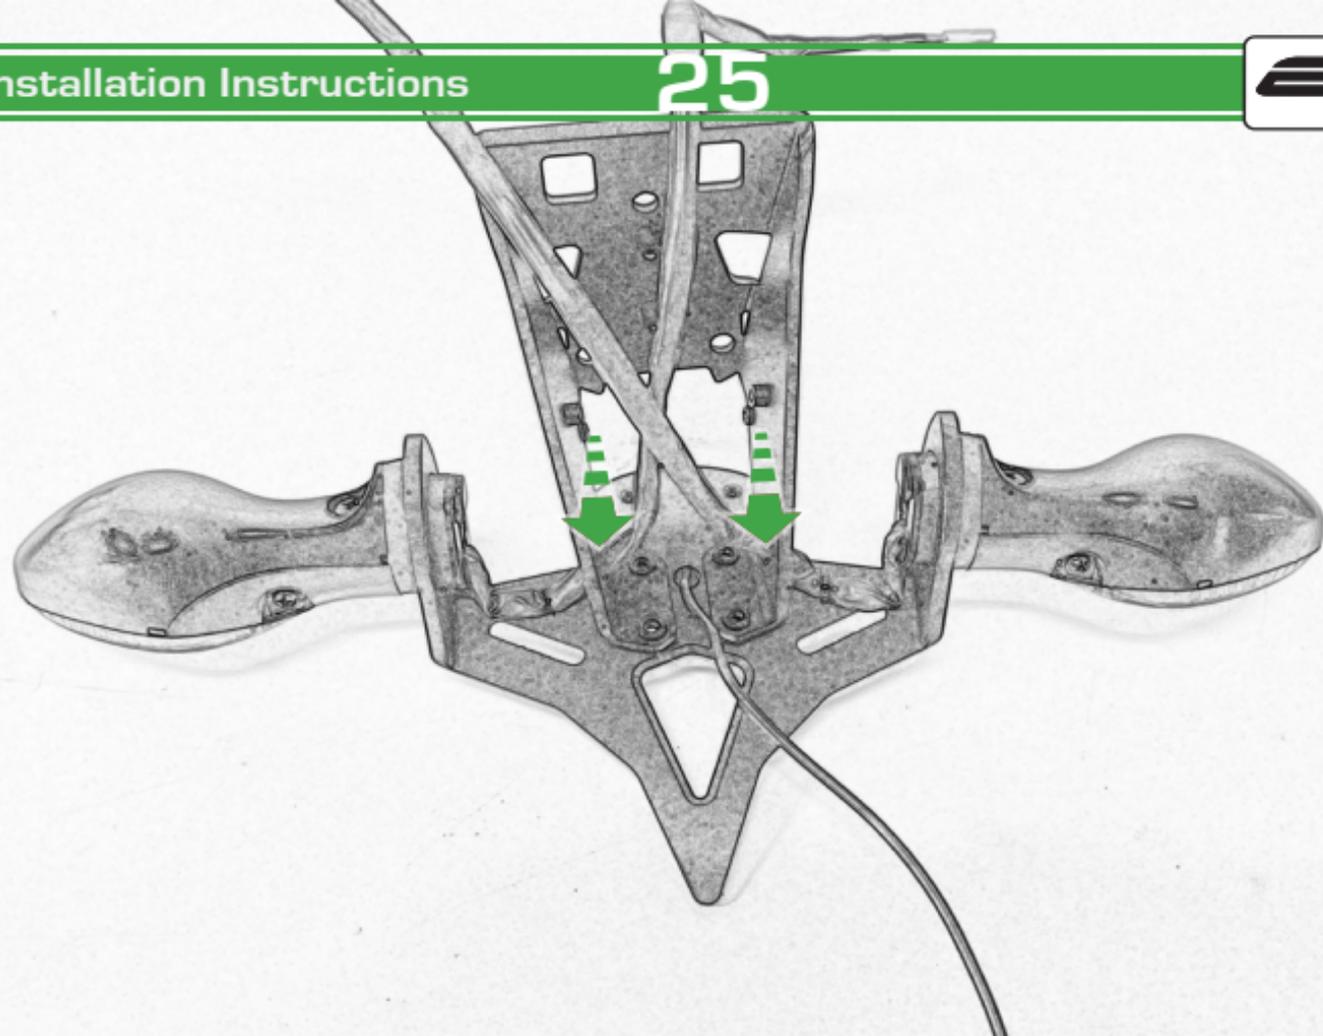


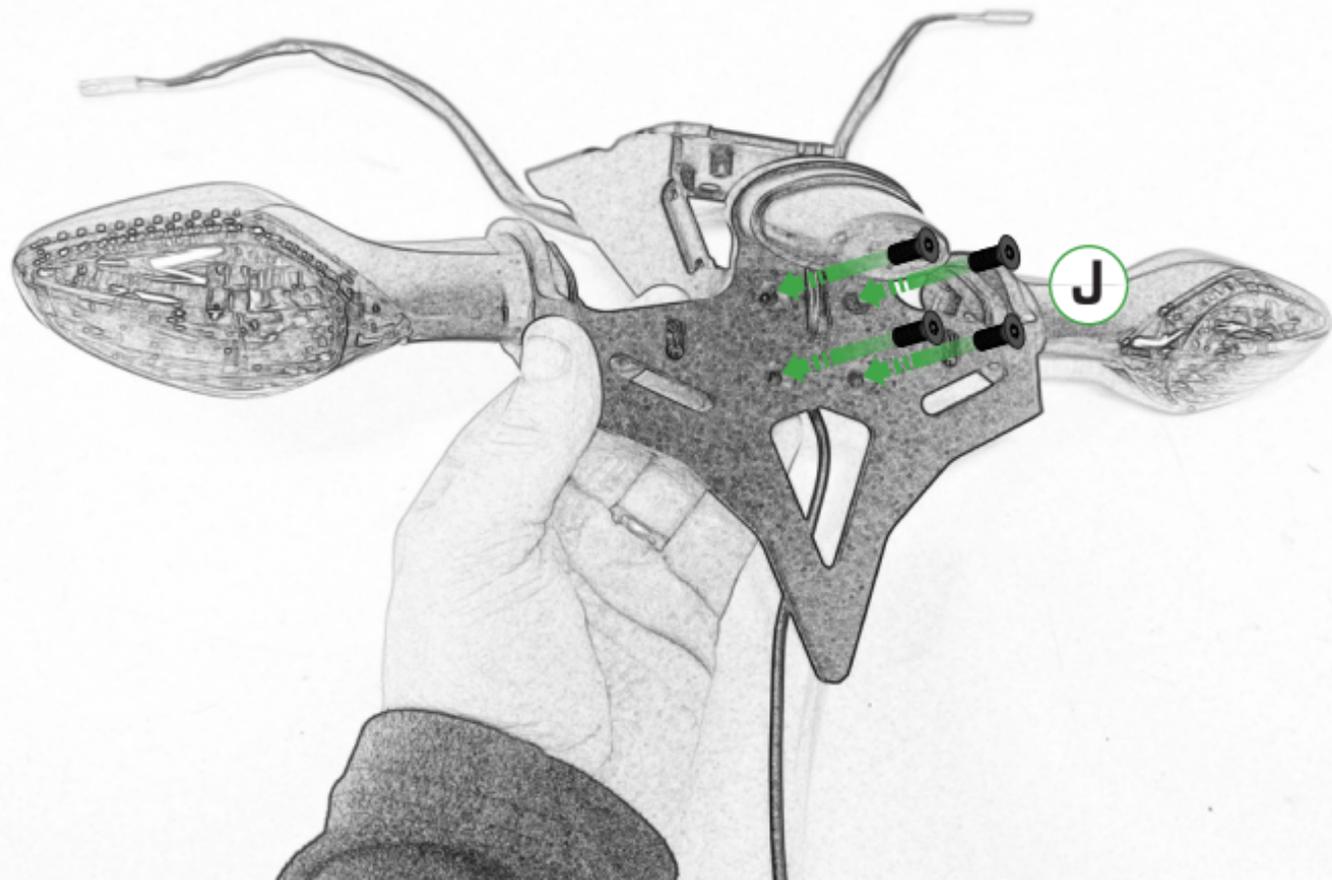


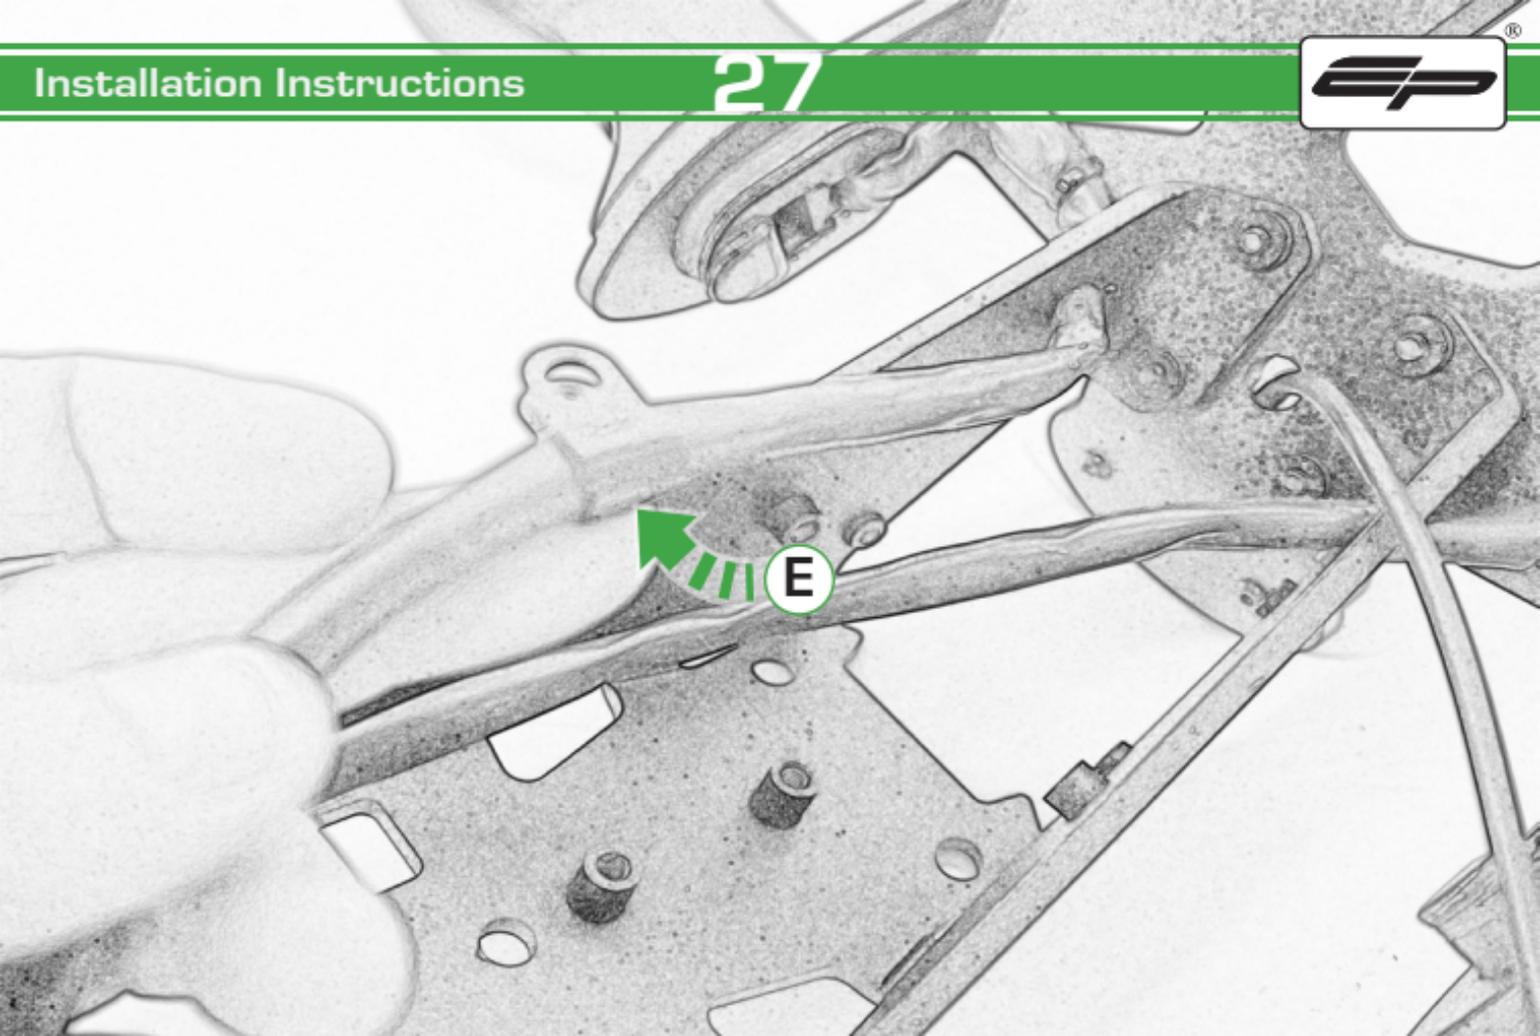


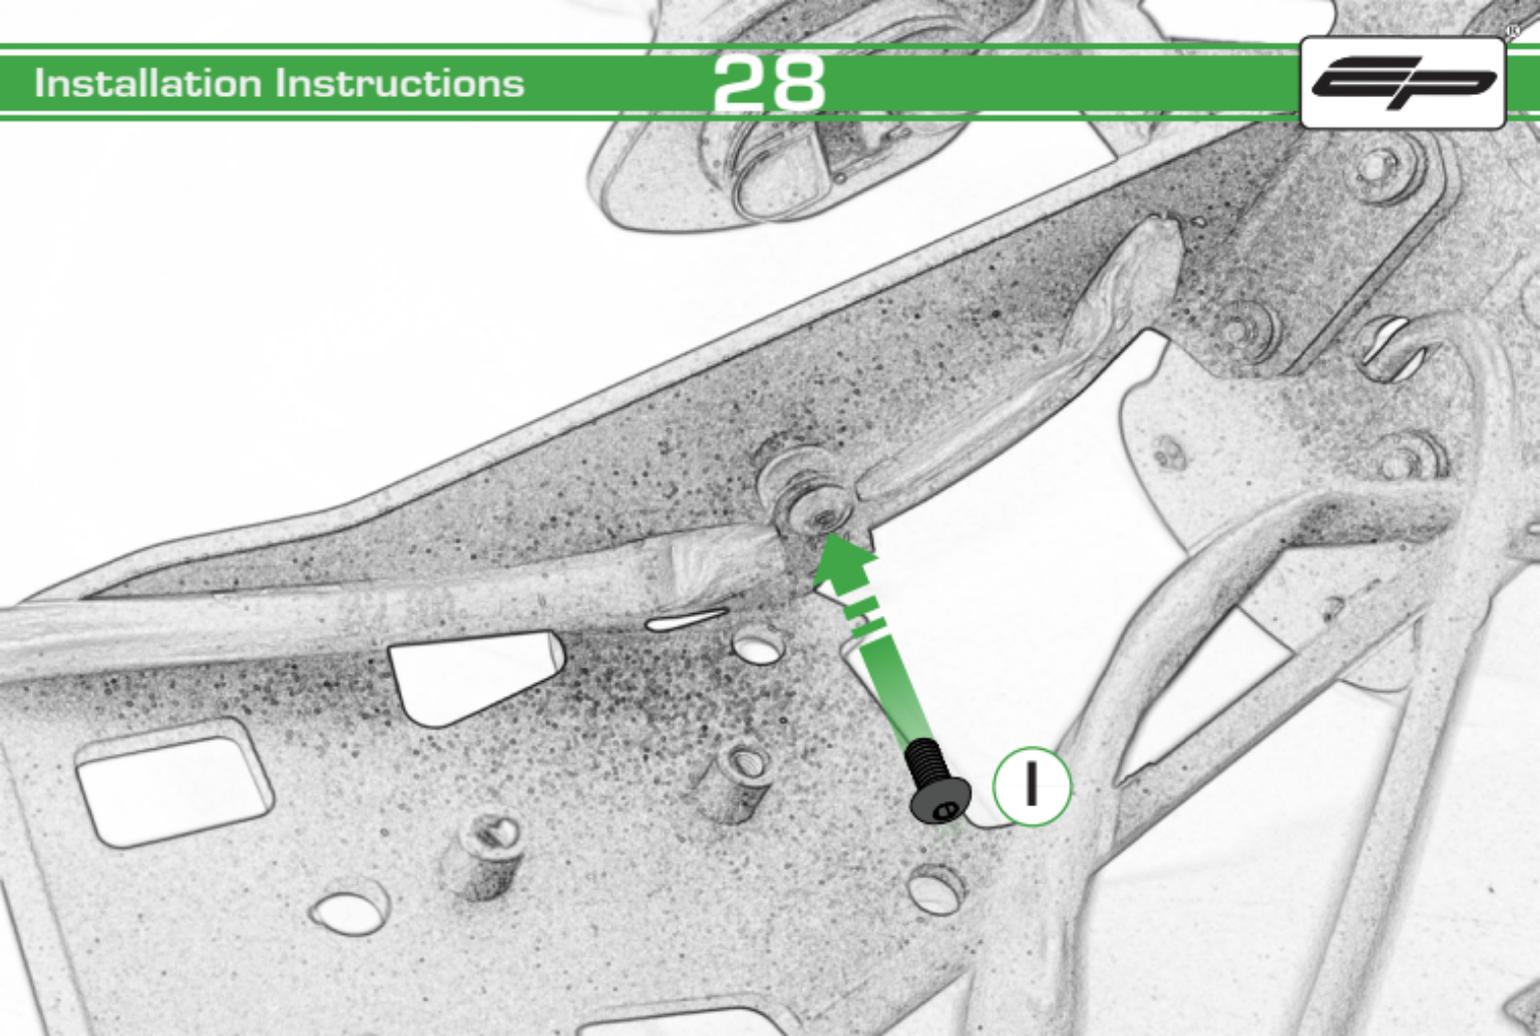


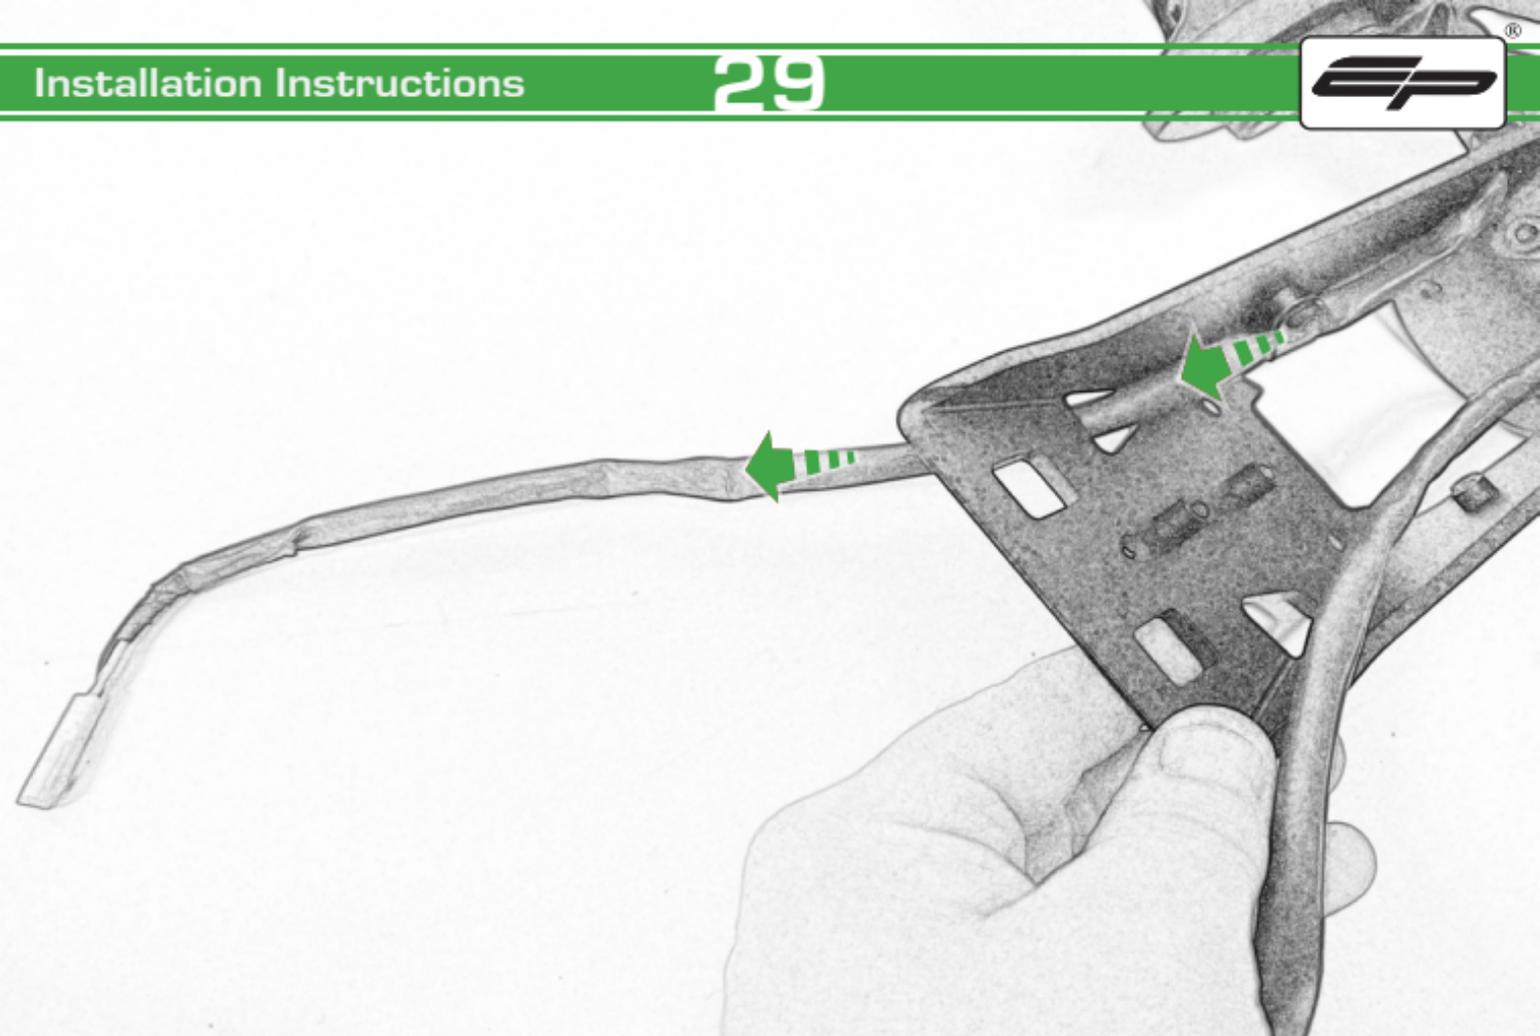


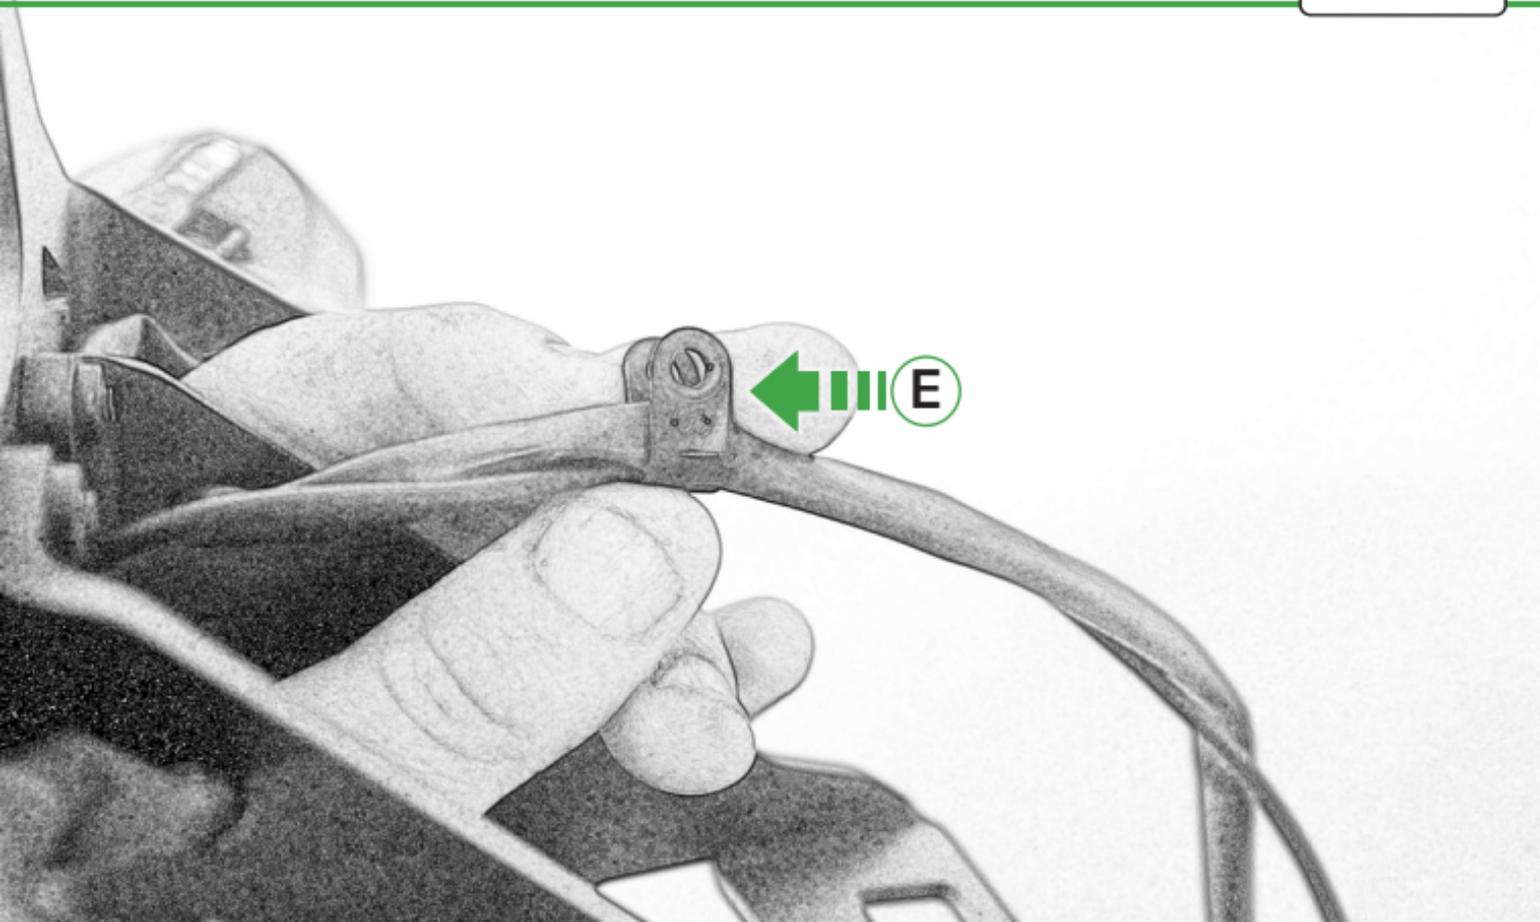


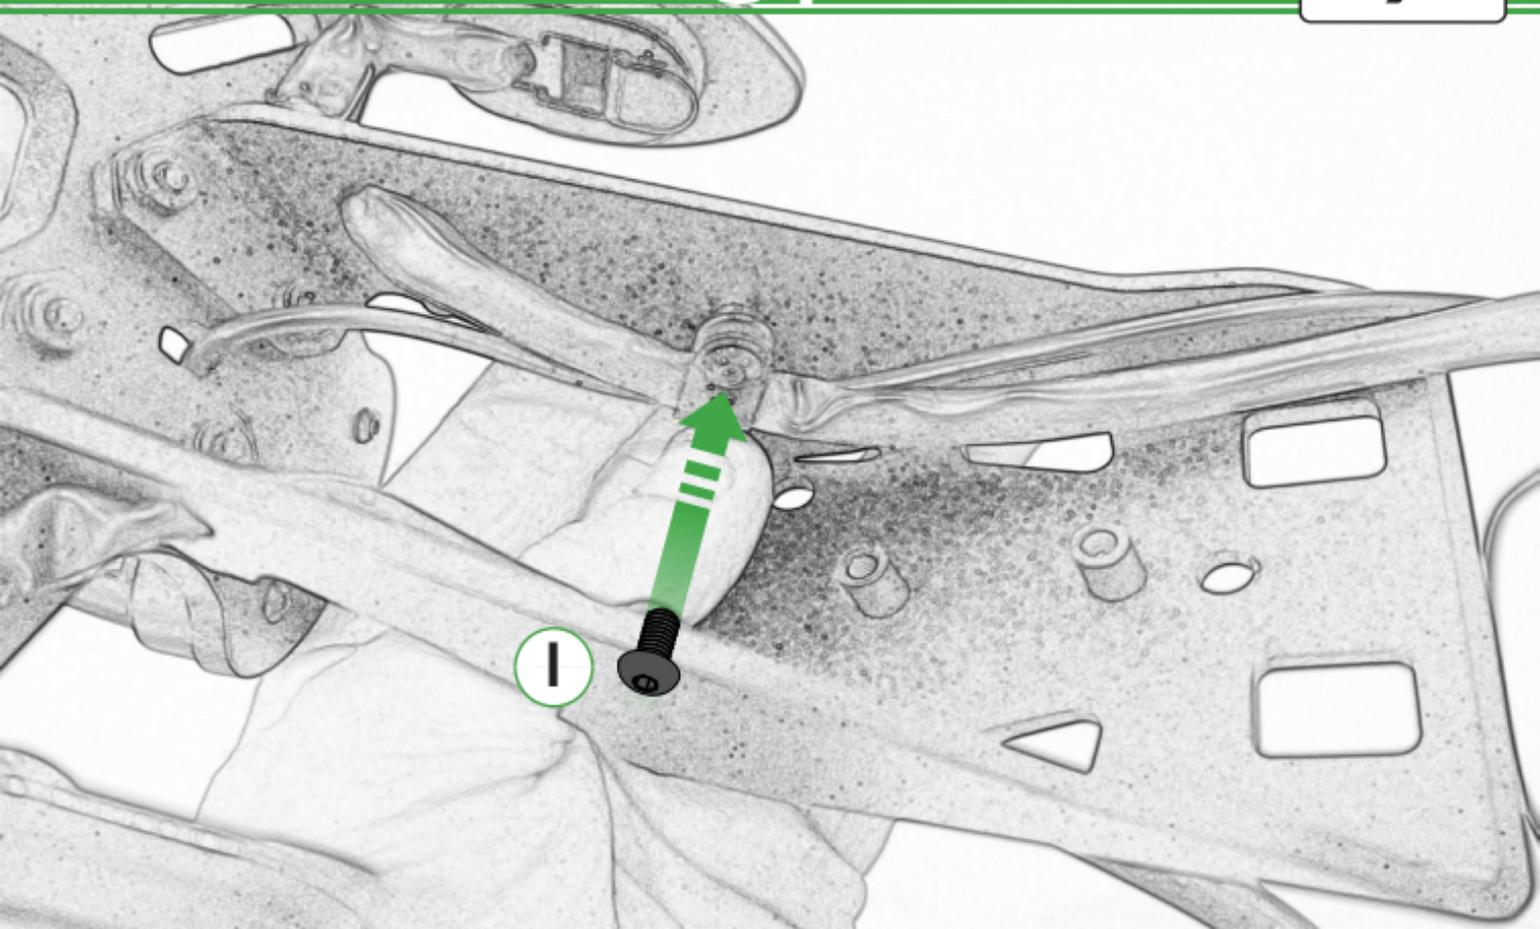


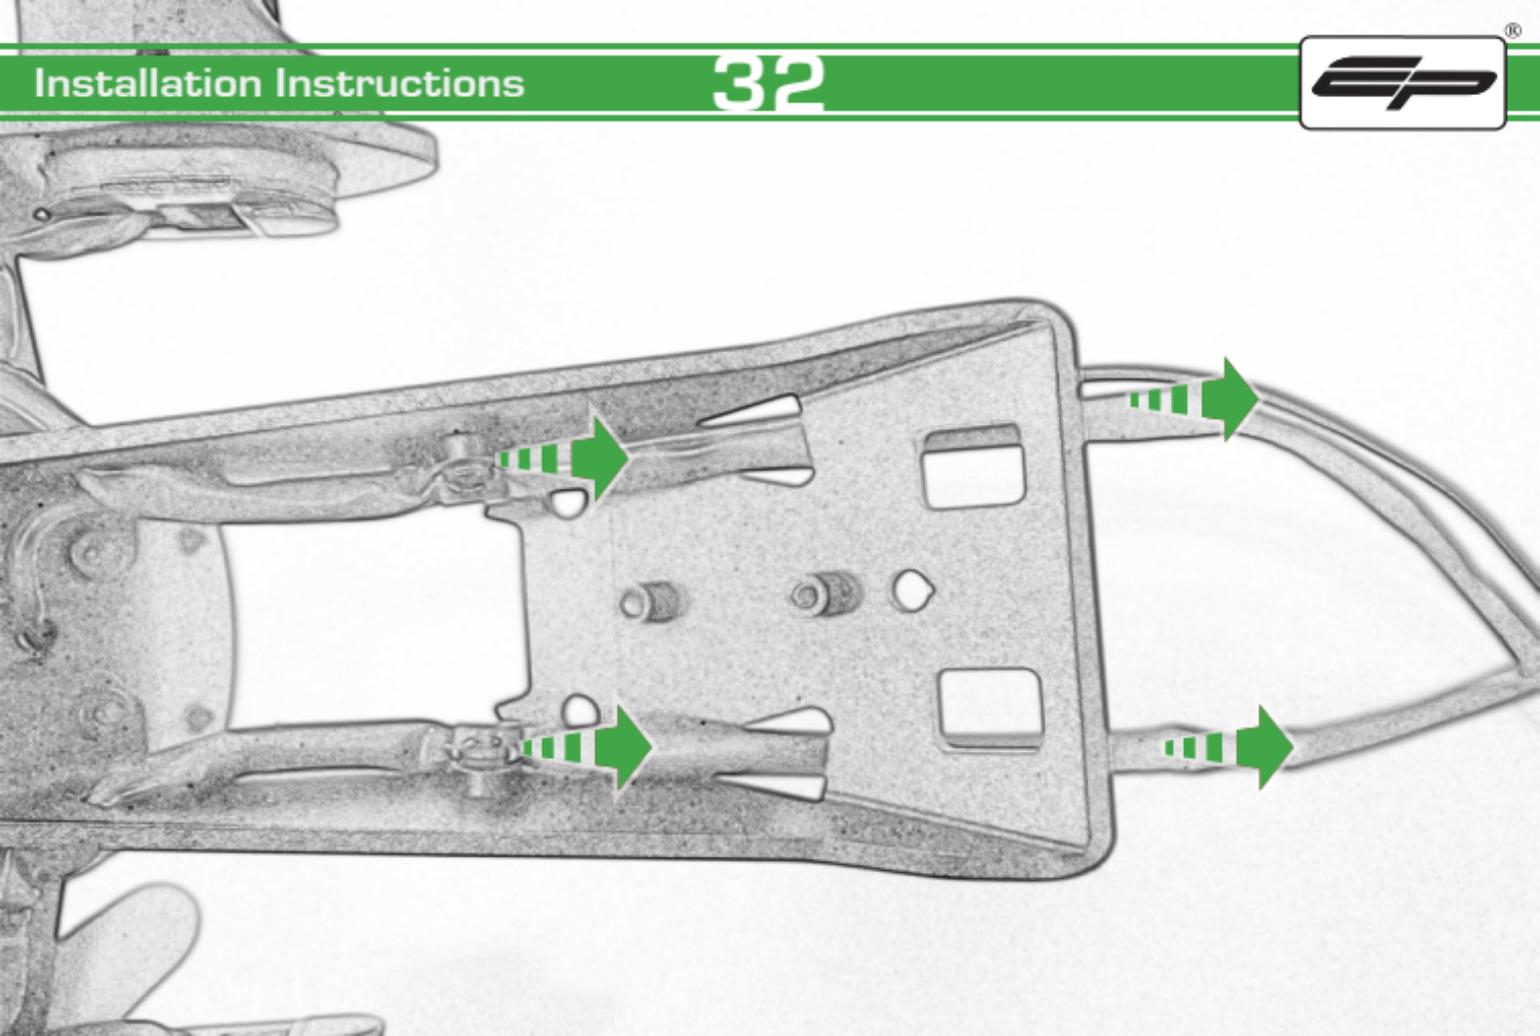


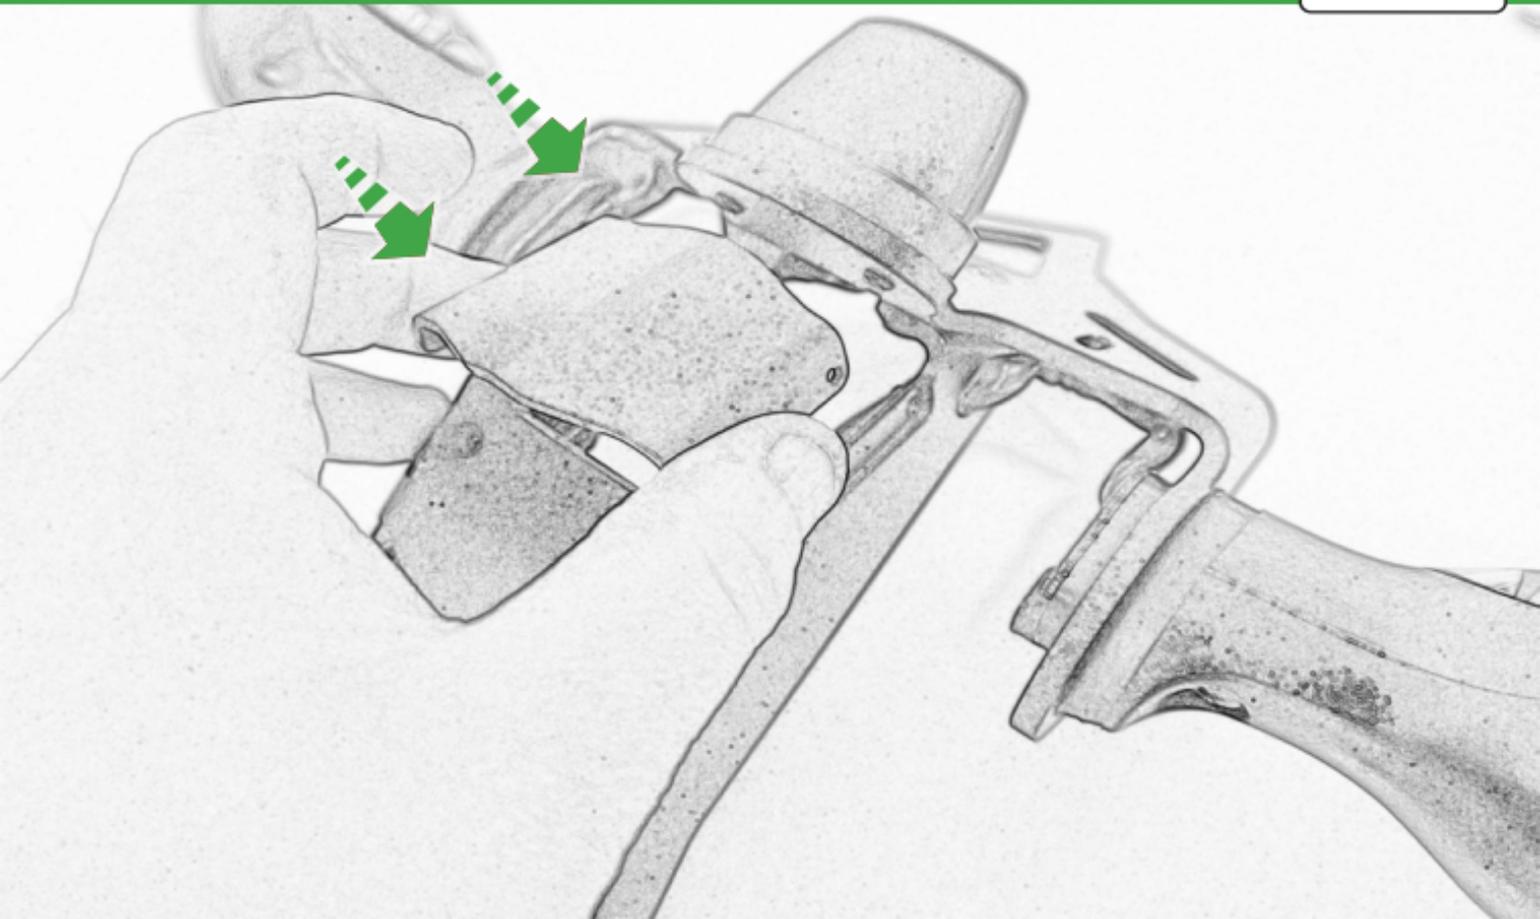

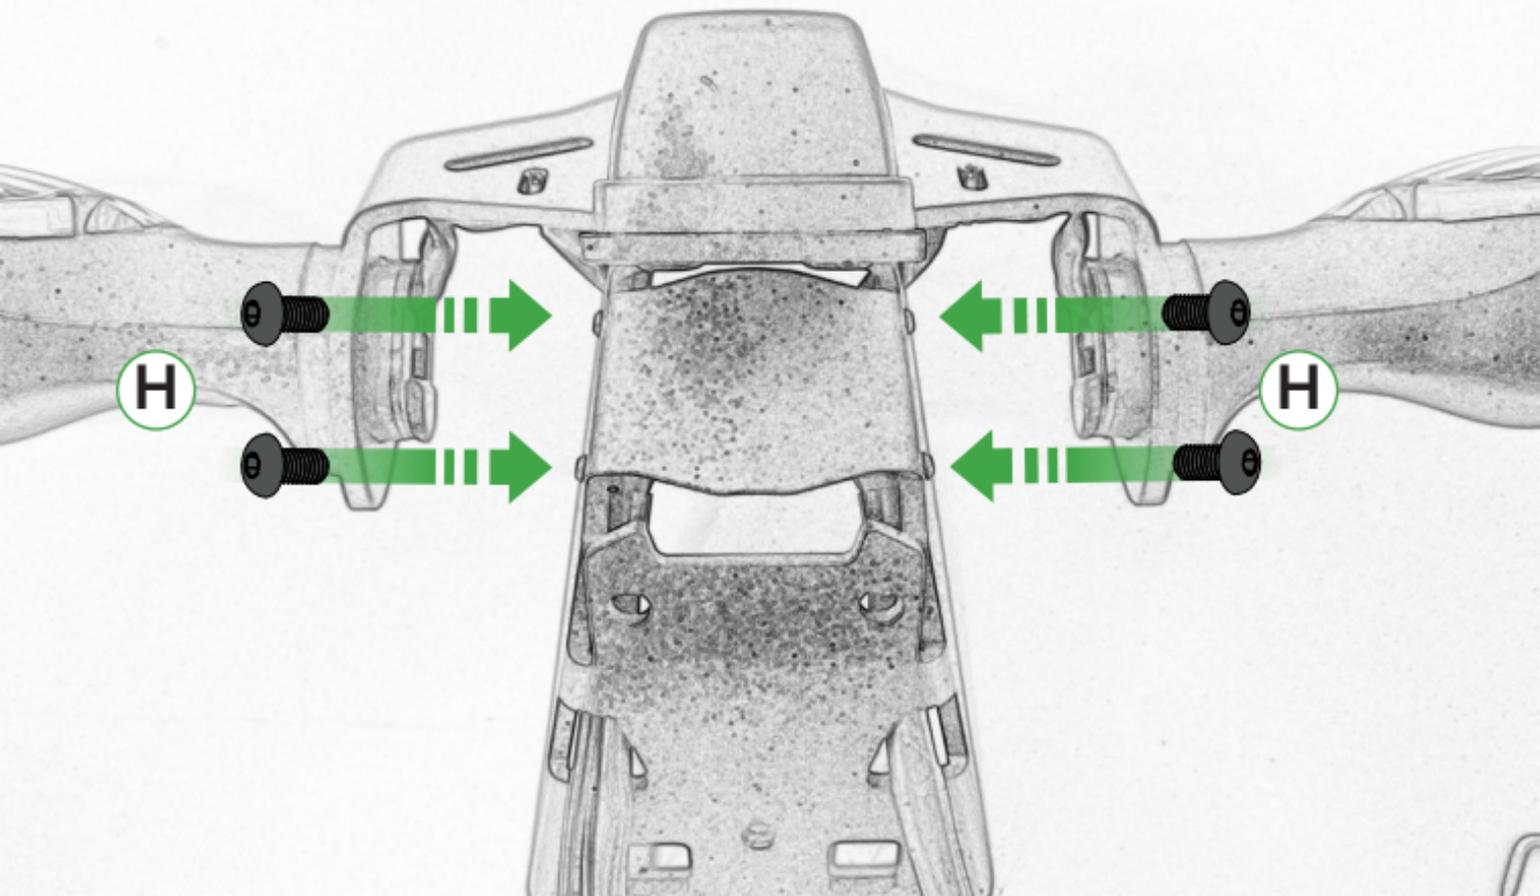


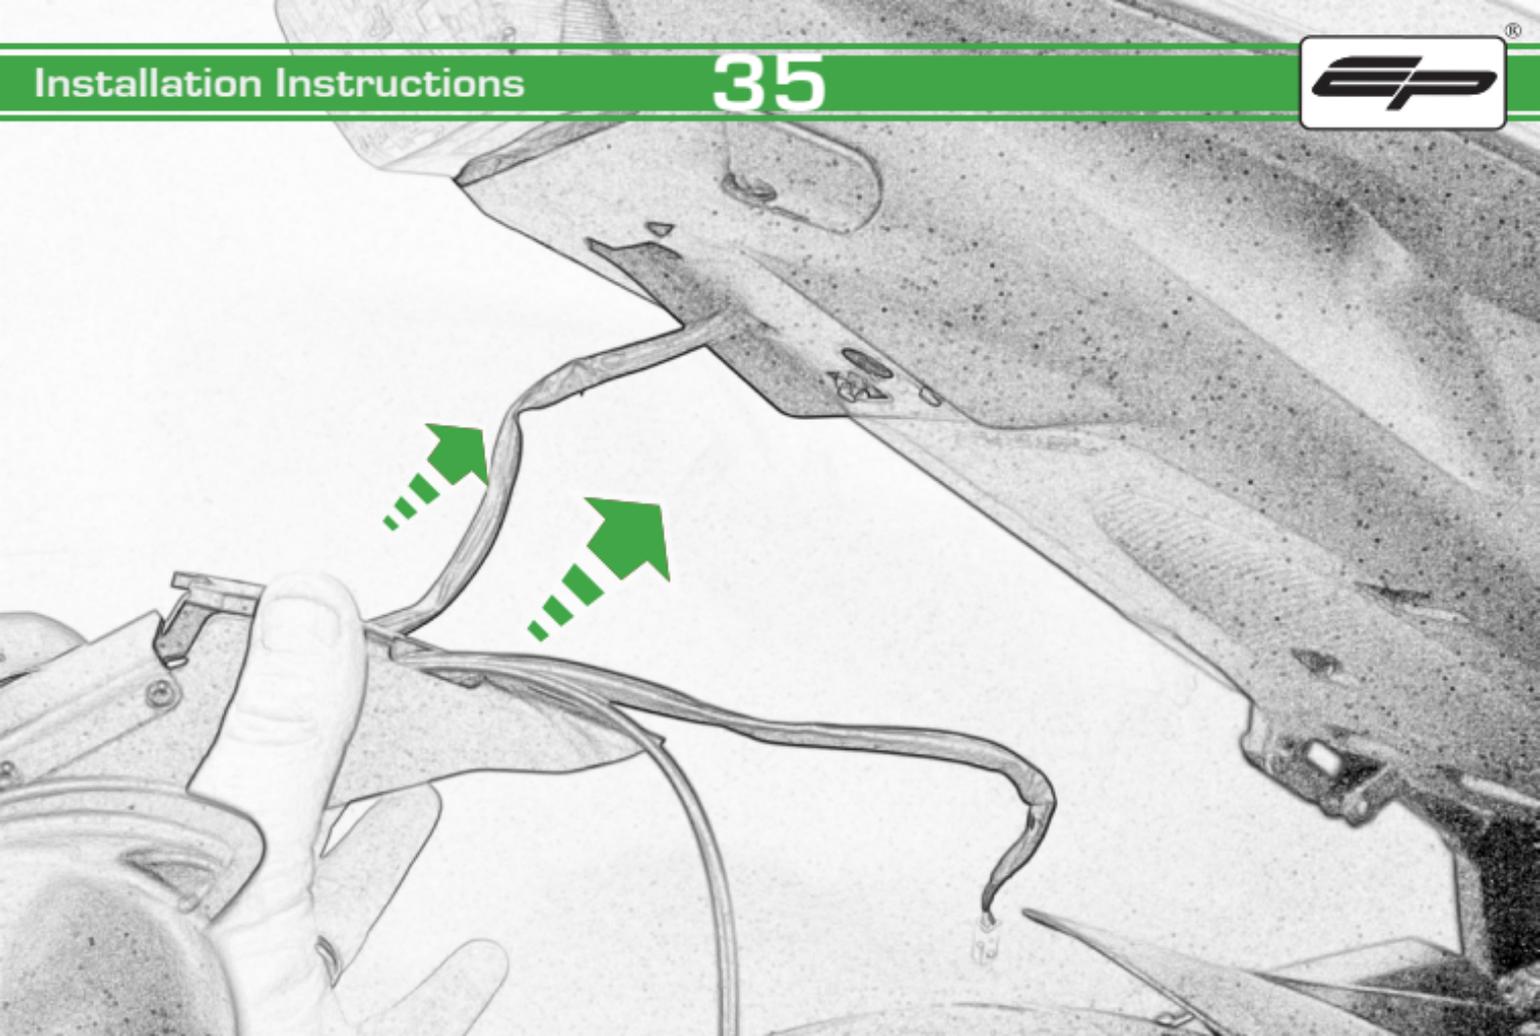

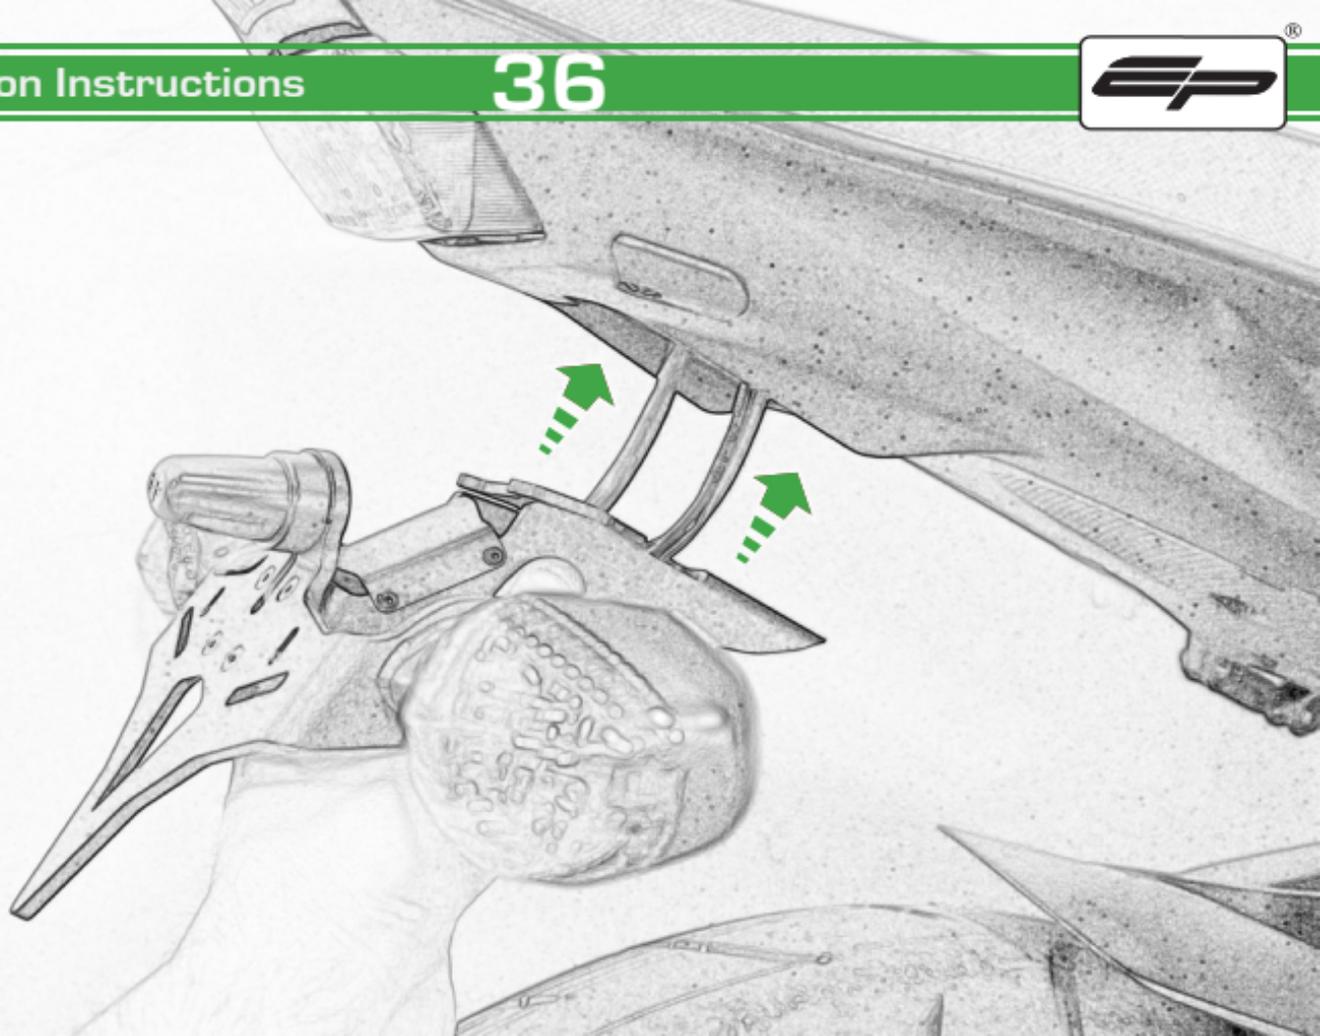

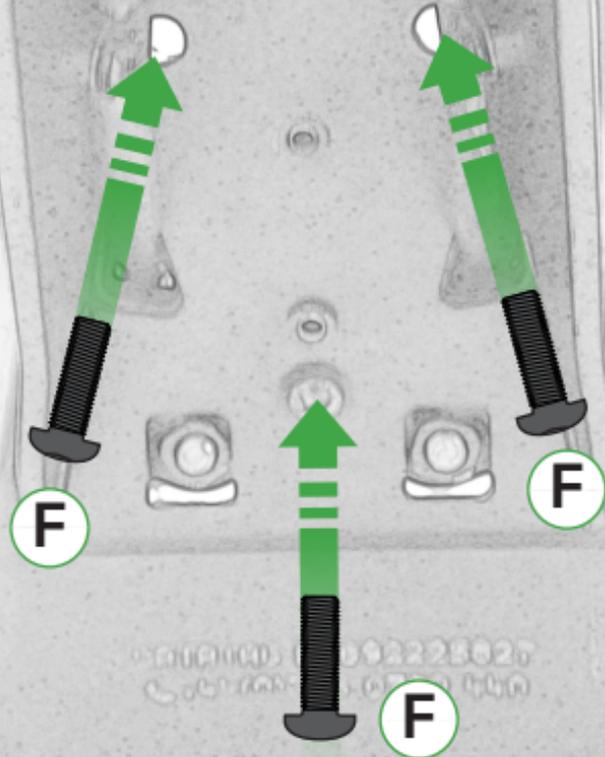






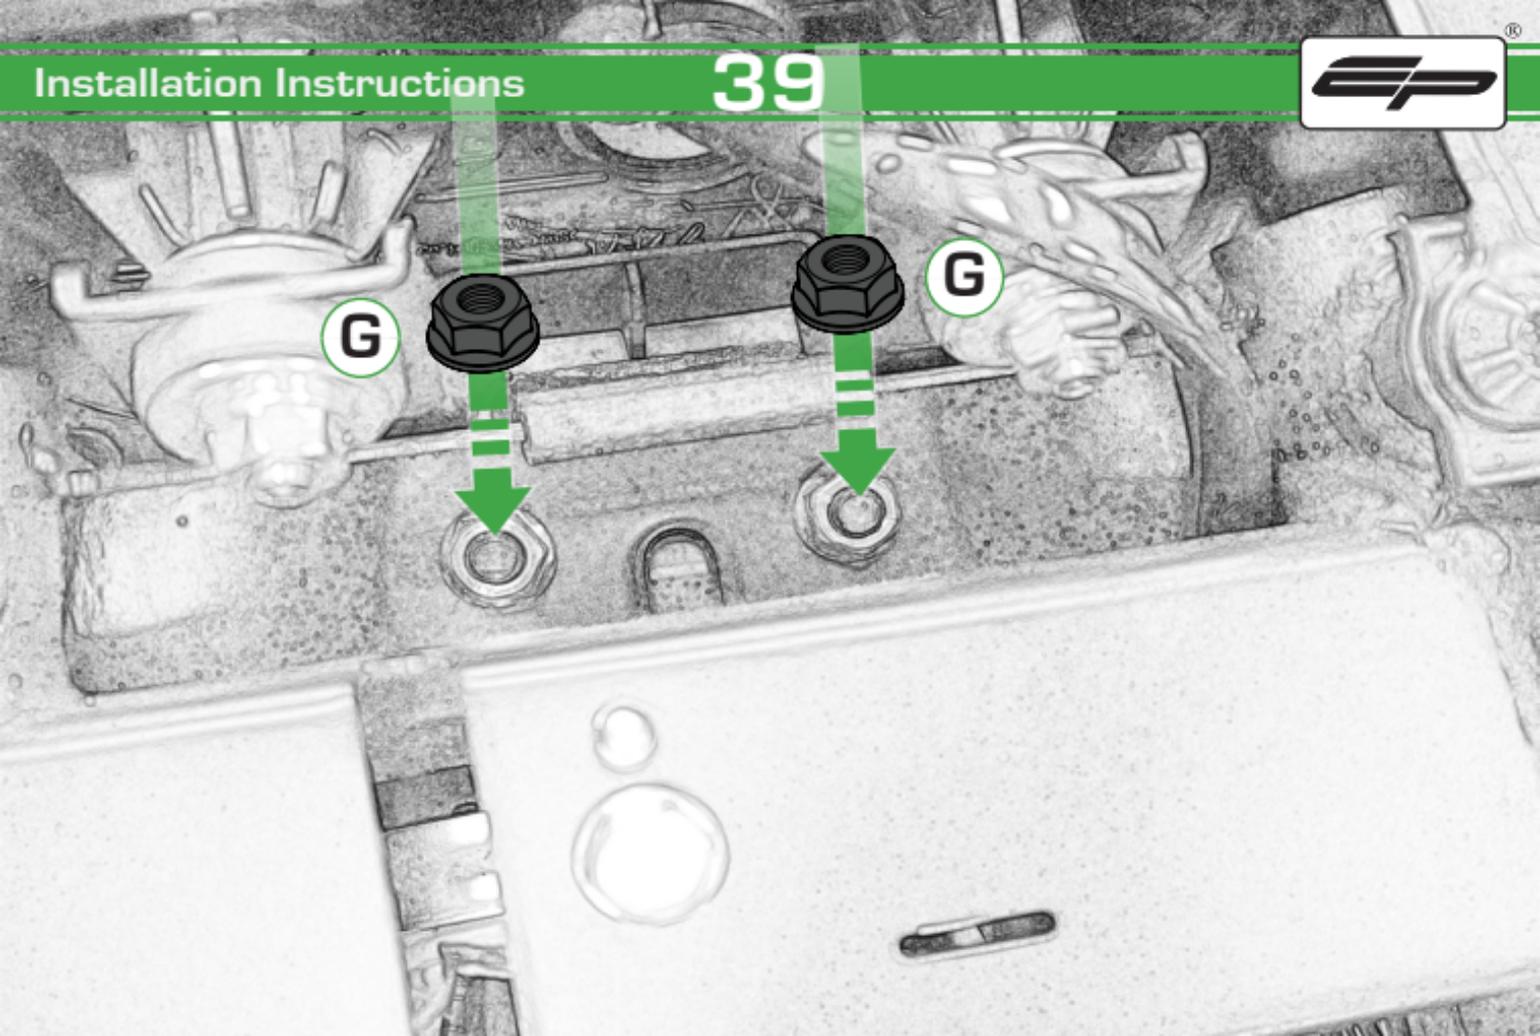





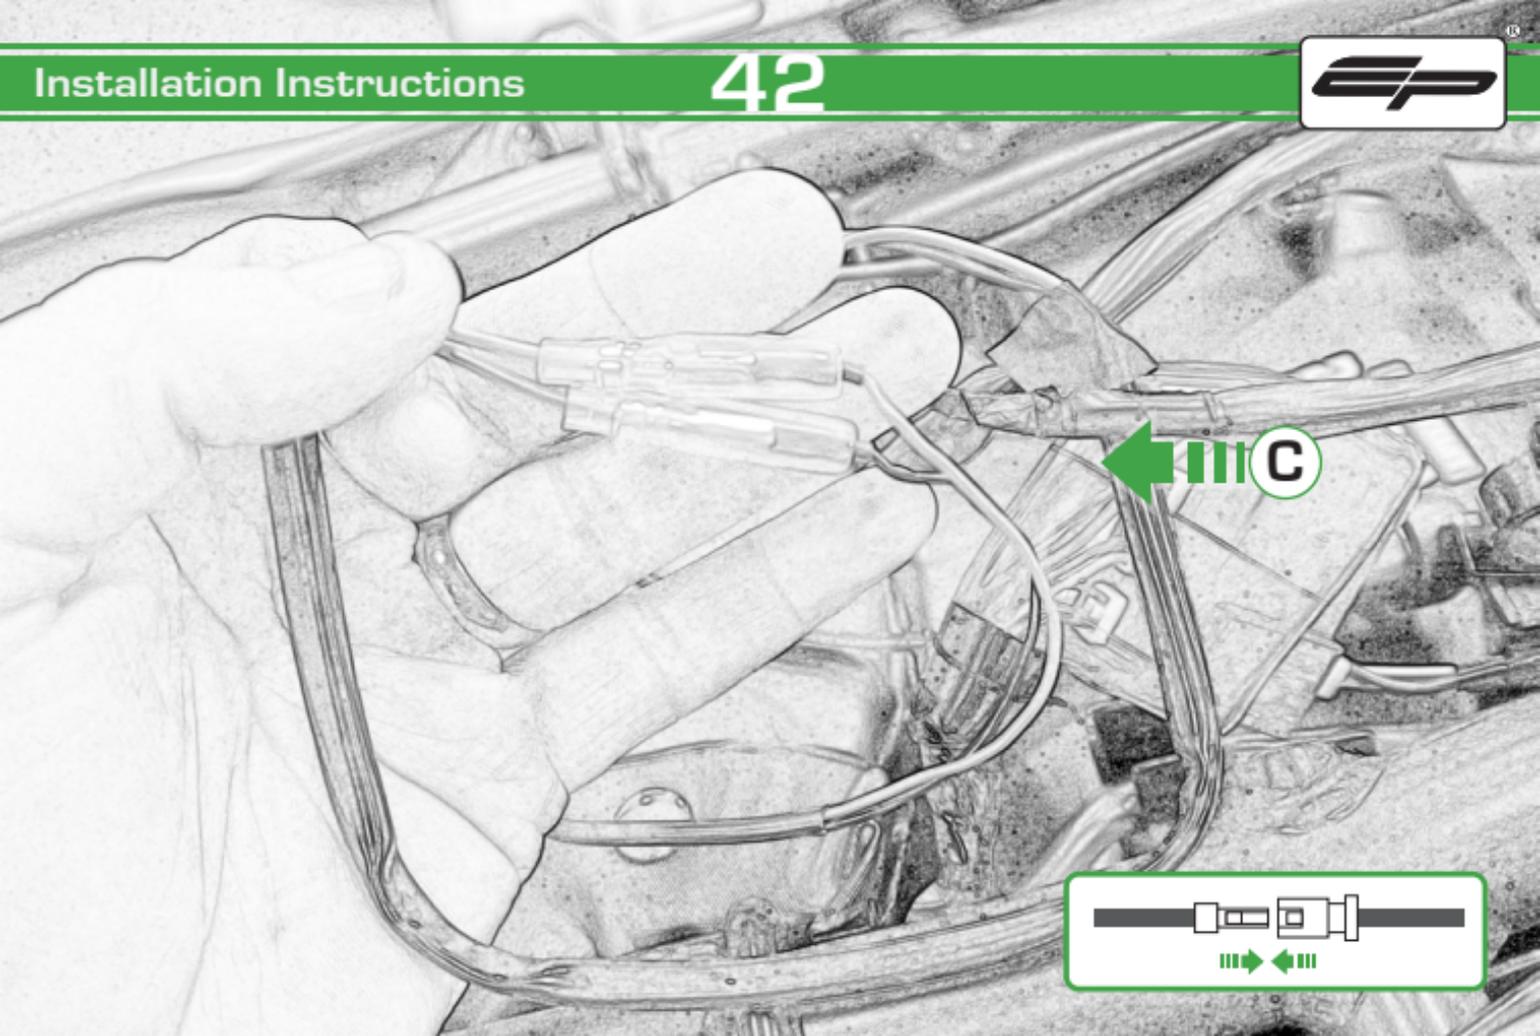


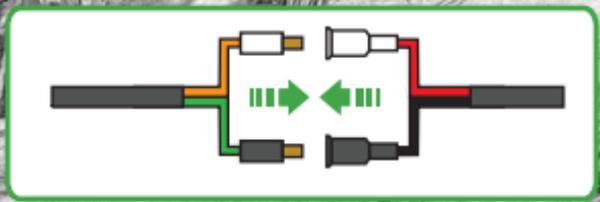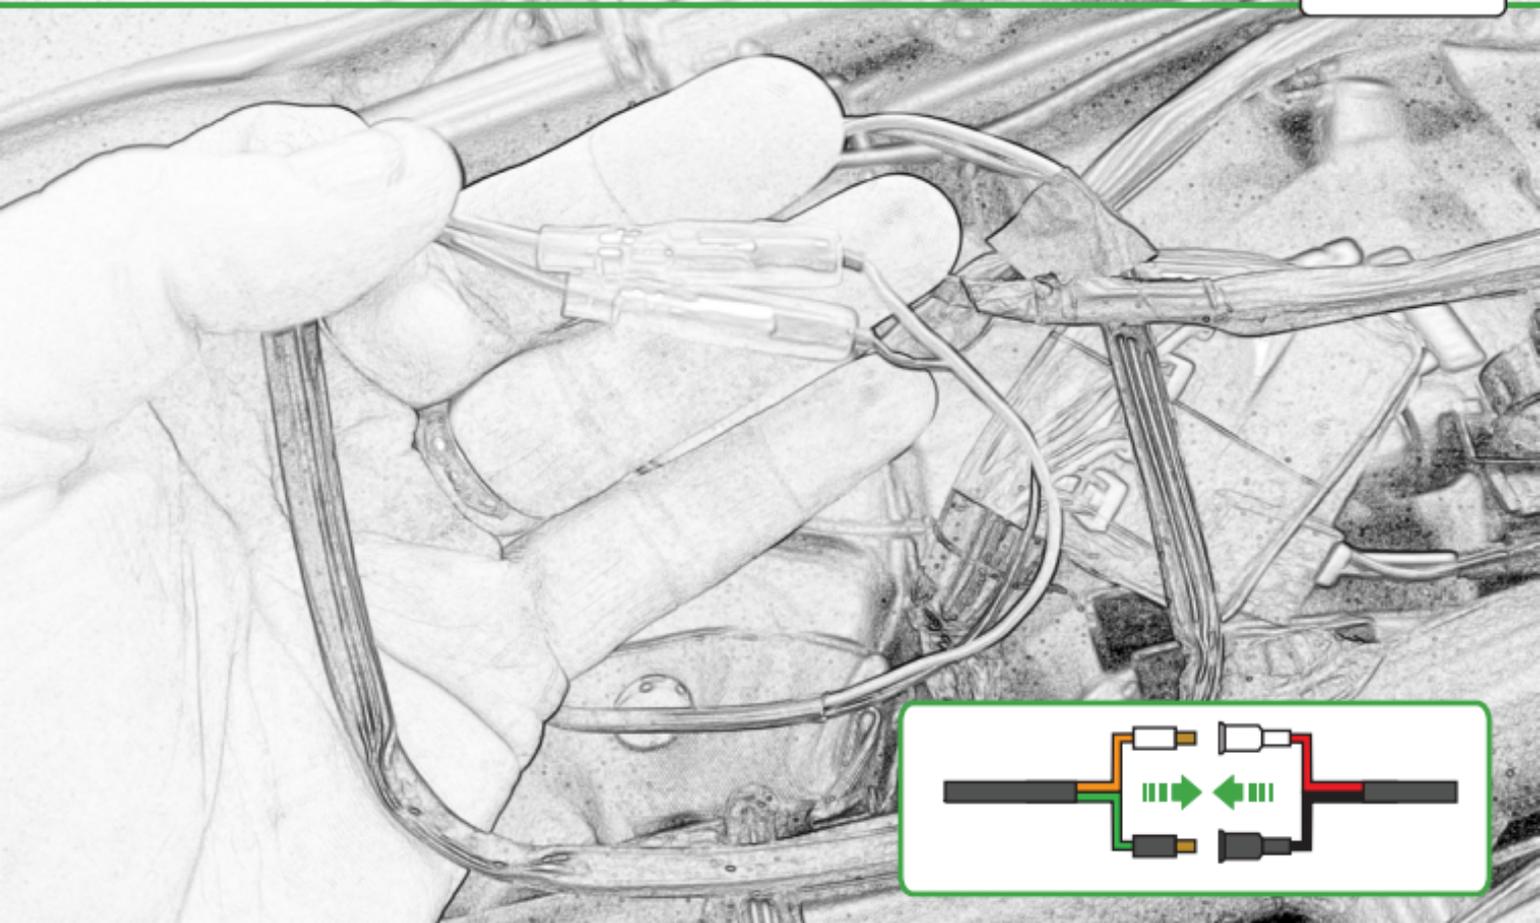




Reverse Stages

2 - 1

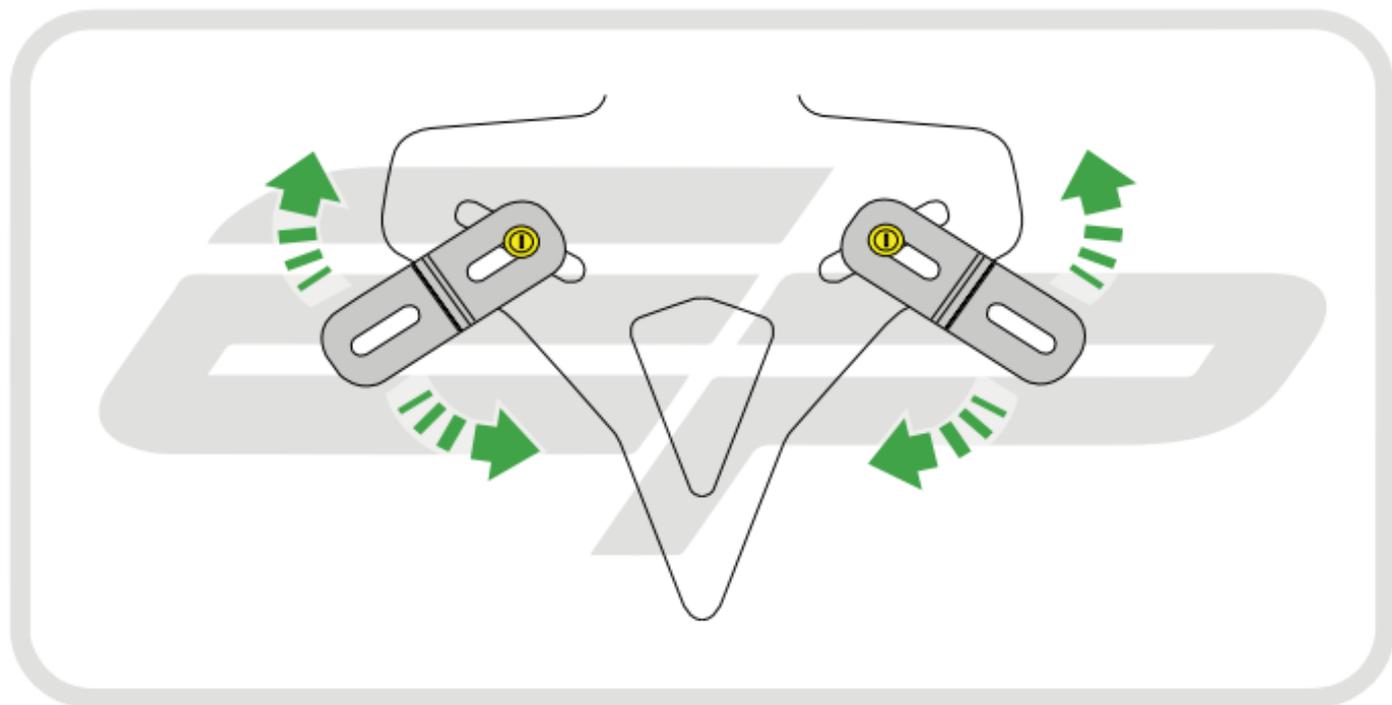

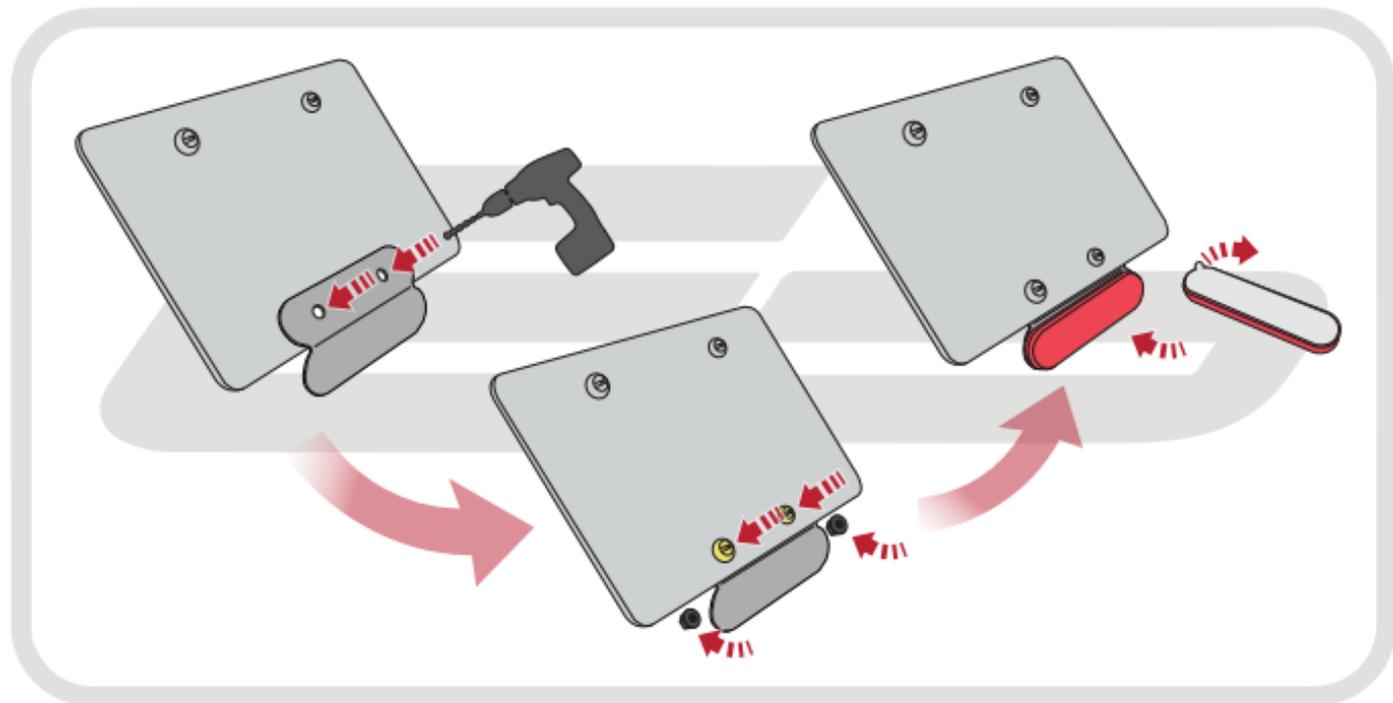



ESSENTIAL CHECKS

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com