



INSTALLATION INSTRUCTIONS


Accessory
SADDLEBAG MOUNTING BRACKET
 P/N 08L56-MEG-100E

Application
After 2007 VT750C

Publications No.
MII 13304-13660
 Issue Date
Revised: April 2011

Honda Dealer: Please give a copy of these instructions to your customer.


PARTS LIST

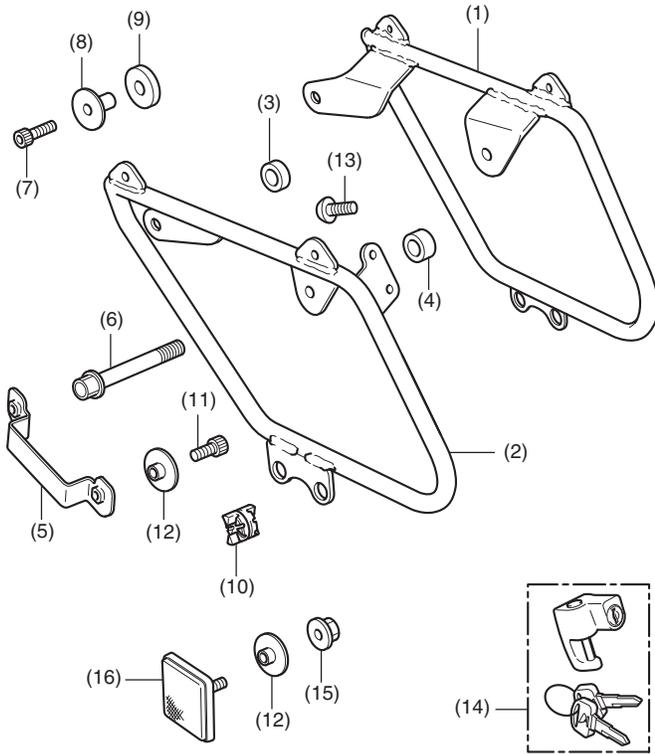

- The saddlebag mounting bracket cannot be installed when the motorcycle is equipped with the seat trim rail.


No.	Description	Qty
(1)	Right saddlebag stay	1
(2)	Left saddlebag stay	1
(3)	Collar (short)	2
(4)	Collar (long)	6
(5)	Saddlebag bracket	2
(6)	10 mm flange bolt	4
(7)	6 mm socket bolt (long)	4
(8)	Flange collar (Black)	4
(9)	Rubber washer	8
(10)	Grommet	4
(11)	6 mm socket bolt (short)	4
(12)	Flange collar (Silver)	6
(13)	6 mm one-way bolt	1
(14)	Helmet holder	1
(15)	5 mm flange nut	2
(16)	Reflex reflector	2

SADDLEBAG PLAIN TYPE Sold separately (P/N 08L56-MEG-100B)

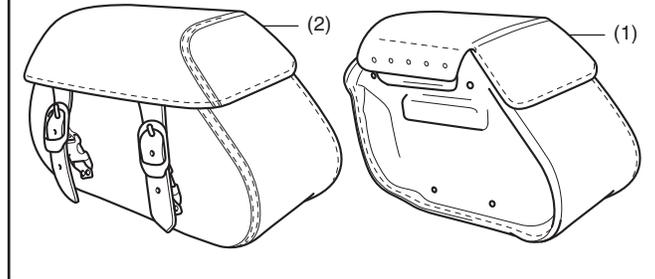


No.	Description	Qty
(1)	Right saddlebag	1
(2)	Left saddlebag	1

SADDLEBAG STUDDED TYPE Sold separately (P/N 08L56-MEG-100D)

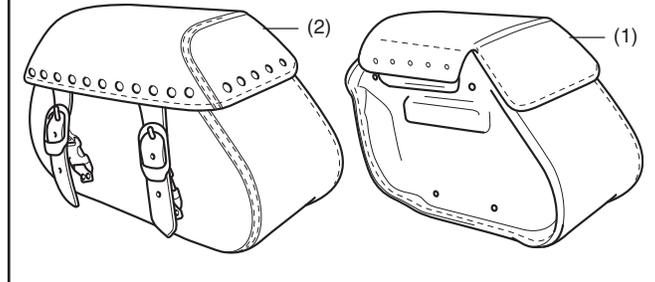


No.	Description	Qty
(1)	Right saddlebag	1
(2)	Left saddlebag	1

SADDLEBAG PLAIN TYPE Sold separately (P/N 08L56-MEM-101A)

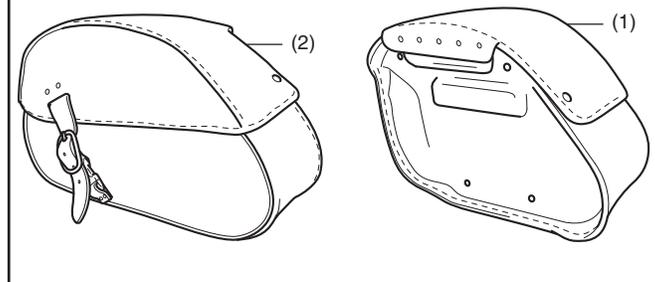


No.	Description	Qty
(1)	Right saddlebag	1
(2)	Left saddlebag	1

SADDLEBAG STUDDEDTYPE
Sold separately (P/N 08L56-MEM-101B)

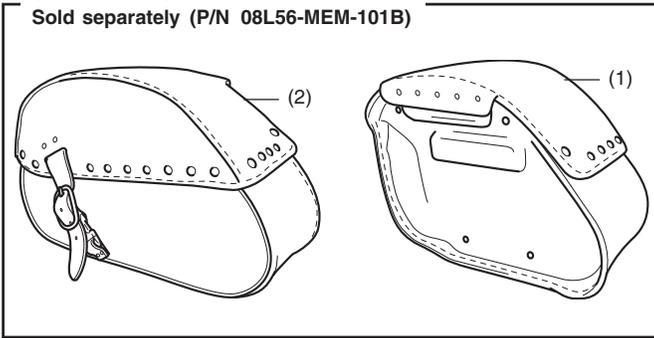

No.	Description	Qty
(1)	Right saddlebag	1
(2)	Left saddlebag	1

SADDLEBAG FRINGEDTYPE
Sold separately (P/N 08L56-MEM-101C)

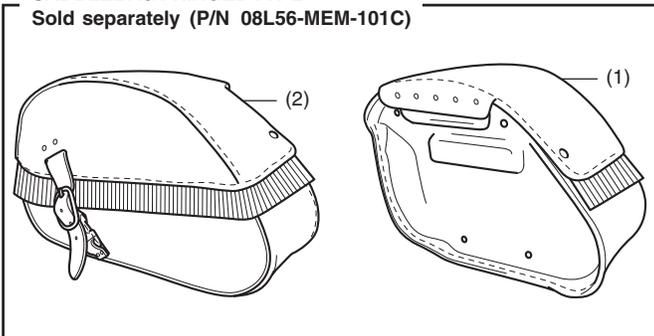

No.	Description	Qty
(1)	Right saddlebag	1
(2)	Left saddlebag	1

TOOLS AND SUPPLIES REQUIRED

- Socket (14 mm)
- Ratchet
- Electric drill
- Drill bit (4 and 9 mm)
- Hex wrench (5 mm)
- Box-end wrench (8 and 14 mm)
- Ruler
- Marker
- Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
5 mm flange nut	5.2	0.5	3.8
6 mm socket bolt	10	1.0	7
6 mm one-way bolt	10	1.0	7
10 mm flange bolt	64	6.5	47

USE AND CARE INFORMATION



- The weight of the cargo must not exceed the following maximum weight capacity:

Maximum Weight Capacity	
Right saddlebag	10 lbs (4.5 kg)
Left saddlebag	10 lbs (4.5 kg)


- The leather saddlebags are a high quality leather product that must be cared for. To protect the bags from exposure to weather, clean and condition the leather periodically with high-quality leather care products.
- If the bags become completely wet (water has soaked through the leather), they must be dried at room temperature.
Never dry the bags in a dryer, in front of a heater, or near a fireplace. When allowing the bags to dry, stuff them with newspaper so they retain their shape. Allow two to three days for the bags to dry completely. After drying, apply a high-quality leather conditioner.
- Before riding, confirm that the lid is closed and do not open and close it while riding.
- Load the luggage evenly between the right and left side.
- The saddlebags are not perfectly watertight, and water may enter when washing the motorcycle, when it rains, etc.
- Do not place valuables or easily breakable items in the saddlebags.
- Check the accessory mounts frequently and retighten if necessary.

INSTALLATION


1. Install the grommets and helmet holder on the left saddlebag stay as shown.

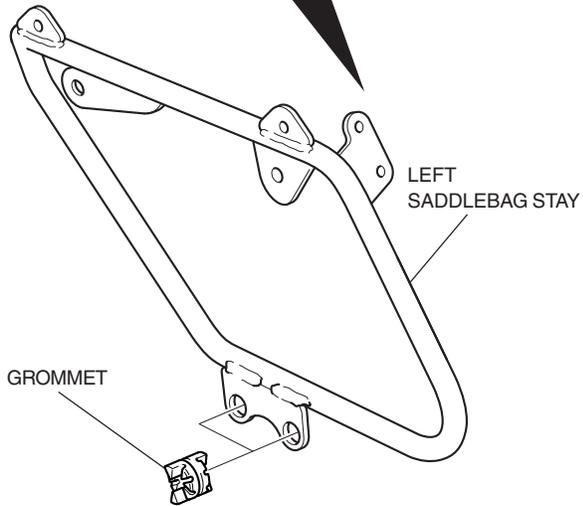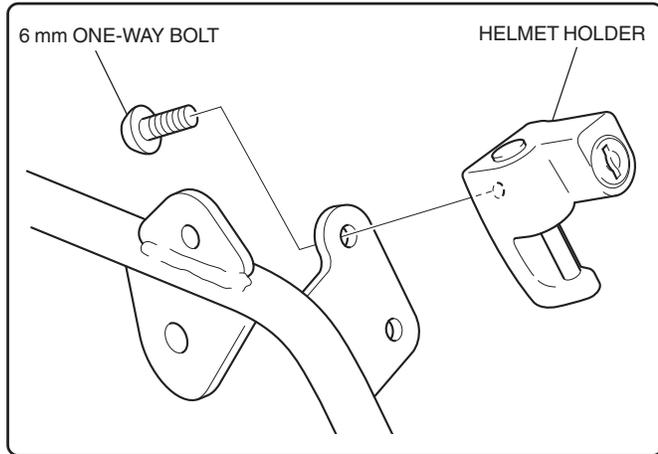


2. Remove the bolt and washer as shown.

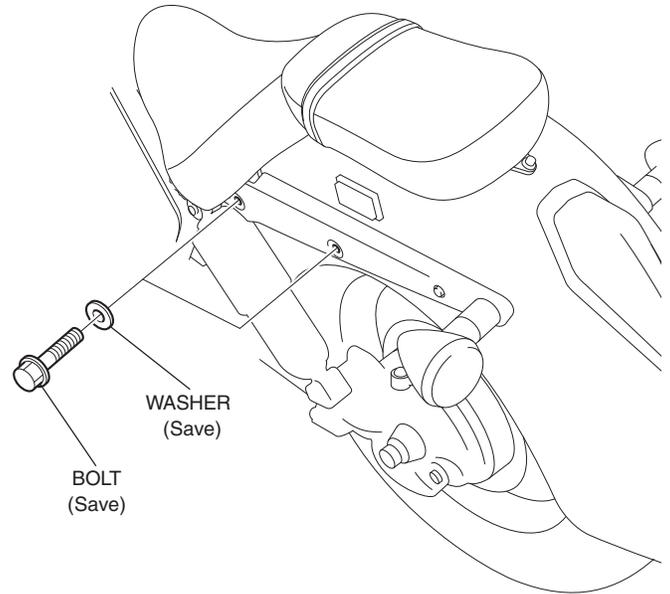


3. Loosely install the left saddlebag stay as shown.

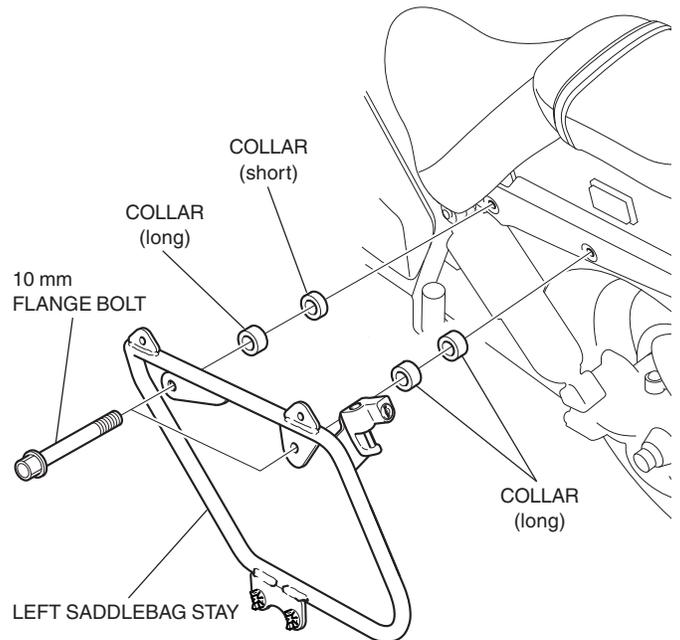


When you are also installing the Backrest Stay

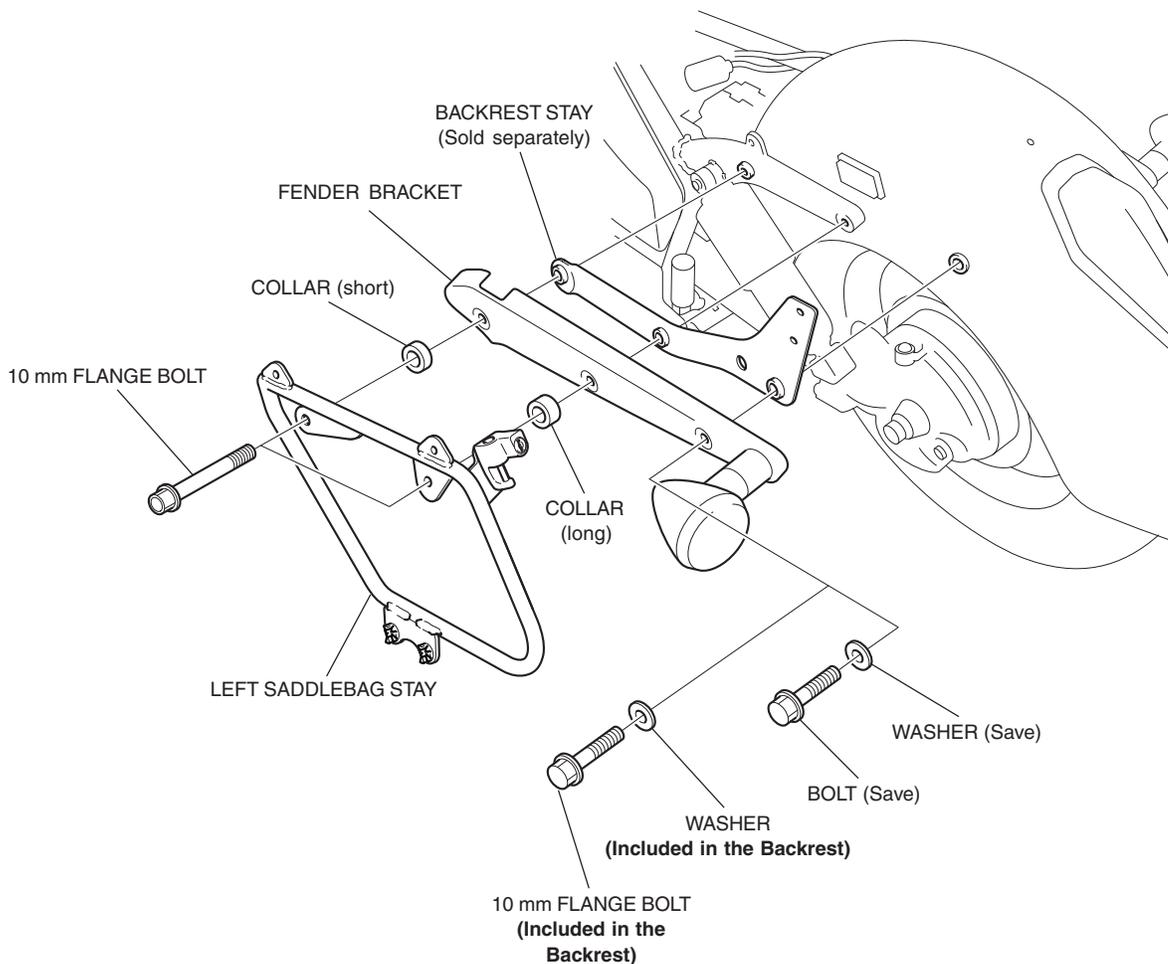


When you are also installing the Rear Fender Rail

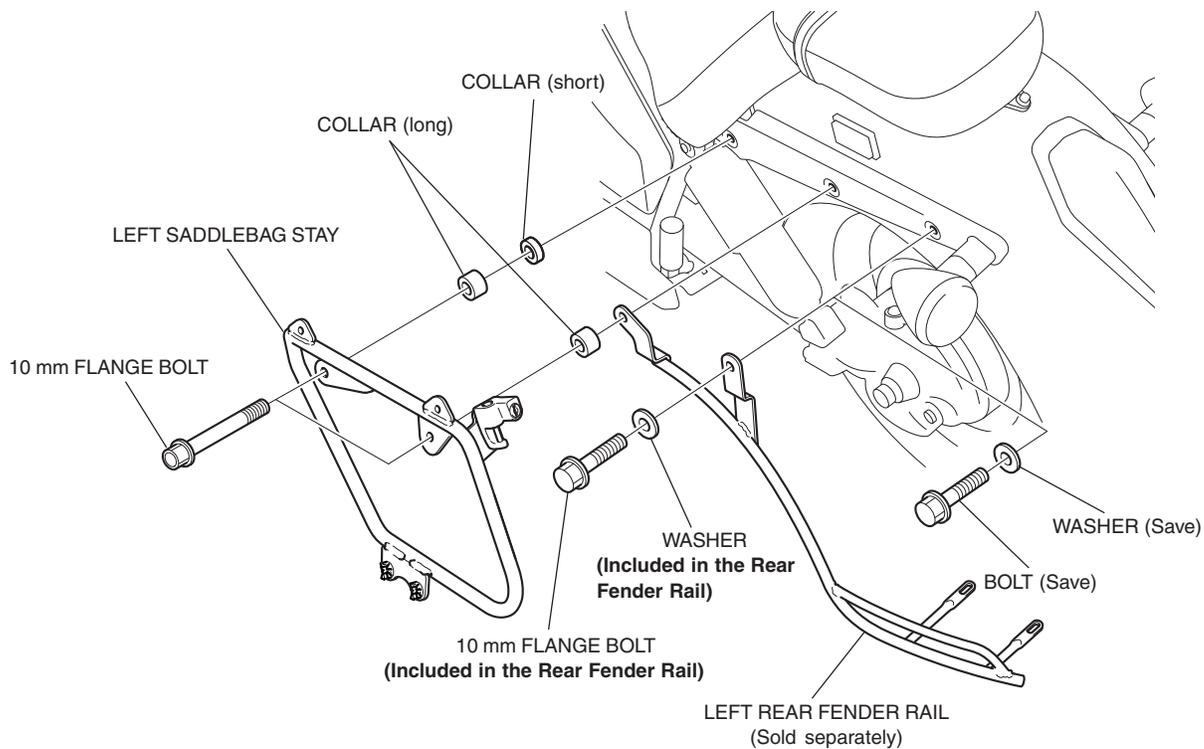

When you are also installing the Rear Fender Rail and Backrest Stay

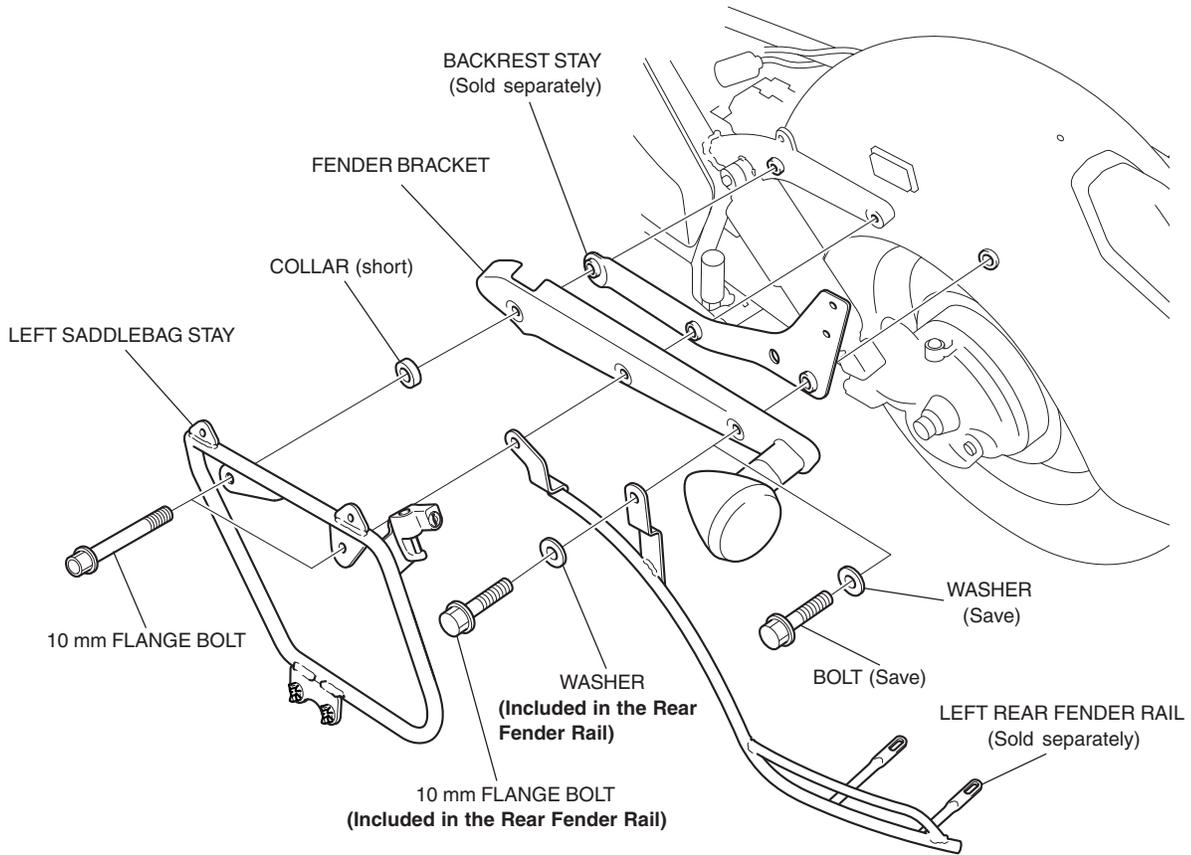


4. Torque all 10 mm bolts to the specification in the torque chart.

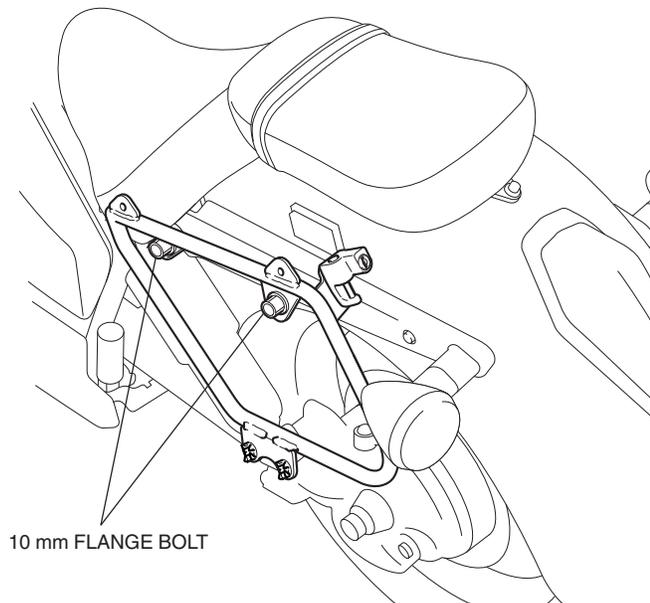


5. Using a ruler and a marker, measure and mark the saddlebags as shown.


<Left "single buckle" saddlebag>

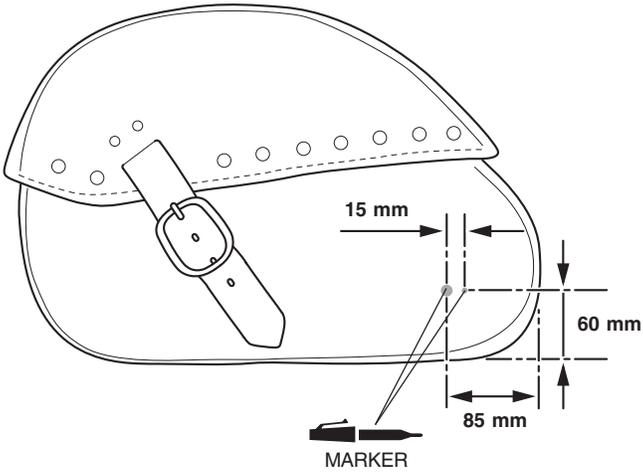


<Right "single buckle" saddlebag>

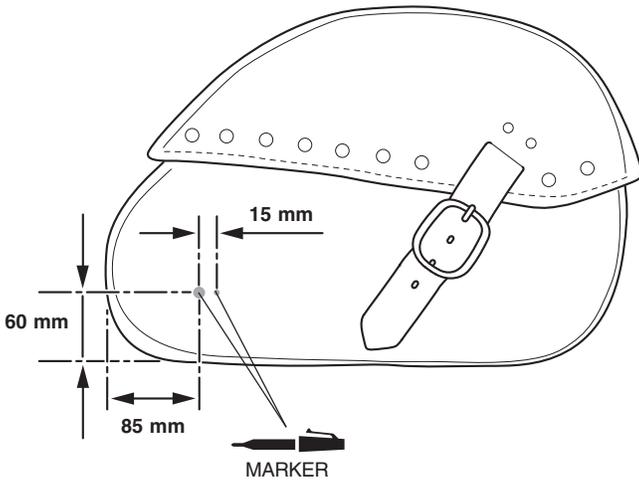

<Left "double buckle" saddlebag>

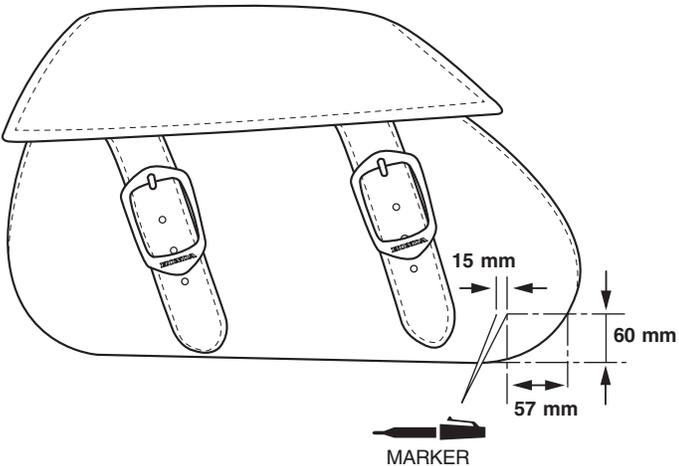


<Right "double buckle" saddlebag>

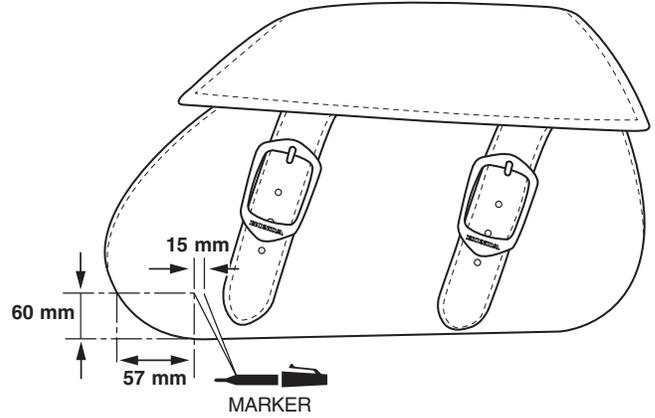


6. Using an electric drill and drill bit, drill a 9 mm and 4 mm hole through each of the two marks you just made as shown.


<Left saddlebag>

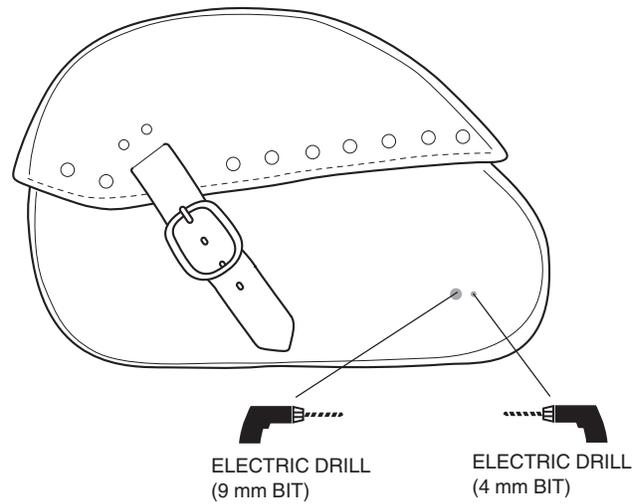

<Right saddlebag>

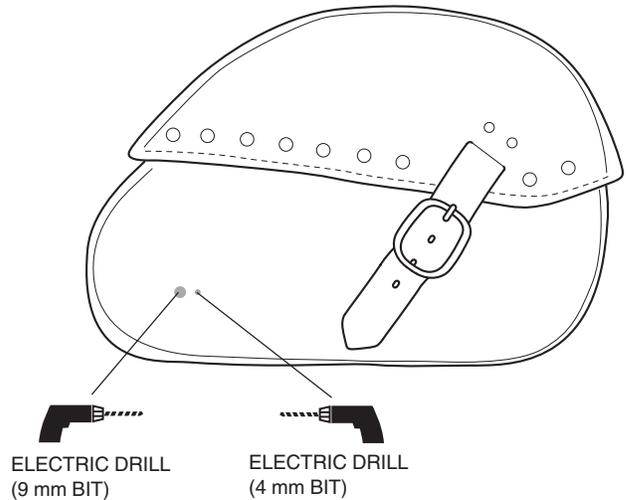


7. Install the reflex reflectors on the right saddlebag as shown.


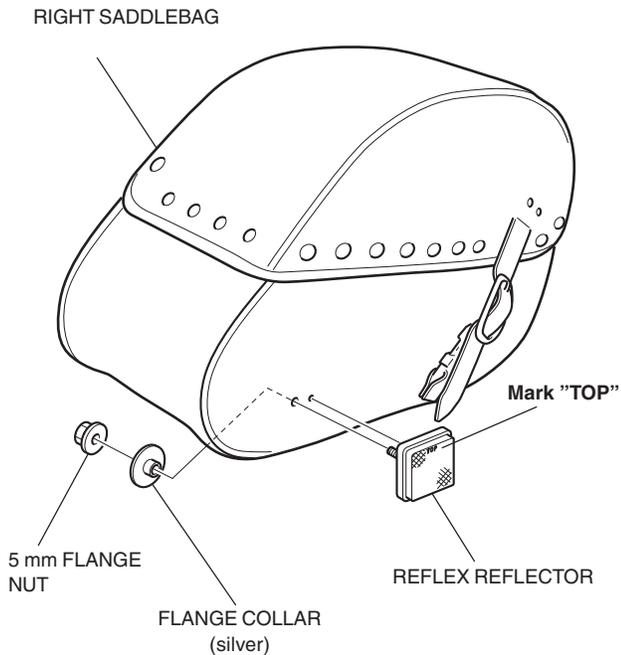


8. Repeat on the left side.

9. Install the saddlebag bracket on the left saddlebag as shown.

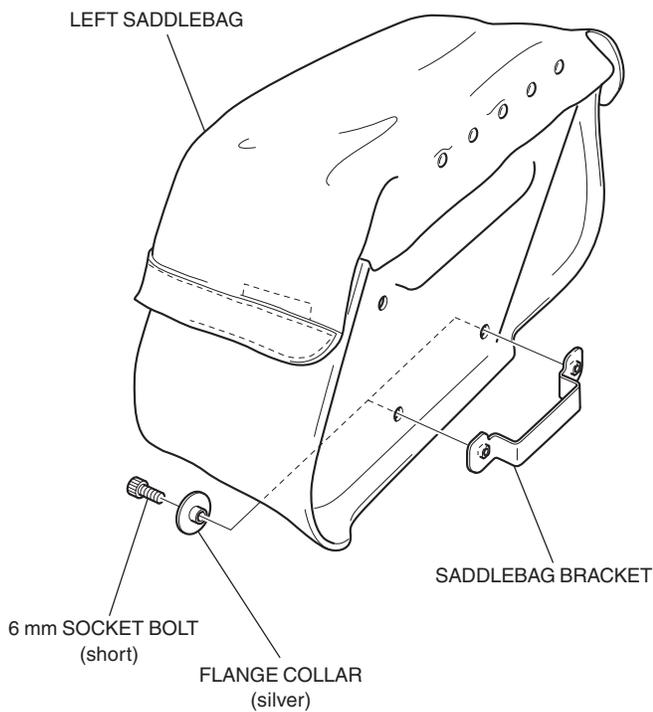

10. Install the left saddlebag as shown.

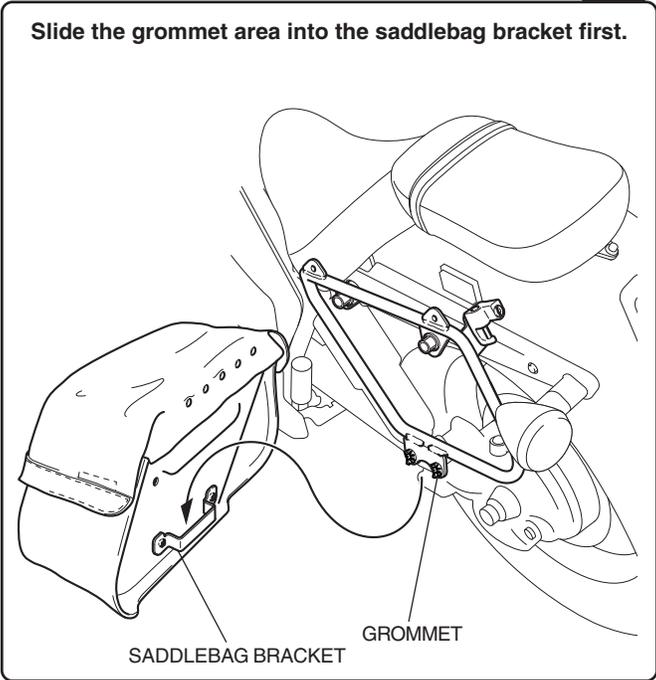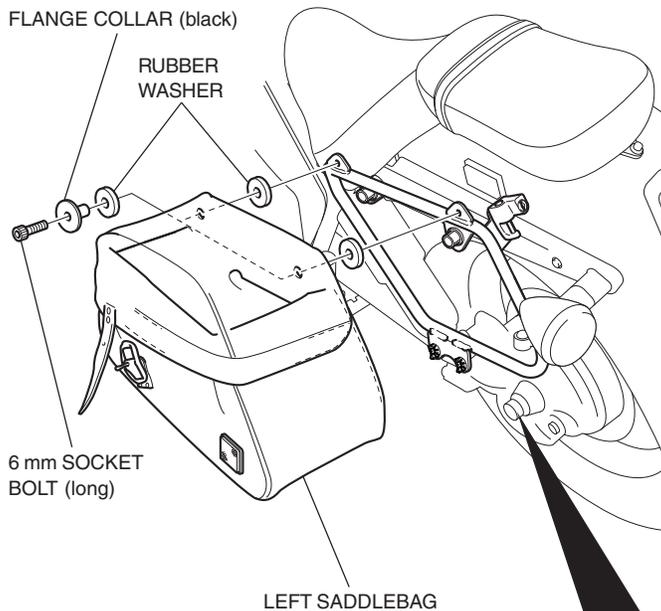

11. Repeat on the right side.

- **The helmet holder is not installed on the right saddlebag stay.**

Attach a helmet to the holder as shown.

