



INSTALLATION INSTRUCTIONS


Accessory
PASSENGER FLOORBOARD
P/N 08U65-MFY-100A

Application
VT1300CR/CS/CT

Publications No.
MII 13073
Issue Date
February 2010

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

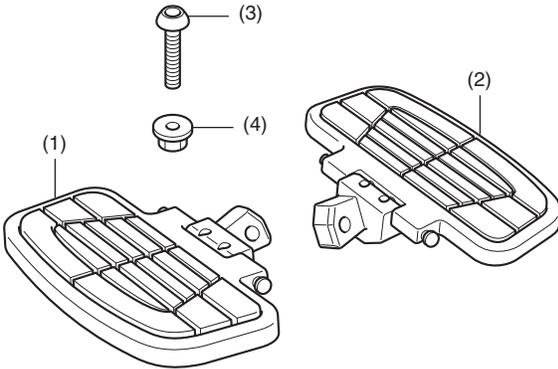

No.	Description	Qty
(1)	Right passenger floorboard	1
(2)	Left passenger floorboard	1
(3)	6 mm socket bolt	2
(4)	6 mm flange nut	2

TOOLS AND SUPPLY REQUIRED

- Hex wrench (4 mm)
- Open-end wrench (10 mm)
- Long nose pliers
- Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N-m	kgf-m	lbf-ft
6 mm flange nut	12	1.2	9

USE AND CARE INFORMATION


- Check the accessory mounts frequently and retighten if necessary.

INSTALLATION


- Remove the right passenger footpeg from the motorcycle as shown.

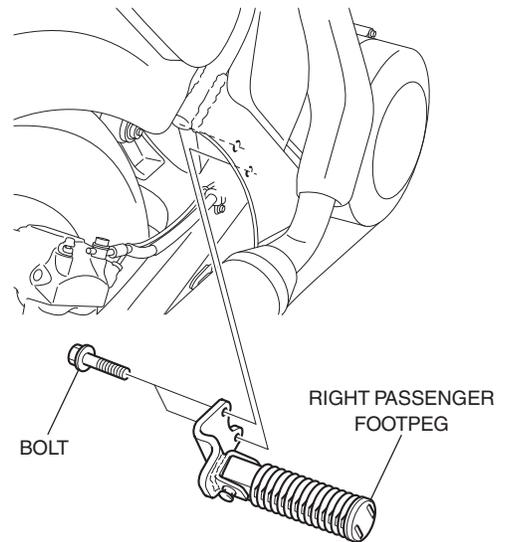


- Remove the right passenger footpeg from the bracket.

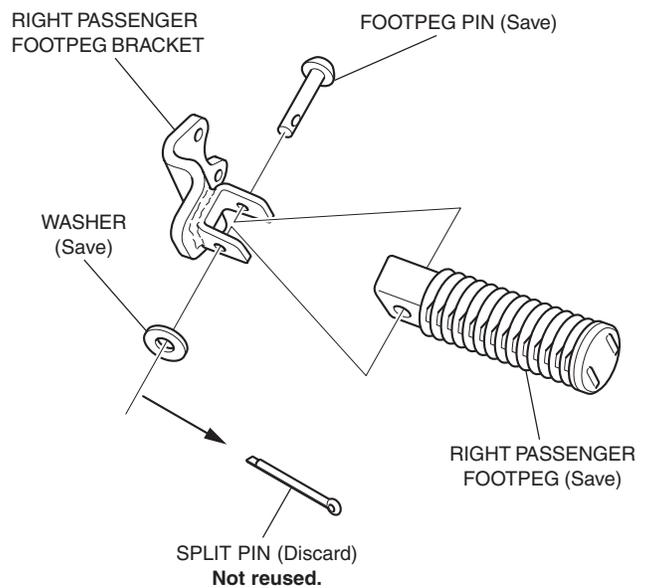

3. Install as shown to the right passenger footpeg bracket. Tighten the flange nut to the specification in the torque table.

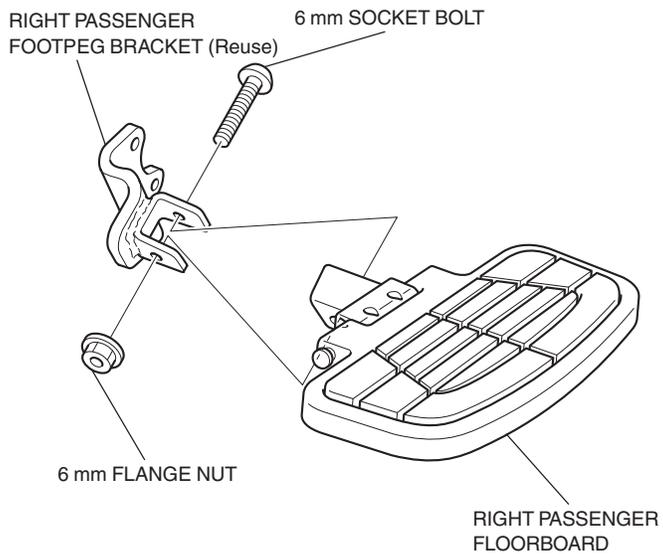

4. Install the right passenger floorboard as shown.

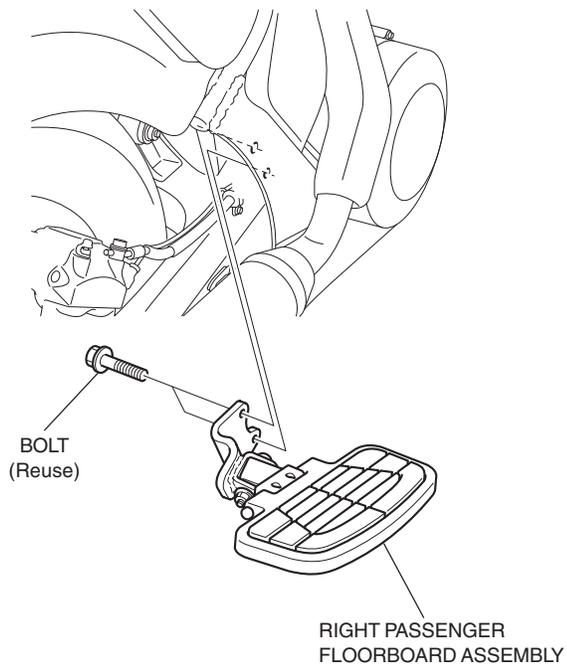

5. Repeat the procedures on the left side.