



INSTALLATION INSTRUCTIONS


Accessory
BRAIDED LINES THROTTLE CABLE
P/N 08Z56-MFY-100

Application
VT1300CR/CT

Publications No.
MII 13073
Issue Date
February 2010

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

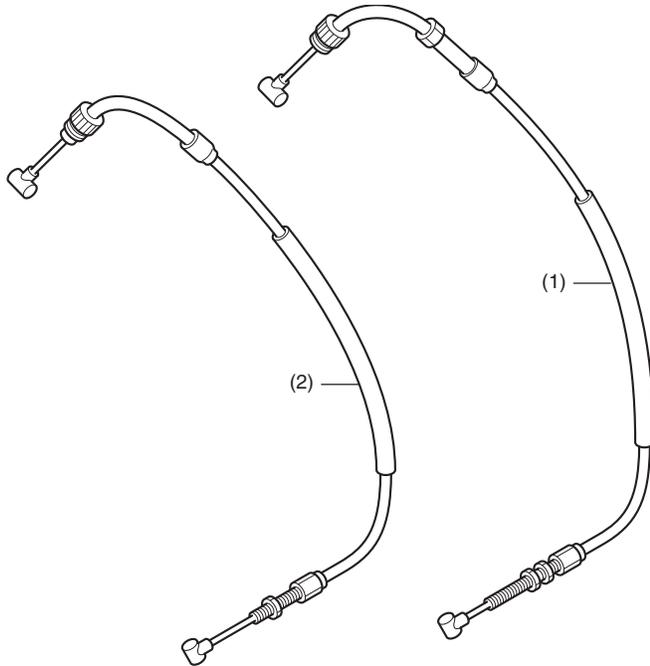

No.	Description	Qty
(1)	Throttle cable A	1
(2)	Throttle cable B	1

Customer Information: The information in these Accessory Installation Instructions are intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to the motorcycle.

USE AND CARE INFORMATION

- Refer to the Service Manual during installation.
- After installation, check for proper throttle operation.

INSTALLATION

CAUTION:

- To prevent burns, allow the engine and exhaust system to cool before installation.

1. Remove the throttle cables.
2. Install the supplied throttle cables in reverse order of removal.
3. Check the throttle grip free play at the throttle grip flange is between **2 - 6 mm (1/16 - 1/4 in)**.