

Copyright © 2018 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-937

FRONT FENDER EXTENSION

FITMENT: HONDA GOLDWING/GOLDWING TOUR 2018-NEWER

3/15/2019

TOOLS NEEDED:	DRILL	1/4" DRILL BIT	4 MM ALLEN WRENCH	RUBBING ALCOHOL	CLEAN RAG
	RULER	MASKING TAPE	REMOVABLE THREAD LOCK		

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

USE REMOVABLE THREAD LOCK ON ALL FASTENERS.

ESTIMATED INSTALLATION TIME: 20 TO 30 MIN.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

INSTALLATION:

1. PLACE MASKING TAPE ON THE LEFT SIDE OF THE FRONT FENDER (FIG. 1).
2. MEASURE AND MARK THE CENTER OF THE HOLE TO DRILL AS SHOWN IN FIG. 1.
3. HOLD A SMALL PIECE OF WOOD OR PLASTIC INSIDE THE FENDER (FIG. 2) AND DRILL A 1/4" HOLE THROUGH THE FENDER. (BE SURE NOT TO HIT THE TIRE WITH THE DRILL BIT.)
4. REPEAT STEP 1-3 ON RIGHT SIDE.
5. FIT CHECK THE FENDER EXTENSION TO MAKE SURE THE MOUNTING HOLES LINE UP.
6. USE RUBBING ALCOHOL AND A CLEAN RAG TO CLEAN INSIDE THE FENDER WHERE THE DOUBLE-SIDED TAPE WILL CONTACT THE FENDER.
7. ALLOW FENDER TO DRY COMPLETELY.
8. REMOVE THE MASKING FROM THE DOUBLE SIDED TAPE ON THE FENDER EXTENSION.
9. CAREFULLY PLACE THE FENDER EXTENSION IN POSITION ON THE FENDER AND PRESS FIRMLY IN PLACE.
10. INSTALL A SUPPLIED M6 SQUARE NUT INSIDE THE FENDER EXTENSION ON THE LEFT SIDE (FIG. 3 SHOWS NUT ORIENTATION). HOLD IN PLACE.
11. APPLY REMOVABLE TREAD LOCK TO A SUPPLIED M6 SCREW AND INSERT IN THE LEFT SIDE TO SECURE THE FENDER EXTENSION. (FIG. 4 SHOWS RIGHT SIDE).
12. REPEAT STEPS 10-11 ON THE RIGHT SIDE.

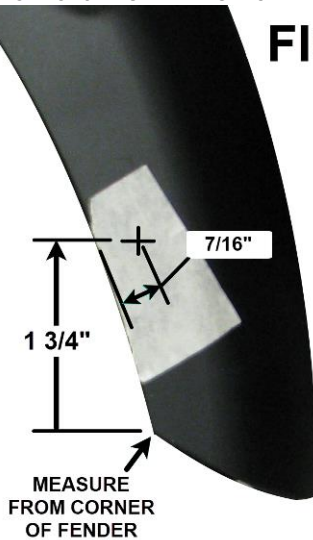


FIG. 1

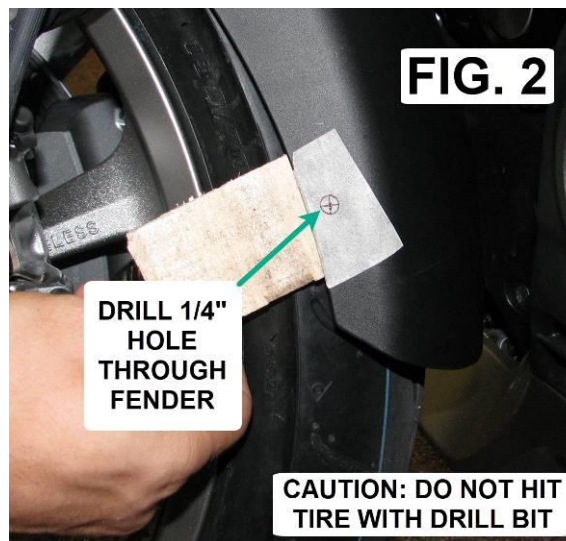


FIG. 2

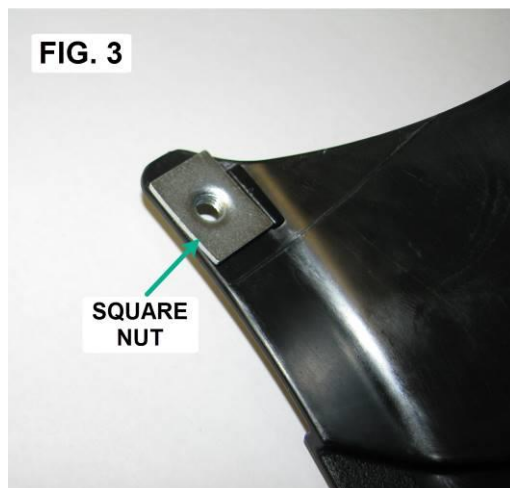


FIG. 3

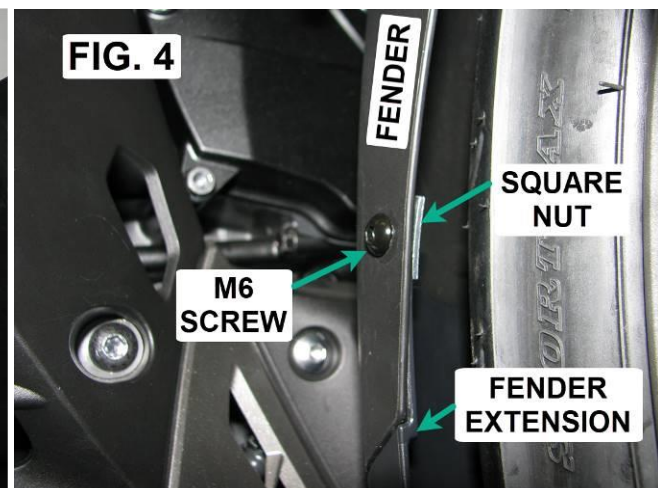


FIG. 4