



811001 Honda NC700 S & X / NC750 S & X Shock Shield Fitting Instructions

Kit Includes:

1X	Moulding	C811001
1X	Stick-Fit Pads	CTAP0052
3X	Push-Rivets	CFIT0013
1X	Alcohol Wipe	CWIP001

- The Pyramid Shock Shield is designed to be fitted using our Stick-Fit pads (layout shown in **Fig 1**). Push-Rivets are supplied and can be used for additional support if needed. If the Push-Rivets are needed the three indents in the fitting area can be used as a guide for positioning.
- Before fitting the the Stick-Fit pads, be sure to clean the OEM guard and use the Alcohol Wipe to prepare all the fixing faces - this helps to achieve a strong and secure fit.
- It is advised that the Pyramid Shock Shield is held up to the fixing faces to check fit before removing the backing paper on the Stick-Fit pads.
- Once the backing paper is removed and the Pyramid Shock Shield is in place, it is necessary to clamp/secure where possible. The most effective way of achieving pressure between the fixing faces is to wedge a small wooden block of an appropriate size (or something similar) between the Pyramid Shock Shield and the rear wheel (See **Fig 2** for an illustrated description).
- We advise giving the Stick-Fit pads at least 12 hours to cure fully, 24 hours if possible.

Fig 1


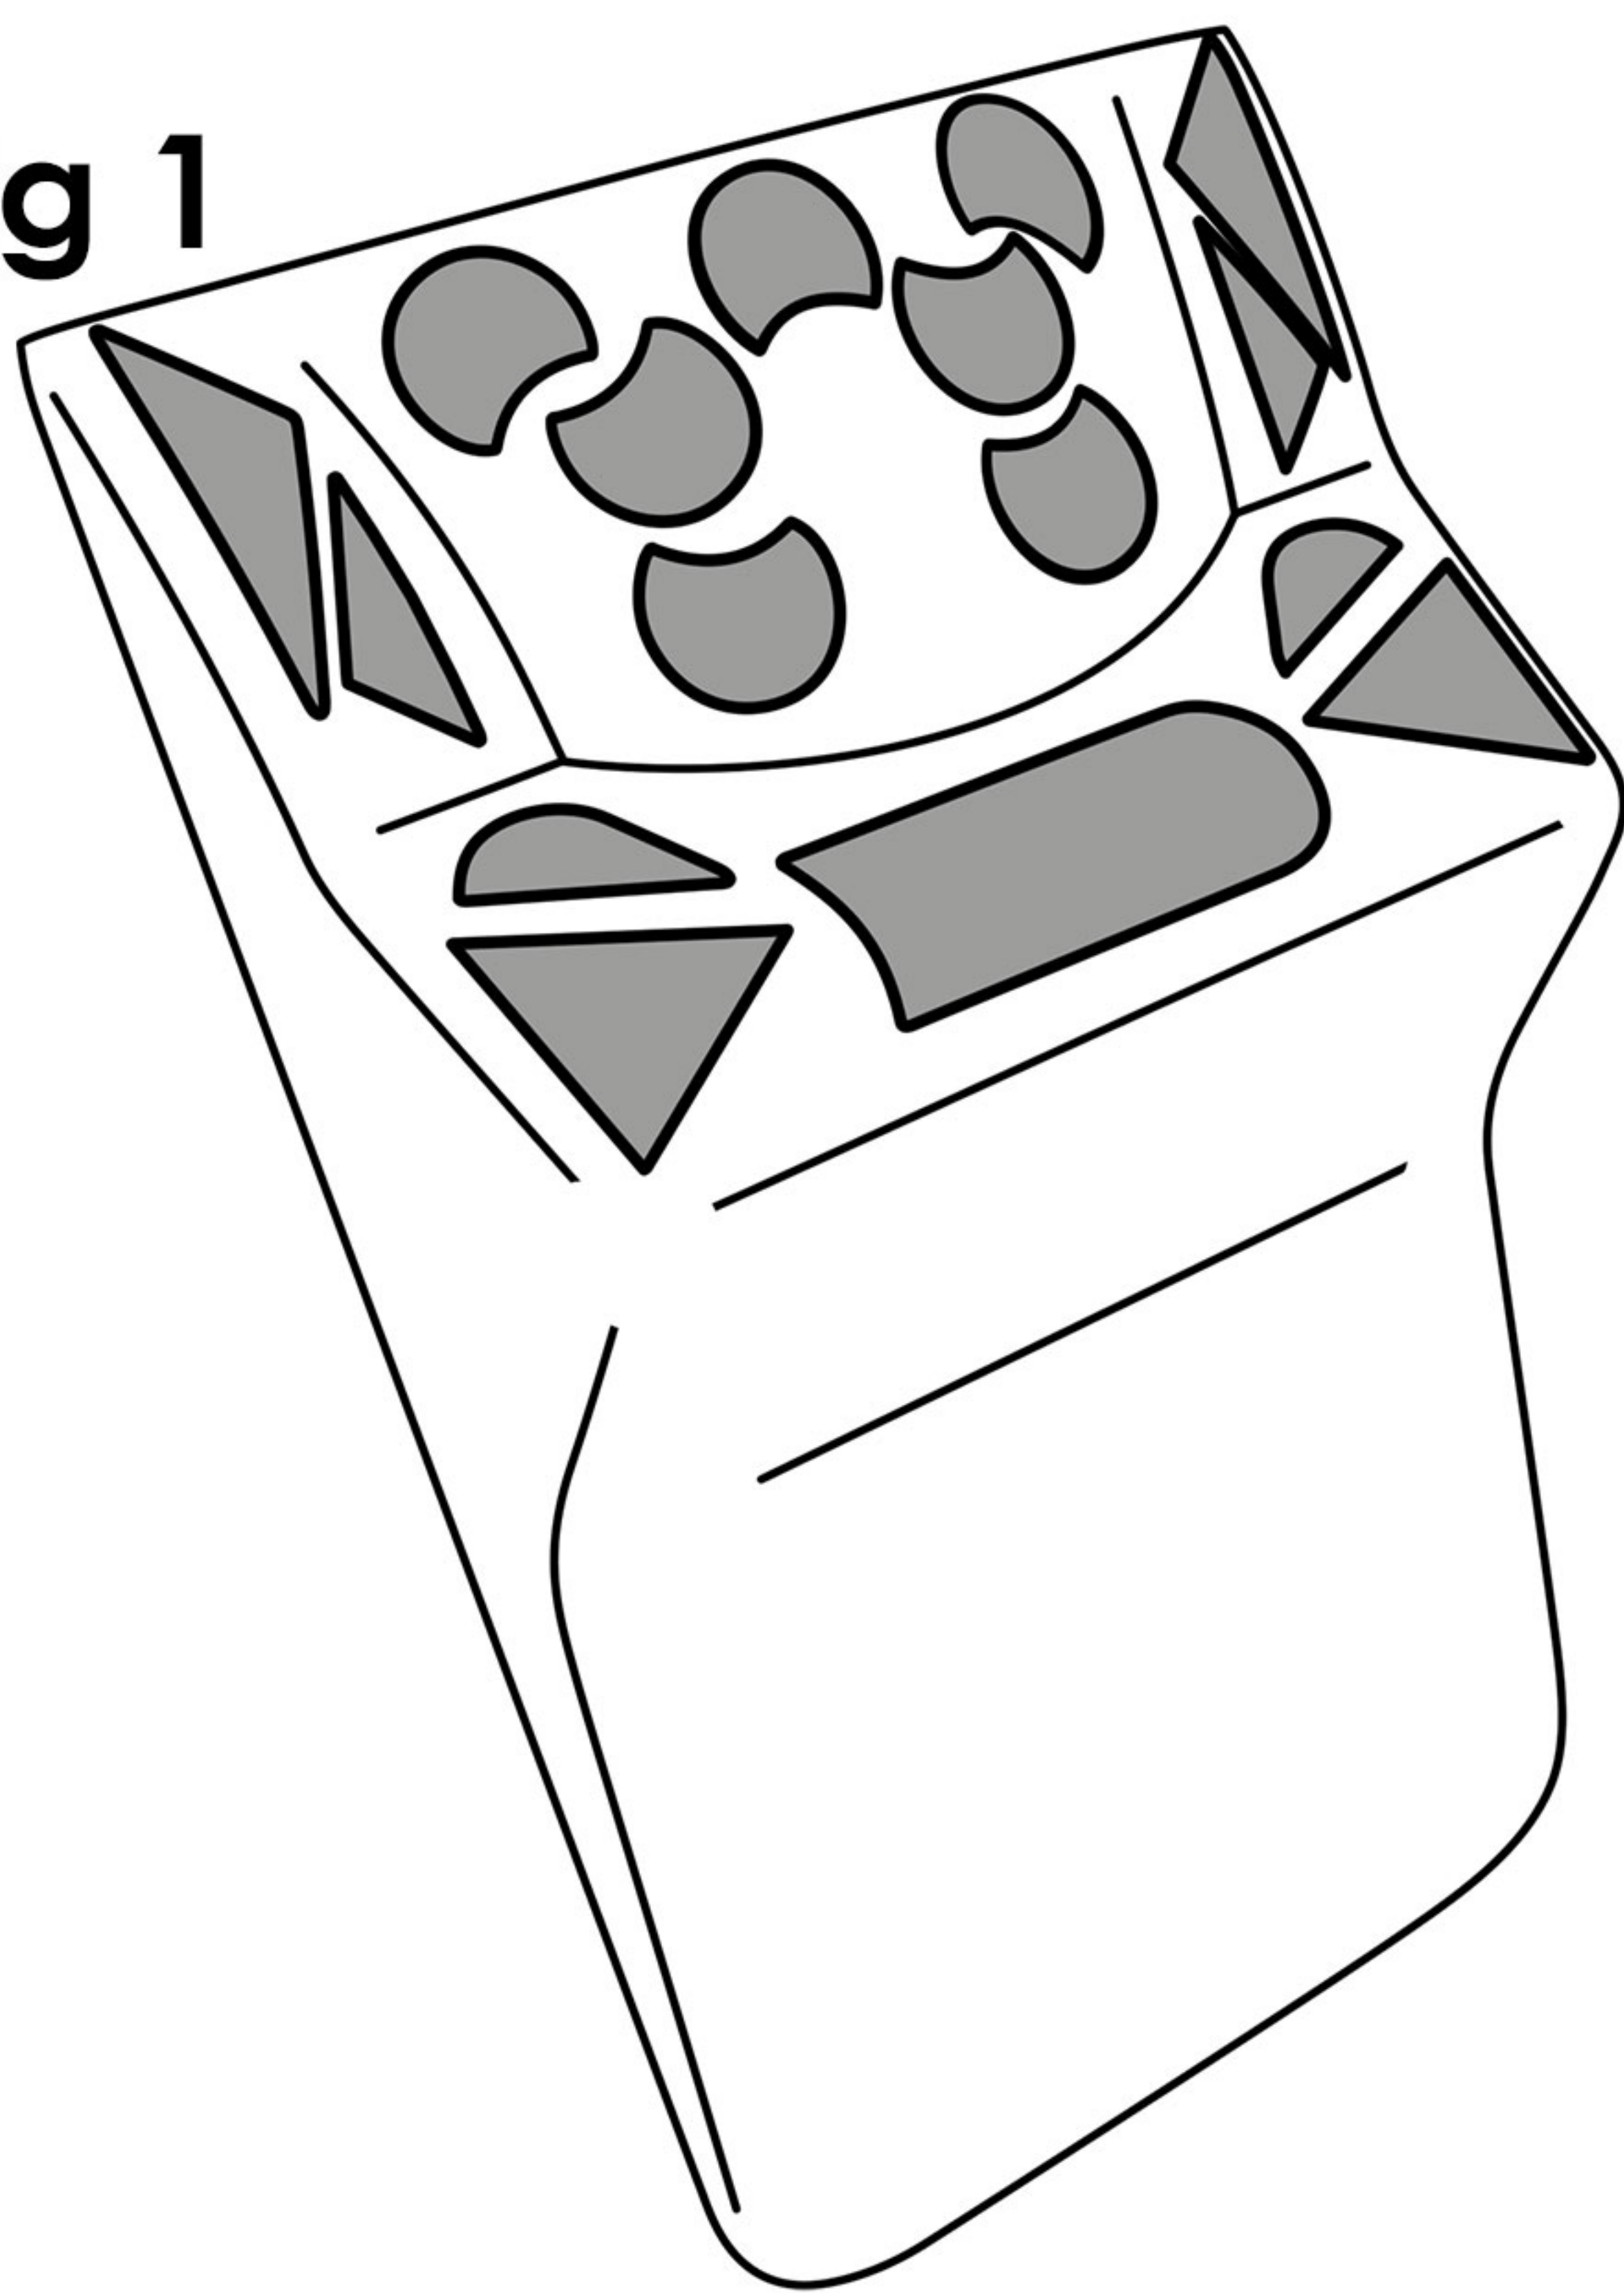


Fig 2

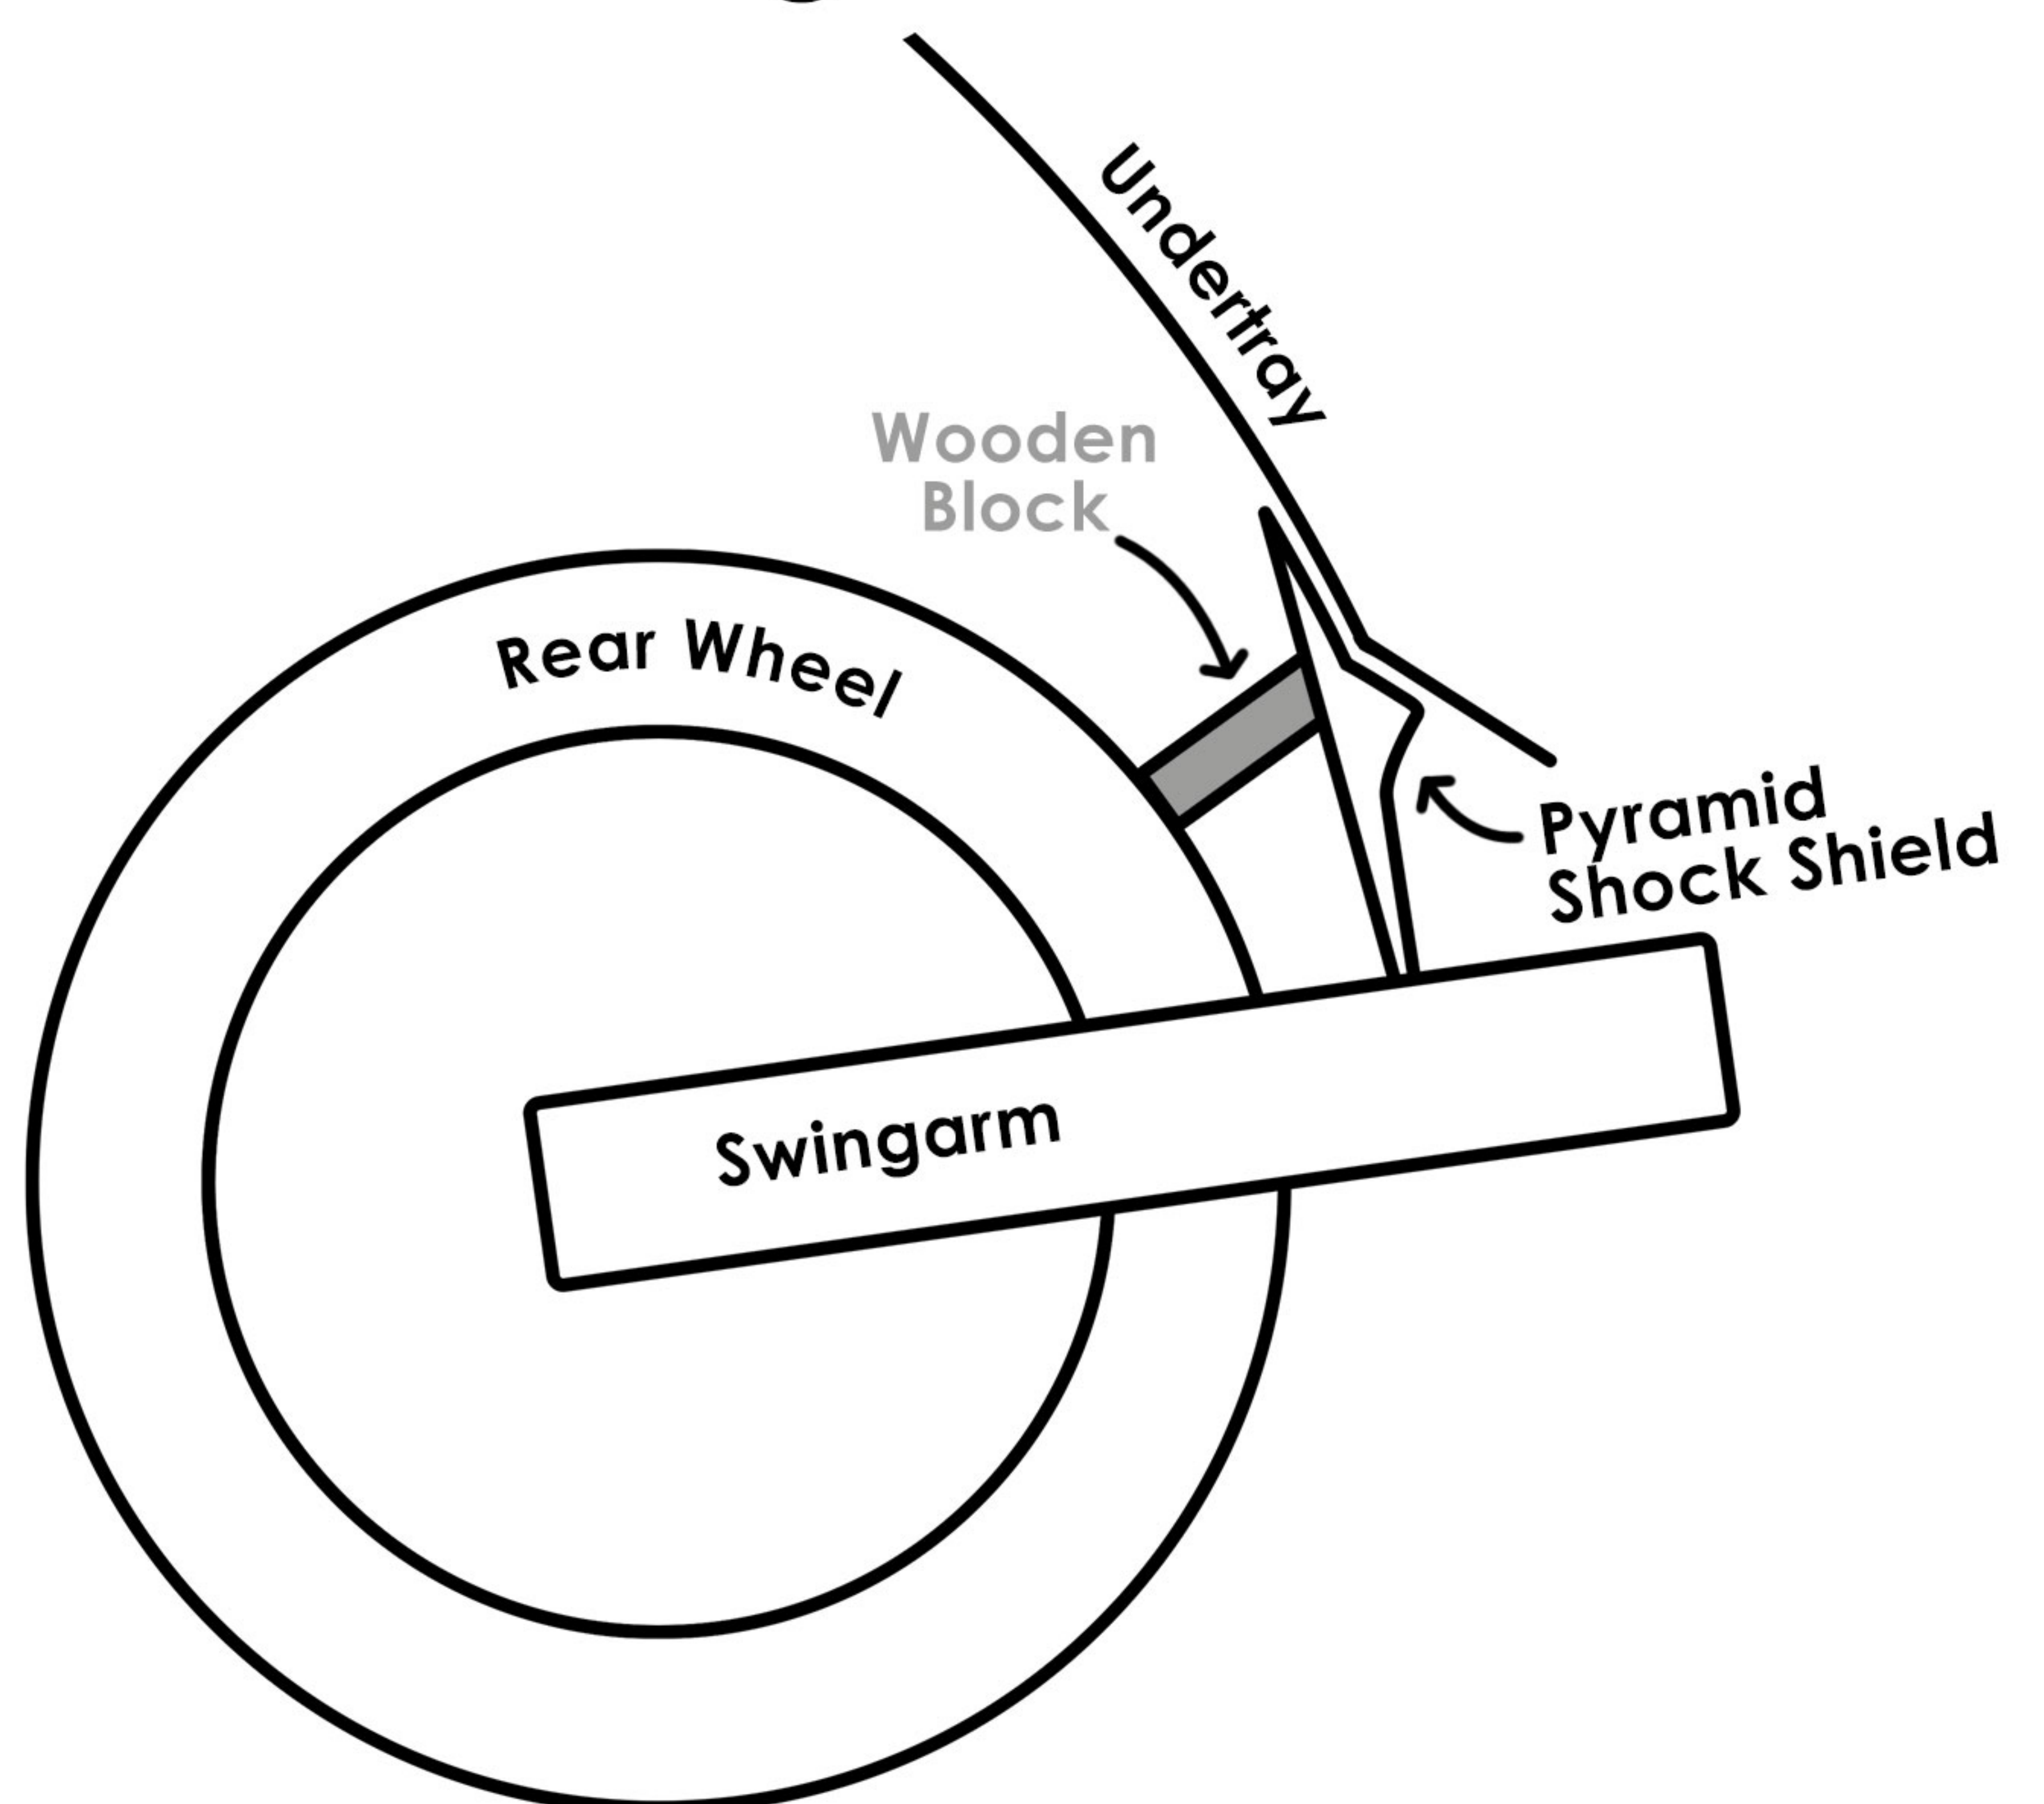

Got questions?

sales@pyramid-plastics.co.uk

+44 (0)1427 677990

www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!