



INSTALLATION INSTRUCTIONS

Accessory
BLACK EMBLEM

Application
2021 CR-V
2021 CR-V HYBRID

Publications No.
VERSION 1
Issue Date
OCT 2020

PARTS LIST

Car Set Name + H-mark Emblem Kit
P/N 08F20-TLA-100

Front H emblem



Rear H emblem



CR-V emblem



4 Push nuts



3 Alcohol wipes



6 Clips



AWD Emblem Kit
P/N 08F20-TLA-100A

AWD emblem



Alcohol wipe




TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- Stubby Phillips screwdriver
- 10 mm Open end wrench
- 6 mm, 8 mm, and 10 mm Sockets
- Ratchet
- Torque wrench
- Diagonal cutters
- Masking tape
- Blanket
- Shop towel
- String


The following tools are available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Push Pin Pliers (T/N 07AAC-001A101)

Illustration of the Black Emblems Installed on the Vehicle

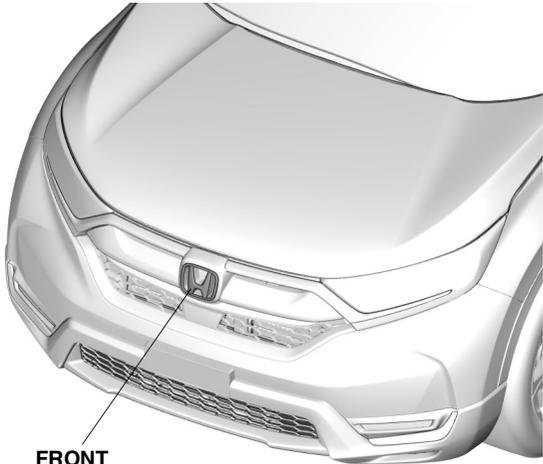

FRONT
H EMBLEM

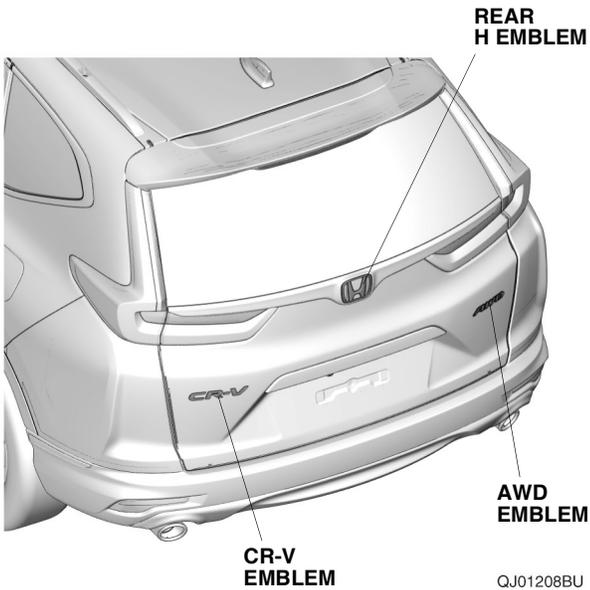

REAR
H EMBLEM

CR-V
EMBLEM

AWD
EMBLEM

QJ01208BU

INSTALLATION



Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- Be careful not to damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the your customer is aware of this.


1. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.
2. Wrap a shop towel around the hood latch lever.

HOOD LATCH
LEVER
(Wrap with
a shop towel.)

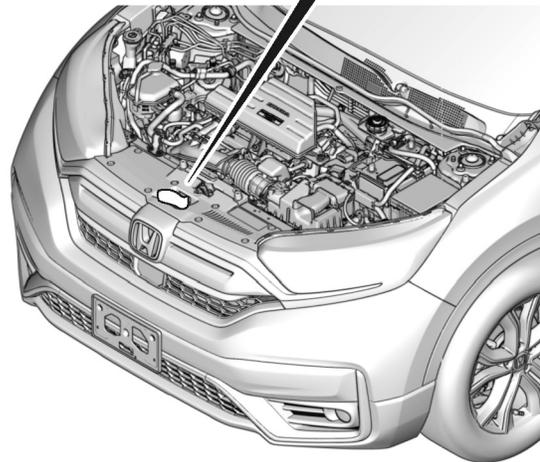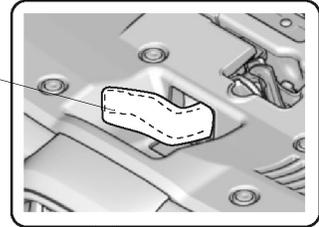


QHD2607AA


3. Remove the front bulkhead cover.

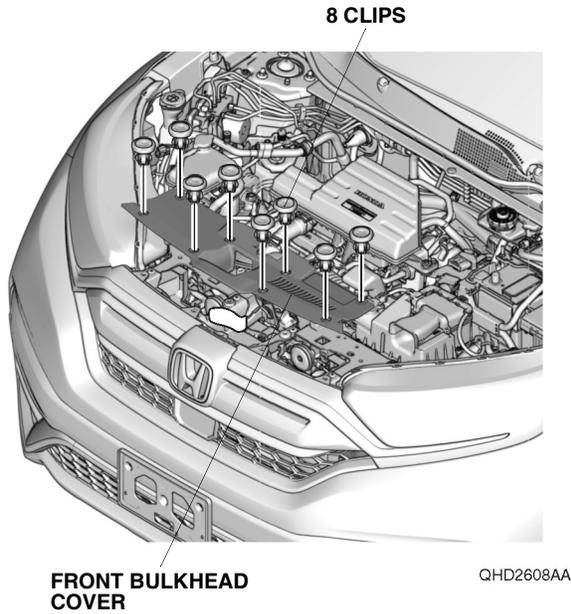


4. Remove the three self-tapping screws, one clip, and three clips (short) from the left front wheel arch protector as shown.

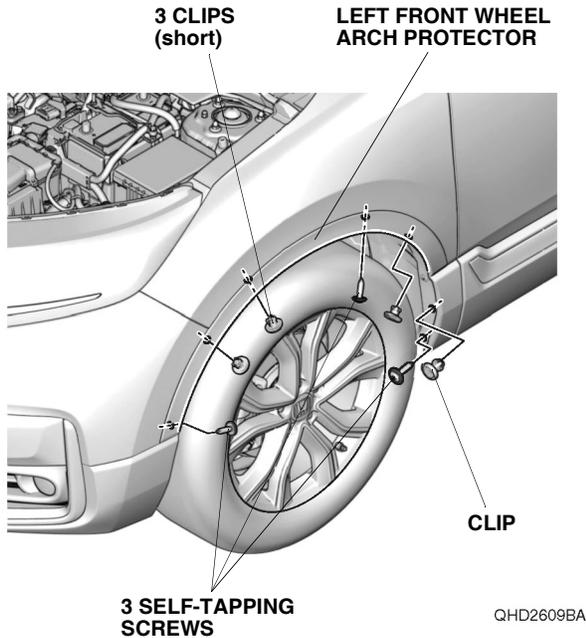


5. Remove the left front wheel arch protector as shown.

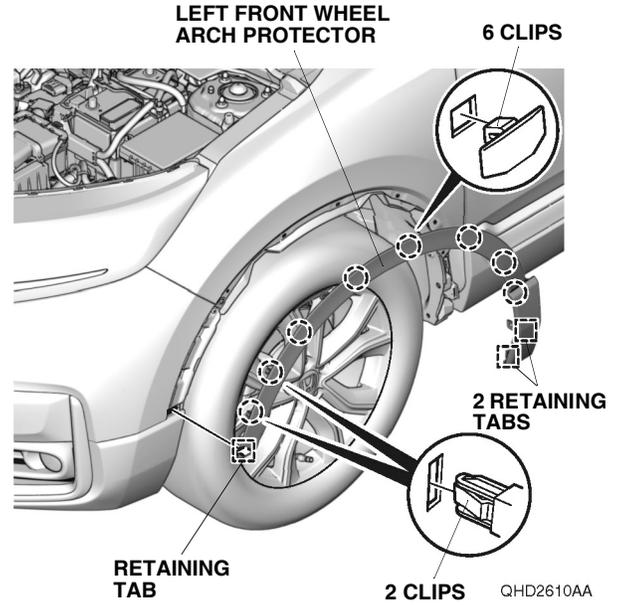

6. Repeat steps 4 and 5 on the right side of the vehicle.
7. Remove the front bumper:
- Apply masking tape on each side as shown.

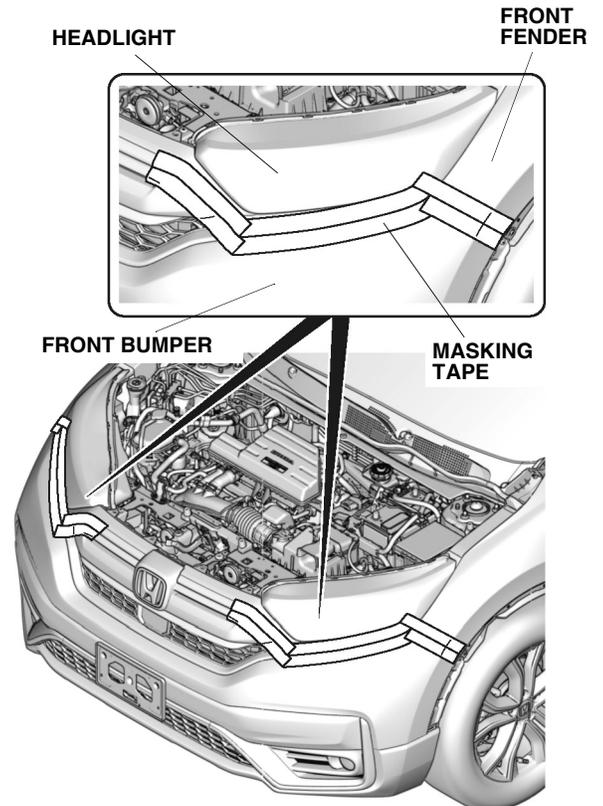


- Remove the two self-tapping screws and 10 clips as shown.

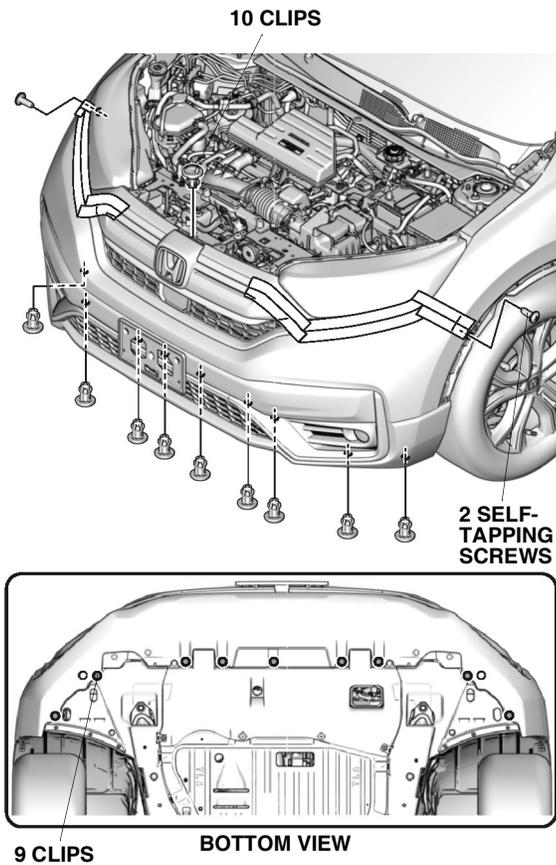


QHD2612AA

- With the help of an assistant, release the seven retaining tabs on each side.

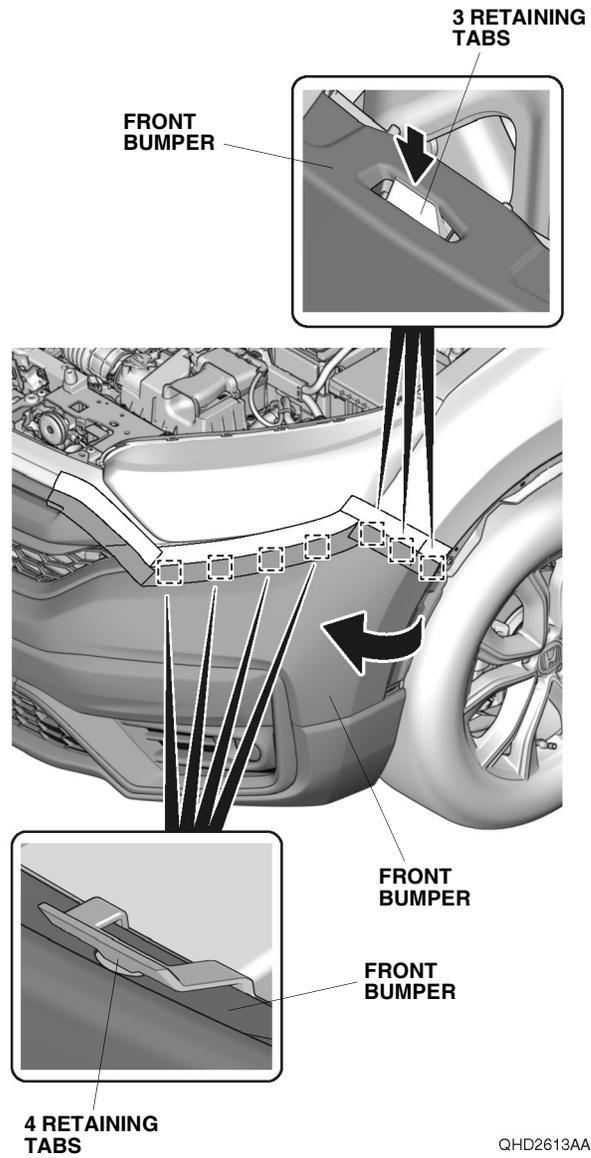


QHD2613AA

- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

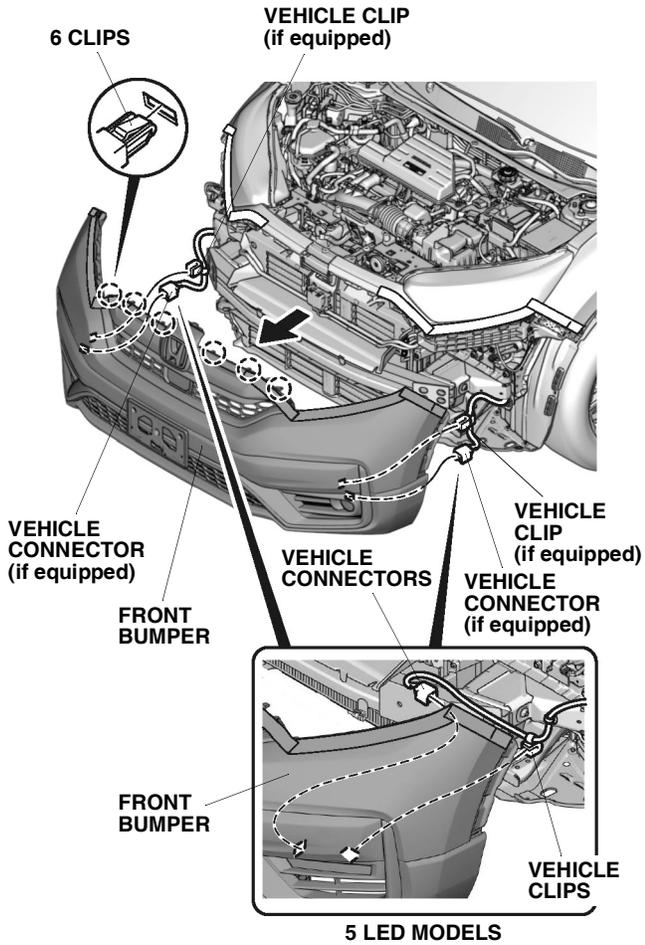


QJ52211AG

8. Remove the tailgate upper trim panel.

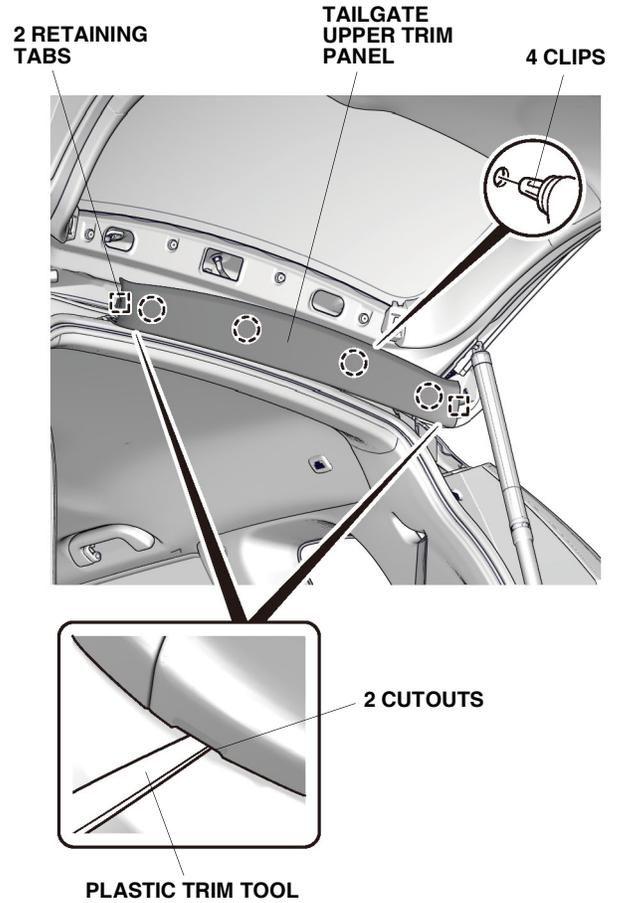


QGD2802AN

9. Remove the left and right tailgate side trim panels.

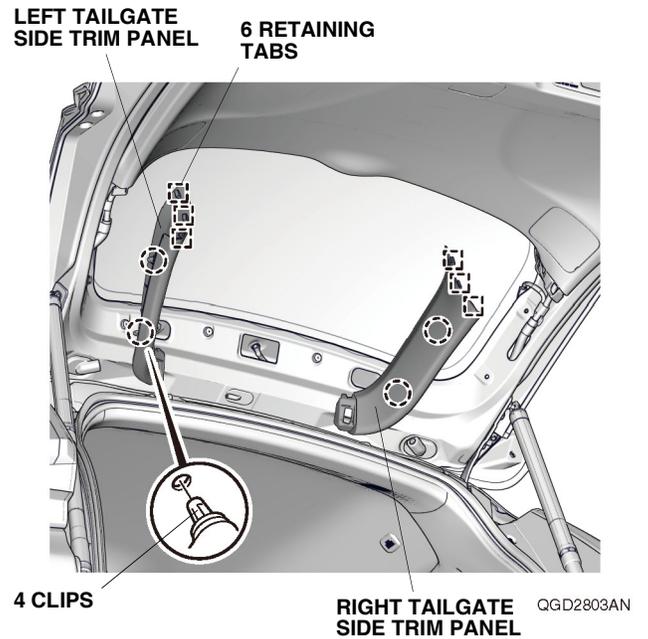


QGD2803AN

10. Remove the tailgate pull pocket.

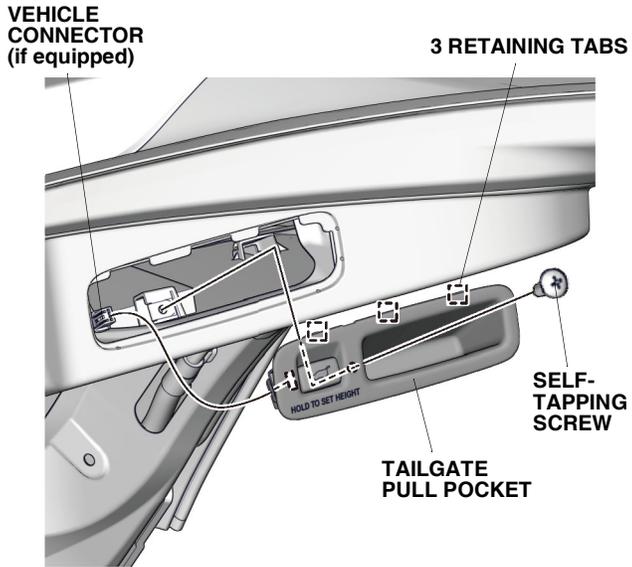


QGD2804AN

11. Remove the tailgate lower trim panel.

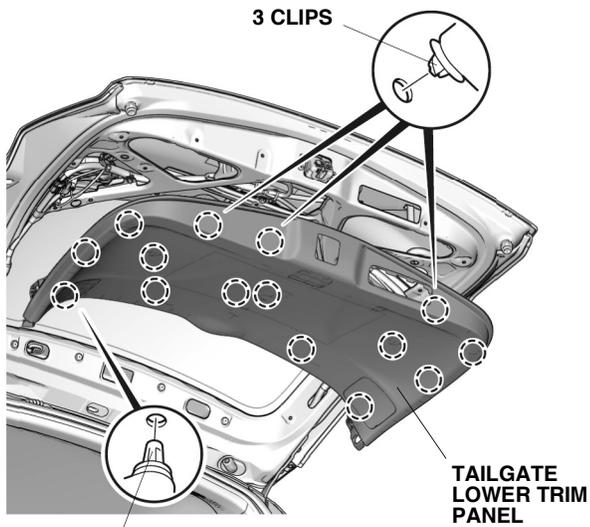

QJ01201AU


12. Remove the tailgate trim.

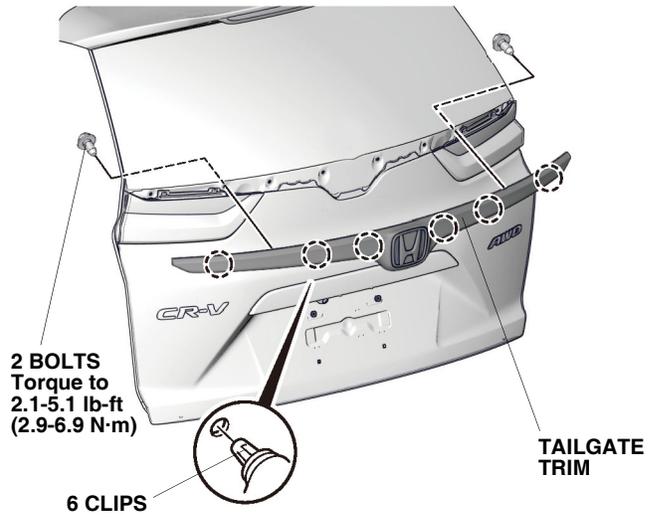

QGD2806AN


Installing the Black Emblems

13. Remove the vehicle front H emblem from the front grille.

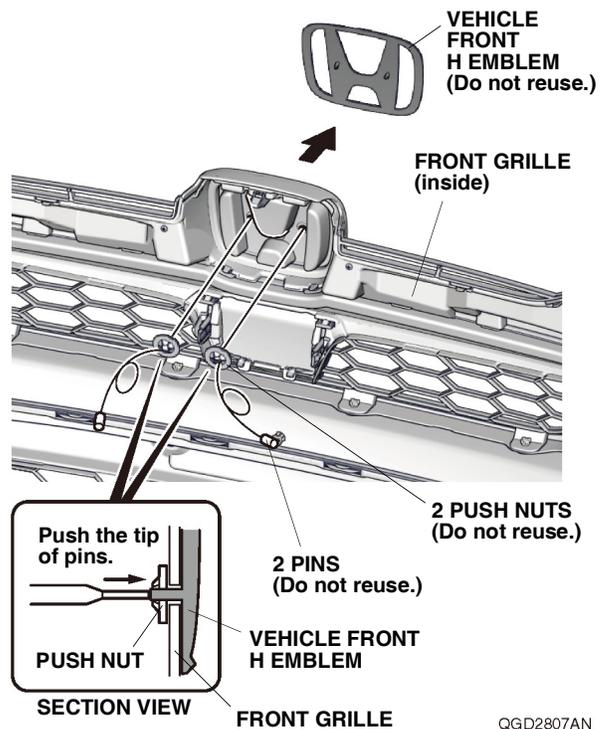


QGD2807AN

14. Using an alcohol wipe, thoroughly clean the front grille where the front H emblem will attach.

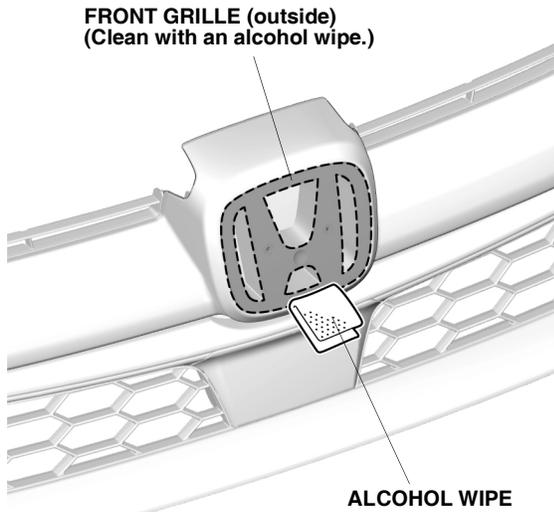

QJ01218AU


15. Remove the adhesive backings from the front H emblem. Install the front H emblem to the front grille as shown.
NOTE: Check the orientation of the push nut.

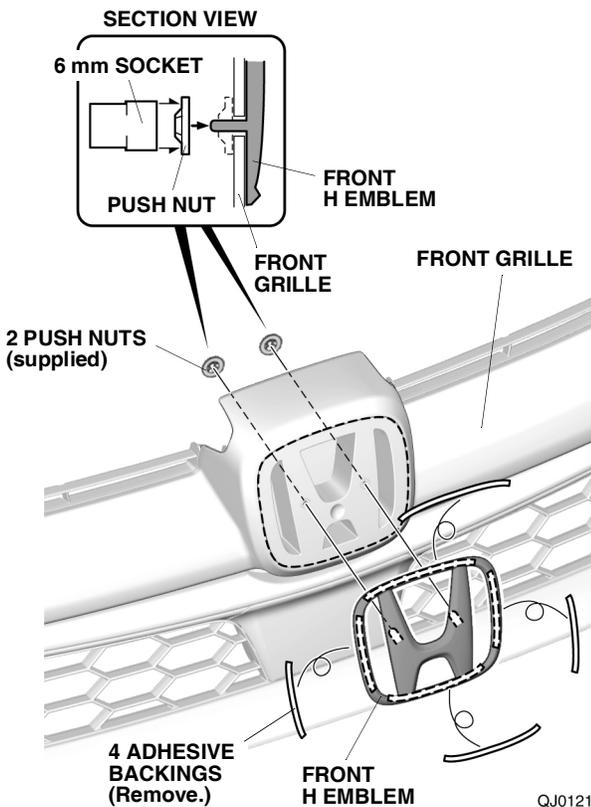

QJ01219AU


16. Using the palm of your hand, firmly press the front H emblem against the front grille.

17. Replace the six clips.

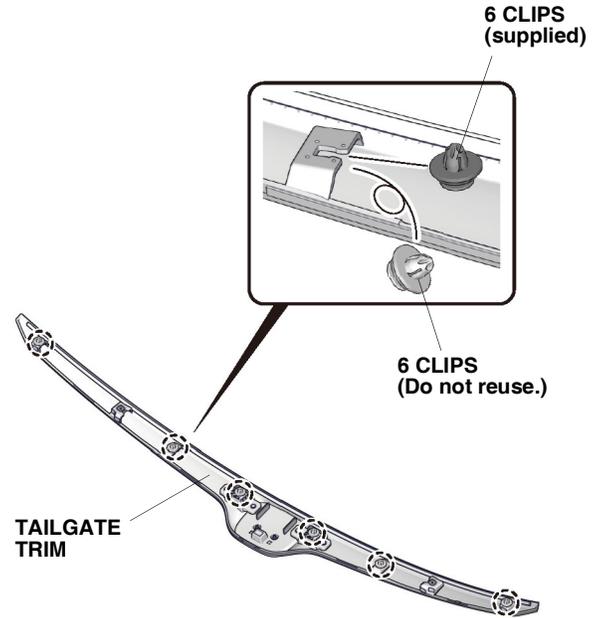


QGD2809AN

18. Remove the vehicle rear H emblem from the tailgate trim.

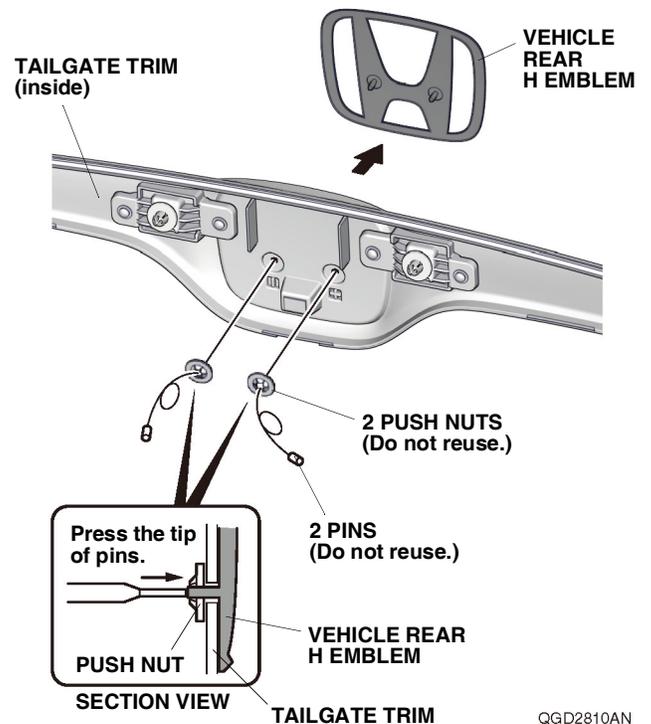

QGD2810AN


19. Using an alcohol wipe, thoroughly clean the tailgate trim where the rear H emblem will attach.

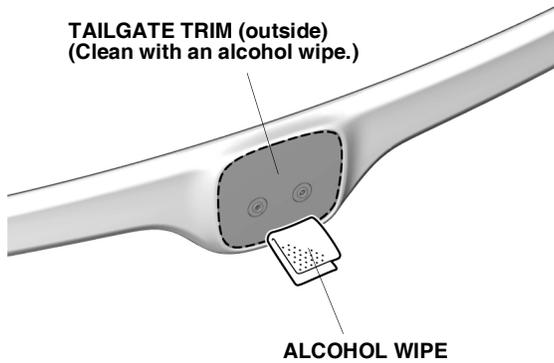

QJ01220AU

20. Remove the adhesive backings from the rear H emblem. Install the rear H emblem to the tailgate trim as shown.


NOTE: Check the orientation of the push nut.

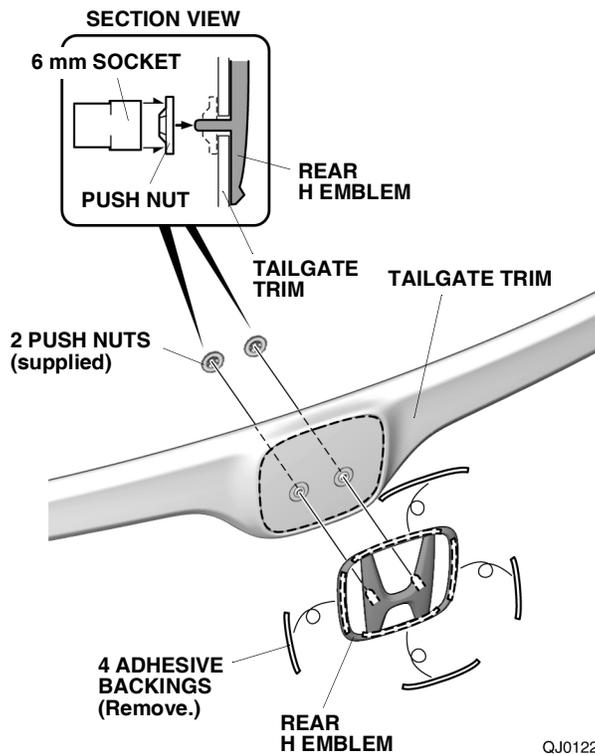

QJ01221AU

21. Using the palm of your hand, firmly press the rear H emblem against the tailgate trim.

22. Remove the position film from the CR-V emblem, then remove the CR-V emblem from the guide form.

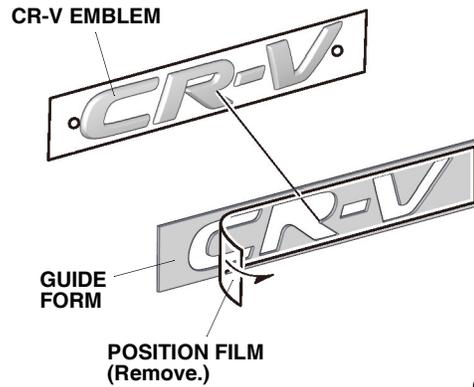


QGD2812AN

23. Install the guide form to the vehicle CR-V emblem on the tailgate.




QGD2813AN

24. Attach the masking tape along the guide form as shown.

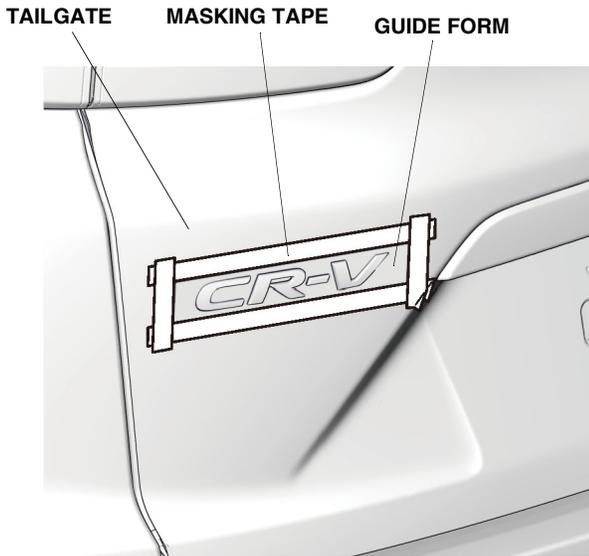

QGD2814AN

25. Remove the guide form from the tailgate.

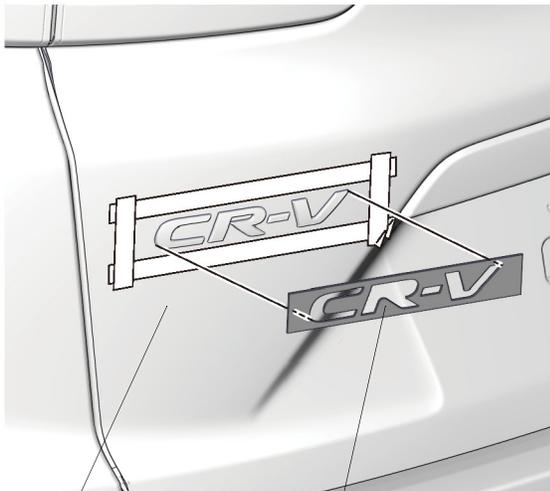



TAILGATE

GUIDE FORM

QGD2815AN

26. Using a piece of string, remove the vehicle CR-V emblem by cutting along the outer edges as shown.
NOTE:


- Do not damage the vehicle body when removing the vehicle CR-V emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.

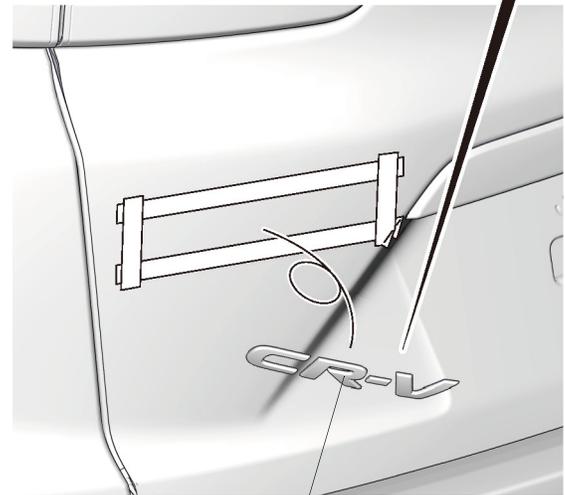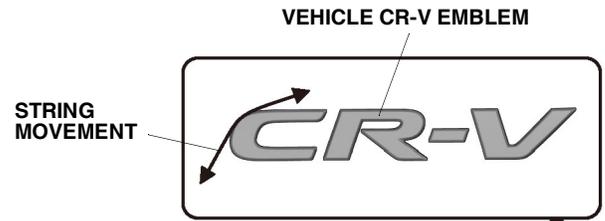

QGD2816AN


VEHICLE
CR-V EMBLEM
(Do not reuse.)

27. Install the CR-V emblem in the guide form, and temporarily secure it with masking tape.

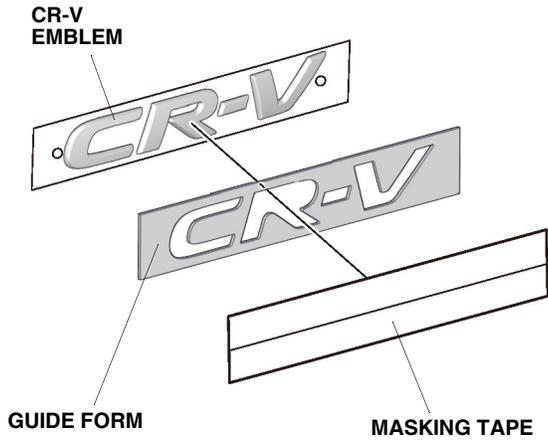


QGD2817AN


28. Using an alcohol wipe, thoroughly clean the tailgate where the CR-V emblem will attach.

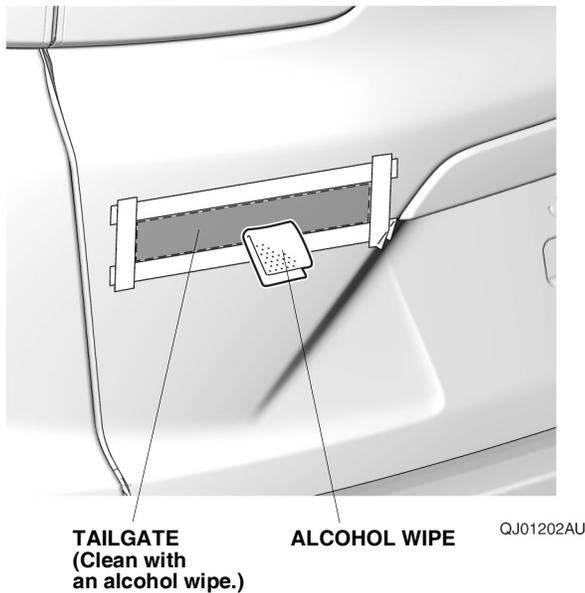

29. Remove the adhesive backing from the CR-V emblem. Line up the guide form with the masking tape, and attach the CR-V emblem to the tailgate.

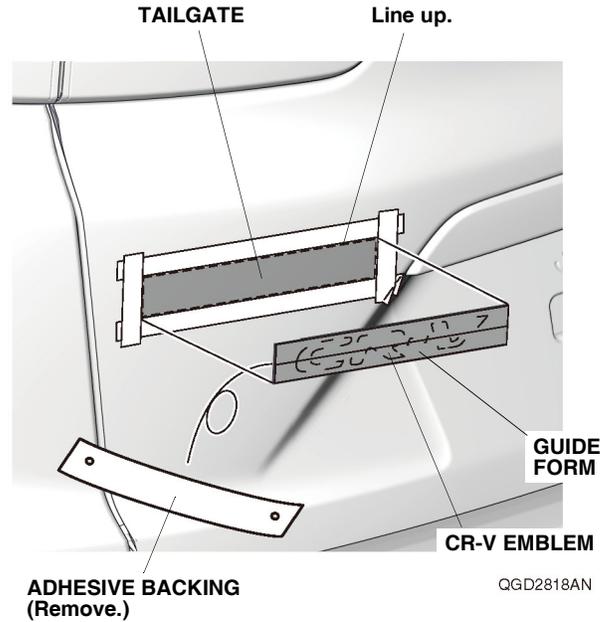


30. Remove the guide form and using the palm of your hand, firmly press the CR-V emblem against the tailgate.

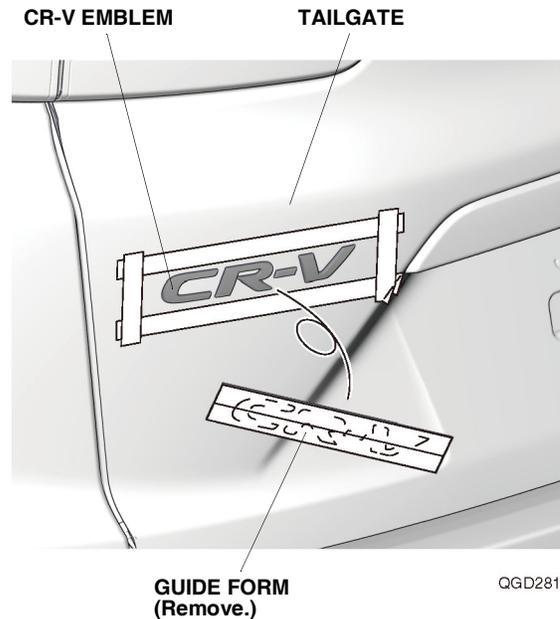

31. Remove the masking tape from the tailgate.



If the vehicle is equipped with the vehicle AWD emblem, continue with step 32; if not, go to step 38.

32. Attach the masking tape along the vehicle AWD emblem as shown.

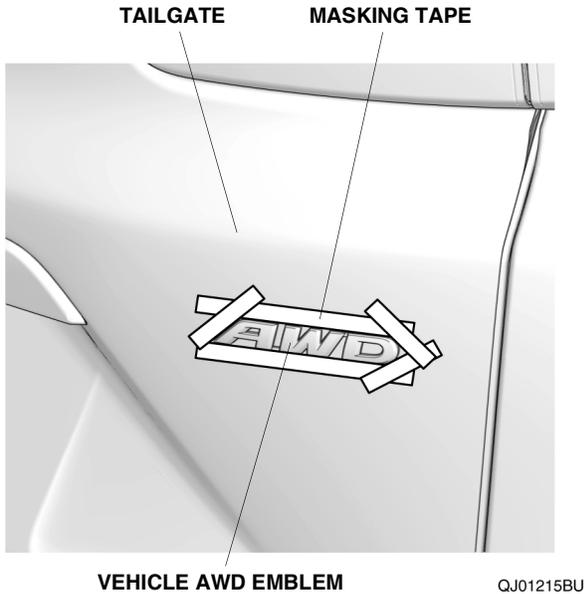


33. Using a piece of string, remove the vehicle AWD emblem by cutting along the outer edges as shown. NOTE:

- Do not damage the vehicle body when removing the vehicle AWD emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.

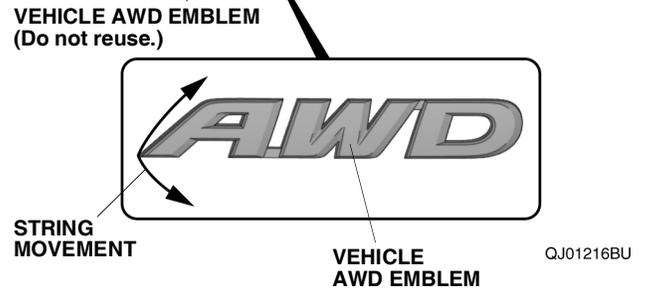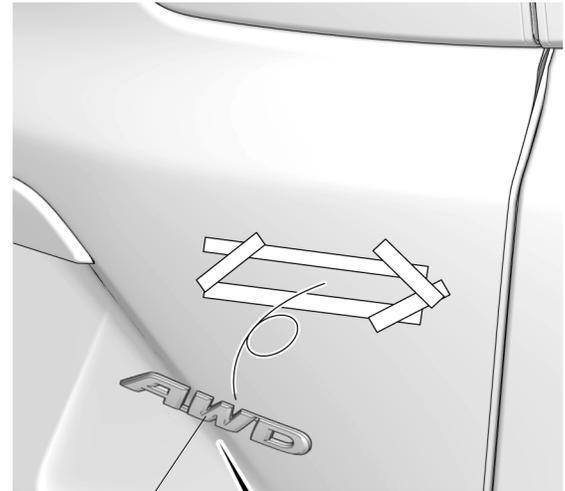

34. Using an alcohol wipe, thoroughly clean the tailgate where the AWD emblem will attach.

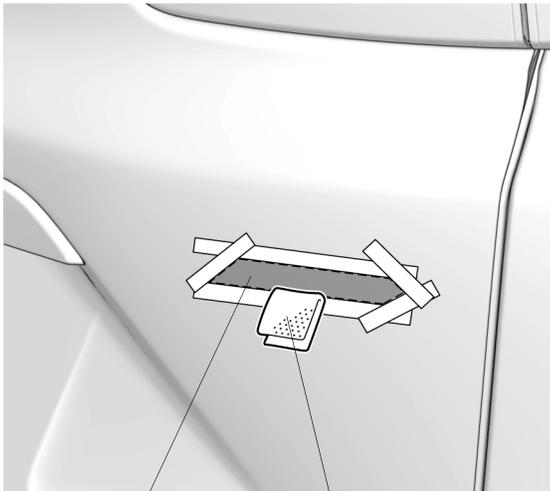


TAILGATE
(Clean with
an alcohol wipe.)

ALCOHOL WIPE

QJ01203CU

35. Remove the adhesive backing from the AWD emblem. Line up the AWD emblem with the masking tape, and attach the AWD emblem to the tailgate.

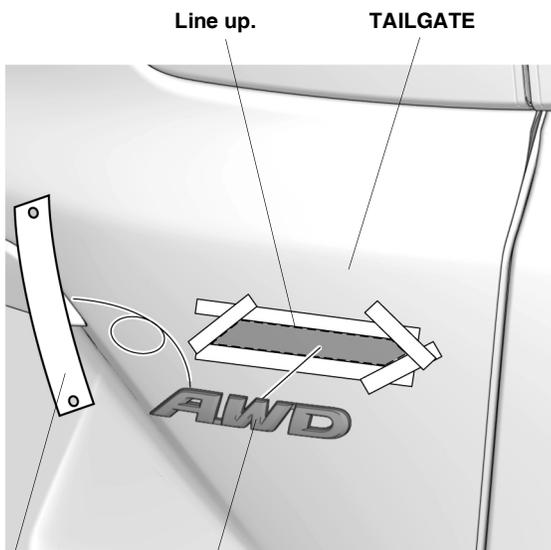

Line up.

TAILGATE

**ADHESIVE
BACKING**
(Remove.)

AWD EMBLEM

QJ01217BU

36. Using the palm of your hand, firmly press the AWD emblem against the tailgate.
37. Remove the masking tape from the tailgate.

38. With the help of an assistant, install the front bumper.
39. Check that all wire harnesses are routed properly and all connectors are plugged in.
40. Install all removed parts.
41. Connect the negative cable to the battery.
42. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
43. Set the clock on vehicles without navigation.
44. If necessary, restore the systems back to normal operation as described in the service information.