



INSTALLATION INSTRUCTIONS

Accessory
FRONT GRILLE TRIMS
P/N 08F21-TLA-100B

Application
2021 CR-V
2021 CR-V HYBRID

Publications No.
VERSION 1
Issue Date
OCT 2020

PARTS LIST

Right front grille trim



Left front grille trim




TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- 10 mm Open end wrench
- Blanket
- Masking tape
- Shop towel
- Flat-tip screwdriver

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Front Grille Trims on the Vehicle

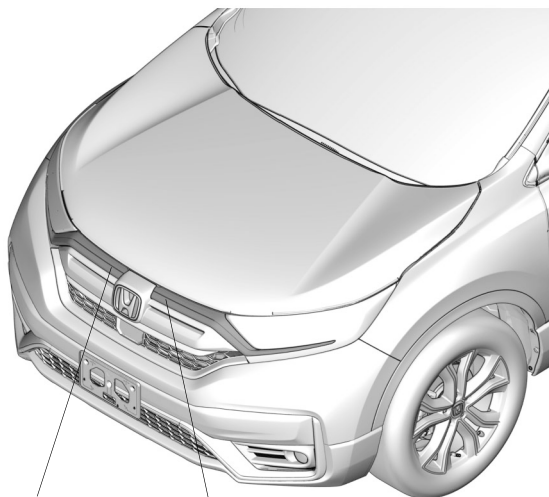

RIGHT FRONT GRILLE TRIM

LEFT FRONT GRILLE TRIM



QJ11605AB

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.
2. Wrap a shop towel around the hood latch lever.

HOOD LATCH LEVER
(Wrap with a shop towel.)

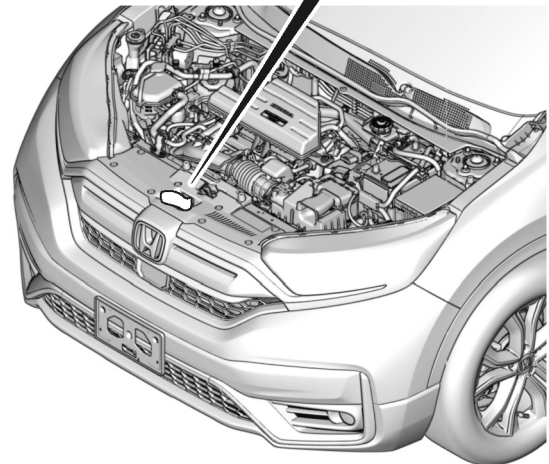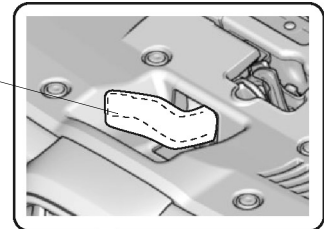


QHD2607AA


3. Remove the front bulkhead cover.

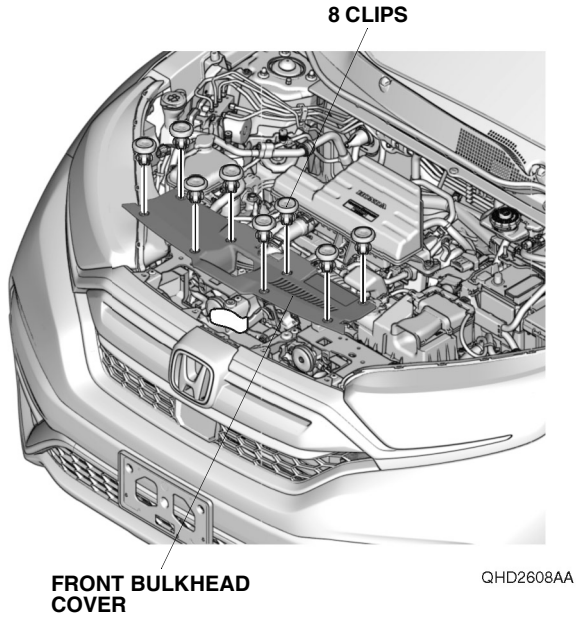

4. Remove the three self-tapping screws, one clip, and three clips (short) from the left front wheel arch protector as shown.

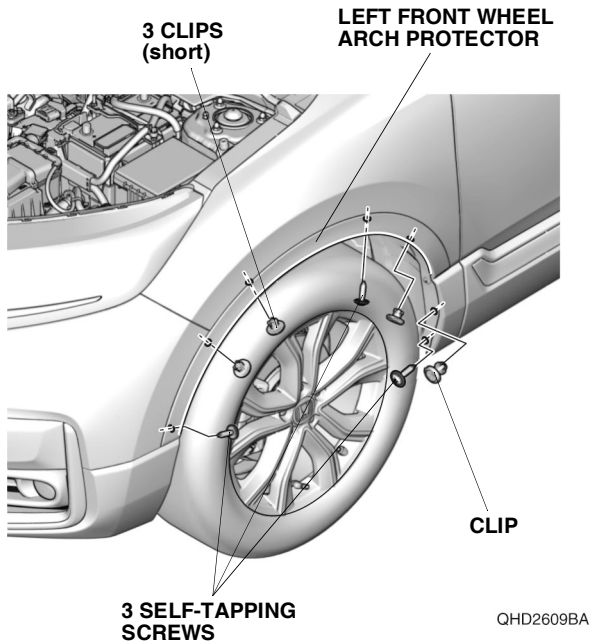


5. Remove the left front wheel arch protector as shown.

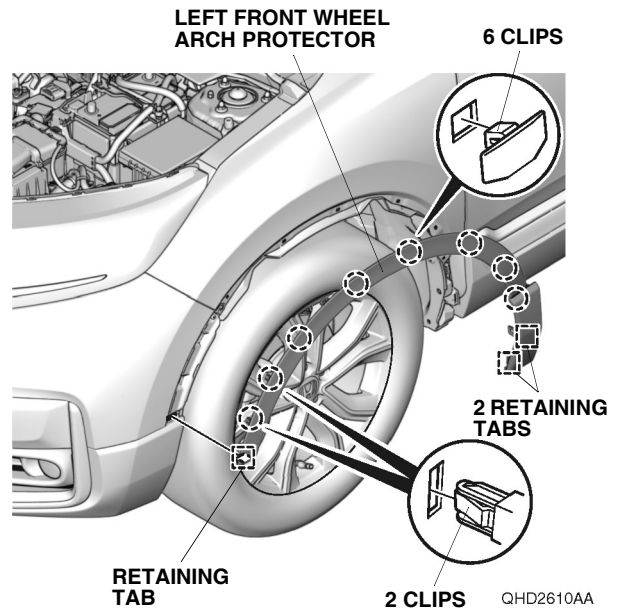


6. Repeat steps 4 and 5 on the right side of the vehicle.
7. Remove the front bumper:

- Apply masking tape on each side as shown.

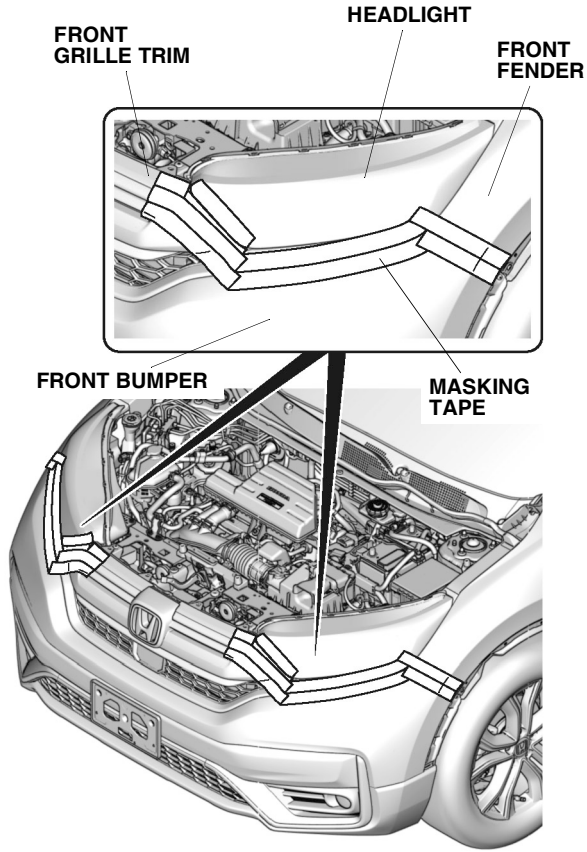


QJ20601AB

- Remove the two self-tapping screws and 10 clips as shown.

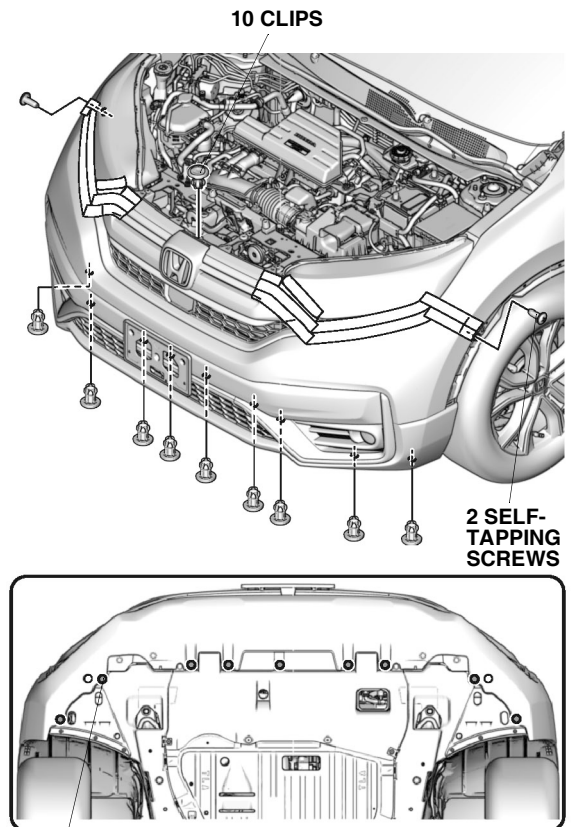


QJ20602AB

- With the help of an assistant, release the seven retaining tabs on each side.

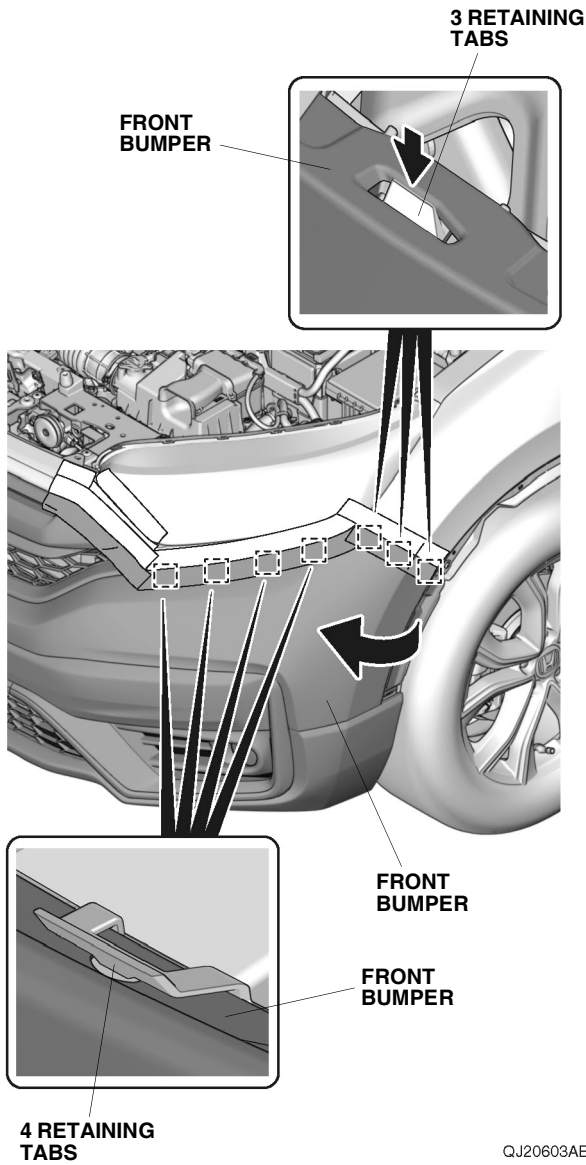


- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

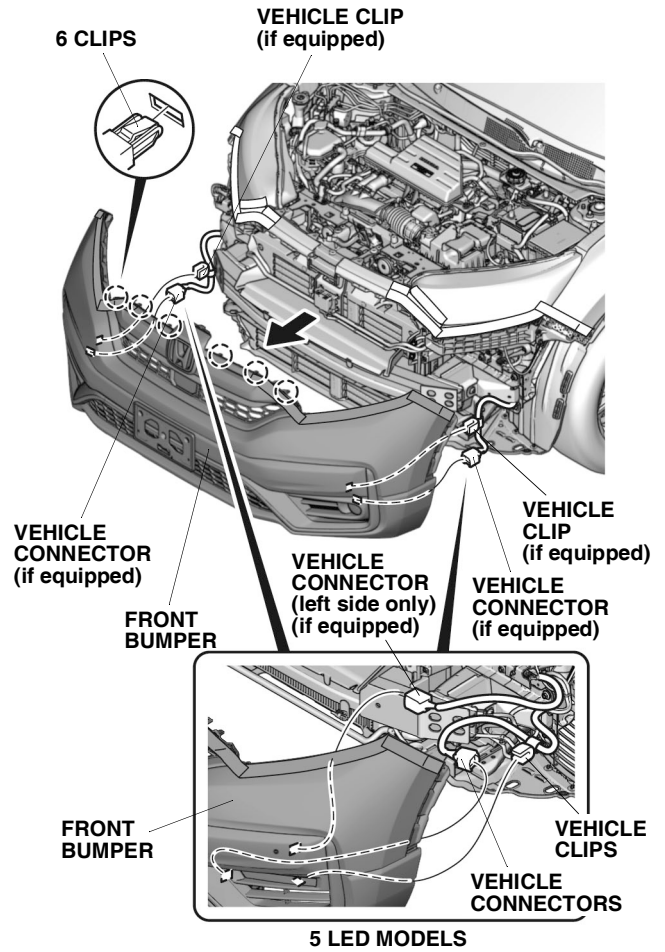

8. Remove the left front grille trim as shown.

MASKING TAPE

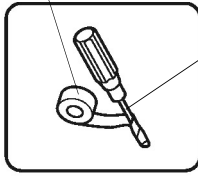


FLAT-TIP SCREWDRIVER

OPPOSITE SIDE VIEW


LEFT FRONT GRILLE TRIM

FLAT-TIP SCREWDRIVER

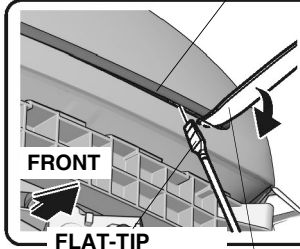

FRONT

FLAT-TIP SCREWDRIVER

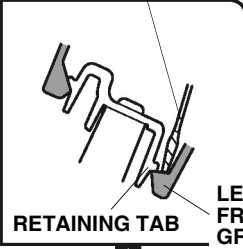

RETAINING TAB


LEFT FRONT GRILLE TRIM

LEFT FRONT GRILLE TRIM (Do not reuse.)

PLASTIC TRIM TOOL


SECTION VIEW

LEFT HEADLIGHT

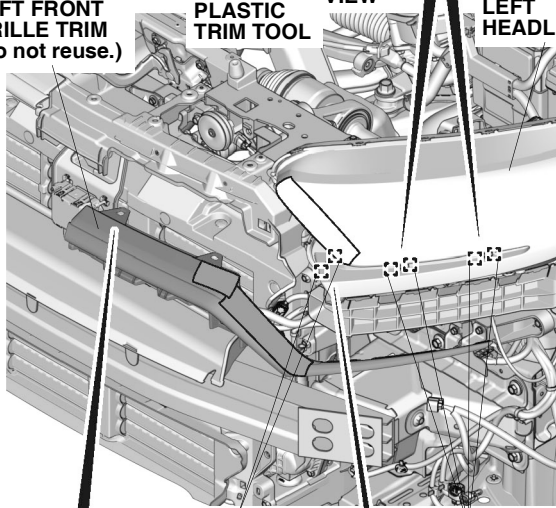


2 RETAINING TABS

4 RETAINING TABS

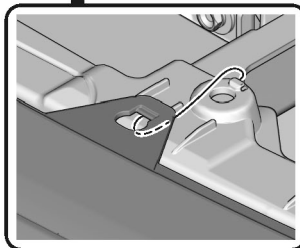

OPPOSITE SIDE VIEW

SECTION VIEW

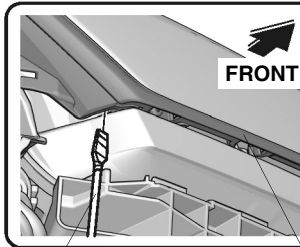

FRONT

FLAT-TIP SCREWDRIVER

LEFT FRONT GRILLE TRIM


RETAINING TAB

FLAT-TIP SCREWDRIVER


QJ20605BB

9. Install the new left front grille trim.

NEW LEFT FRONT GRILLE TRIM

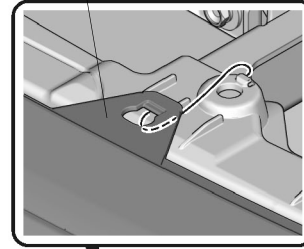

LEFT HEADLIGHT

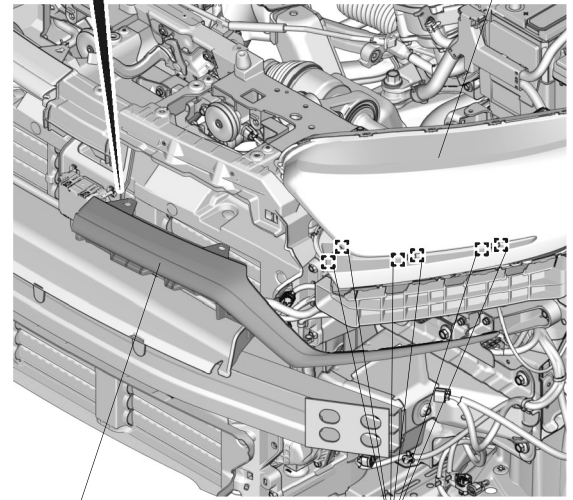

NEW LEFT FRONT GRILLE TRIM

6 RETAINING TABS

QJ20606AB

10. Repeat steps 8 and 9 on the right side of vehicle.
11. Check that all wire harnesses are routed properly and all connectors are plugged in.
12. Install all removed parts.
13. Connect the negative cable to the battery.
14. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
15. Set the clock on vehicles without navigation.
16. If necessary, restore the systems back to normal operation as described in the service information.