
Part Number: H-VFR-8-14(E)

**Description:** Gunfighter & Lady Saddle

Fitment: 2014-2016 Honda VFR 800 Interceptor


Revision: 1



- 1. Remove your stock seat. Refer to your owner's manual if necessary.
- 2. To install the seat without heater unit. Slip the front tab of your saddle under the front seat mount at the rear of the gas tank, align the rear Corbin bracket to the stock locking mechanism and push down on the saddle until you hear the lock click.

## **Heater Installation:**

- 1. If you ordered the heated model, we also included a wiring harness and fuse adapter that hooks into your stock fuse box.
- 2. Start by popping up the three quick release pins on the battery cover (*Figure 1*), using a flat head screwdriver. Remove cover.
- 3. Under the cover, locate the fuse box and remove the 10 amp fuse from the 10A ACC position (Figure 2) and insert the fuse into the Corbin adapter (Figure 3).
- 4. Insert the adapter into the fuse box into the space previously occupied by the 10A ACC fuse (Figure 4).
- 5. The fuse box cover won't close completely because of the fuse adapter, so close the fuse box cover loosely, run adapter through the hole in the provided rain cover, then cover the entire fuse box (*Figure 5*).

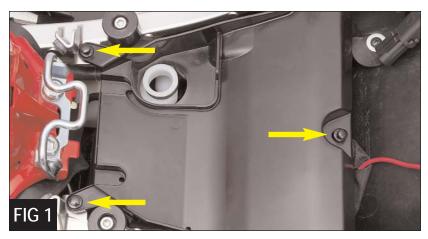

Corbin





- 6. Connect the fuse adapter to the wiring harness (*Figure 6*).
- 7. Connect the ground wire to the negative battery terminal, using a 10mm socket wrench (*Figure 7*).
- 8. Put battery cover back into place.
- 9. Plug wire harness into the seat and test. To do this, just plug the harness into the seat, turn on your ignition switch and flip the switch on the saddle. If the switch illuminates, the saddle heater is working.
- 10. Proceed with saddle mounting as outlined above.

Enjoy your new saddle!

**NOTE:** The heater is controlled by the switch along the side the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.









Questions? Give us a holler... 800-223-4332 tech@corbin.com